## 3. System remote controller

## 3-3. Schedule timer PAC-YT34STA



- The weekly schedule of up to 50 groups/50 units can be controlled with one schedule timer.
- The weekly schedule of up to ten patterns (no setting + nine patterns) is available for setting.
- "ON/OFF", "Operation Prohibit", "COOL/HEAT" and "Set Temperature" can be scheduled with up to 16 settings in one pattern.
- It can be connected to the central control transmission line or to the indoor/outdoor transmission line without the power supply unit. It is non-polar 2-wire.
- It can be interlocked with a building management system using the external input/output managing function.
- An error unit address and error code appear on the display in case of malfunction happening.

Functions		$\Box$ : Each unit $\bigcirc$ : Each group $\triangle$ : Each floor $\otimes$ : Collective	<ul> <li>p          <ul> <li>Each block</li> <li>X: Not available</li> </ul> </li> </ul>	
Item		Details	Operations	Display
Unit control		50 units/50 groups (Maximum 16 units connected in one group)	0	0
Schedule control		One week	0	0
Operation	ON/OFF	ON/OFF operations can be carried out collectively or for each group.	0	0
	Timer reset	The timer setting details can be disabled collectively	0	—
Schedule function	Setting details	ON/OFF COOL/HEAT/AUTO Room temperature setting (19∞C to 28∞C) Operation prohibit (ON/OFF, operation mode, setting temperature)	0	
	Number of settings	Number of setting patterns: Ten (no setting + nine patterns) (Operation for a week can be set by selecting one of ten patterns for each day.) Number of operations: Up to 16 operations can be set in one pattern	0	
	Time setting unit	The item can be set in five-minute units	0	—
Display		Current time and day	_	0
		Error state	—	0
		Unit operation state	—	×
External input (Timer connection, emergency stop input, etc.)		The following can be input with the level signals or pulse signals. Level signal: "Emergency stop input" or "Collective ON/OFF" Pulse signal: "Collective ON/OFF" or "Local remote controller prohibit/permit" One input can be selected from those above.	0	_
External output (Error output, operation output)		"ON/OFF" and "error/normal" are output with the level signal. * The optional output cable is required.	0	
Connection position		Indoor/outdoor transmission line: Connectable Central system transmission line: Connectable (Optional power supply unit (PAC-SC50KUA) is needed.)		

A MITSUBISHI ELECTRIC CORPORATION

## 3-3. Schedule timer PAC-YT34STA

System example



## External dimension

