


Operation Buttons

- | | |
|----|---|
| 1 | This sets the room temperature. The temperature setting can be performed in 1°C intervals. Setting range: Cooling 19°C to 30°C - Heating 17°C to 28°C |
| 2 | This switches between continuous or timer operation. |
| 3 | Press this button to switch between cooling, dry (dehumidify), automatic and heating modes |
| 4 | This switches the louvre motion ON and OFF |
| 5 | This is the Lossnay interlock button |
| 6 | This resets the filter service indication display |
| 7 | This adjusts the angle of the air flow direction |
| 8 | This switches between the operation and stop modes each time it is pressed, the lamp on this button lights during operation |
| 9 | This sets the ventilation fan speed |
| 10 | This sets the current time, start time and stop time |

Display

- | | |
|----|---|
| 11 | This indicates when the continuous operation and time operation modes are set. It also displays the time for the timer operation at the same time as when it is set |
| 12 | This indicates the operation mode |
| 13 | The standby symbol is only displayed from the time the heating operation starts until the heated air begins to blow |
| 14 | This indicates when the defrost operation is performed |
| 15 | This indicates when a malfunction has occurred in the unit which should be checked |
| 16 | This displays the selected temperature |
| 17 | This lamp lights when electricity is supplied to the unit |
| 18 | This lamp lights when the filter needs to be cleaned |
| 19 | This lamp lights during operation, goes off when the unit stops and flashes when a malfunction occurs |
| 20 | The temperature of the suction air is displayed during operation. The display range is 8° to 39°C. The display flashes 8°C when the actual temperature is less than 8°C and flashes 39°C when the actual temperature is greater than 39°C |
| 21 | The selected fan speed is displayed |
| 22 | This displays the air direction |
| 23 | The current time, start time and stop time can be displayed in ten second intervals by pressing the time setting button (10). The start time or stop time is always displayed during the timer operation |

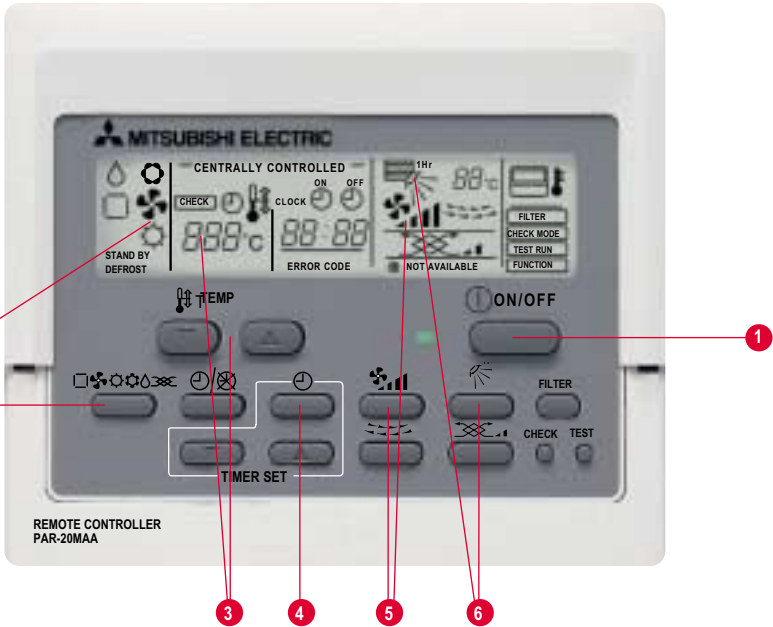

IF YOU ARE TOO
HOT PRESS



IF YOU ARE TOO
COLD PRESS



Operation Buttons

1	TURN UNIT ON/OFF
2	MODE KEY: <ul style="list-style-type: none">Fan only - DO NOT USEHeating (Ideal Temp 20°C)Cooling (Ideal Temp 23°C)Dry Mode - DO NOT USEAuto (Ideal Temp 21°C)
3	SET IDEAL TEMPERATURE: Heating 20°C Cooling 23°C
4	TIMER - already fixed (do not adjust)
5	FAN SPEED - Leave in low speed
6	CASSETTE UNITS ONLY - Fix swing position