


PAR-F27MEA

User Guide

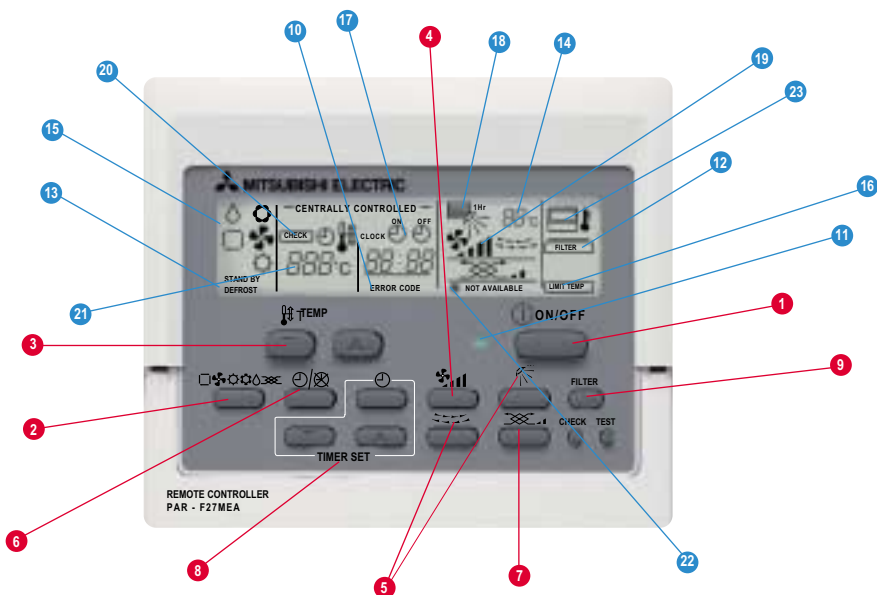

Operation Buttons

- 1 ON/OFF - switches between run and stop. The light flashes when a malfunction occurs
- 2 OPERATION MODE SWITCHING - Switches between Cool / Dry / Auto / Fan / Heat. Operation modes vary depending on the air conditioner unit. Auto mode is for the City Multi R2 and WR2 series only
- 3 TEMPERATURE SETTING - Sets the room temperature:
Range of temperature setting: Cool/Dry: 19°C - 30°C
Heat: 17°C - 28°C
Auto: 19°C - 28°C
- 4 FAN SPEED SETTING - Models with 4 air flow speed settings: Hi/Mid-2/mid-1/Low. Models with 3 air flow speed settings: Hi/Mid/Low. Models with 2 air flow speed settings: Hi/Low
- 5 AIR FLOW DIRECTION SETTING -
Air flow direction angles 100% - 80% - 60% - 40%, Swing, Louver ON/OFF. Air flow direction setting buttons vary depending on the model
- 6 TIMER SELECTION BUTTON - Switches between:
one day timer: ON/OFF setting of one time on one day can be applied,
Daily timer: ON/OFF setting by the One day timer can be repeated for everyday, Auto OFF timer: OFF timer can be set in a range from 30 minutes to 4 hours
*Setting of auto OFF timer automatically activates OFF timer at the next operation. This function can be utilised to prevent the negligence of OFF setting
- 7 This is the Lossnay interlock button
- 8 This sets the current time, timer start and stop times
- 9 This resets the Filter service indication display

Display

- 10 ERROR - When an error is currently occurring on an air conditioner unit, the affected unit and the error code are displayed
- 11 This lamp lights during operation, goes off when the unit stops and flashes when a malfunction occurs
- 12 FILTER DISPLAY - indicates that it is time to clean the filter
- 13 DEFROST DISPLAY - this indicates when the defrost operation is performed
- 14 INDOOR UNIT INTAKE TEMPERATURE - Measures the intake temperature of the indoor unit when the indoor unit is operating
- 15 OPERATION MODE - displays the operation mode
- 16 LIMIT TEMP DISPLAY - displayed when the set temperature range is controlled by remote controller function selection
- 17 TIMERS - displays the current time and timer set times
- 18 This displays the air direction
- 19 The selected fan speed is displayed
- 20 This indicates when a malfunction has occurred in the unit which should be checked!
- 21 This displays the selected temperature
- 22 This lamp lights when electricity is supplied to the unit
- 23 SENSOR DISPLAY - displayed when the remote controller sensor is used