


# PAR-F27MEA

## User Guide

### CONTROLS

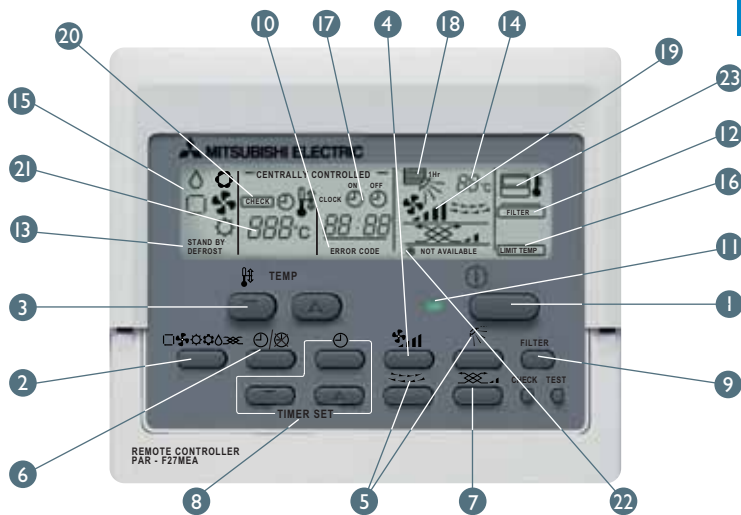

### Operation Buttons

- |   |   |
|---|---|
| 1 | <b>ON/OFF</b> - Switches between run and stop. The light flashes when a malfunction occurs.   |
| 2 | <b>OPERATION MODE SWITCHING</b> - Switches between Cool / Dry / Auto / Fan / Heat. Operation modes vary depending on the air conditioning system. Auto mode is for the City Multi R2 and WR2 series only.   |
| 3 | <b>TEMPERATURE SETTING</b> - Sets the room temperature: Range of temperature setting: Cool / Dry: 19°C-30°C / Heat: 17°C-28°C / Auto: 19°C-28°C   |
| 4 | <b>FAN SPEED SETTING</b> - Models with 4 airflow speed settings: Hi / Mid-2 / Mid-1 / Low. Models with 3 airflow speed settings: Hi / Mid / Low. Models with 2 airflow speed settings: Hi / Low.  |
| 5 | <b>AIR FLOW DIRECTION SETTING</b> - Air flow direction angles 100% - 80% - 60% - 40%, Swing, Louver ON/OFF. Air flow direction setting buttons vary depending on the model.   |
| 6 | <b>TIMER SELECTION BUTTON</b> - Switches between: One day timer: ON/OFF setting of one time on a single day can be applied. Daily timer: ON/OFF setting by the One day timer can be repeated everyday. Auto OFF timer: OFF timer can be set in a range from 30 minutes to 4 hours. Setting of Auto OFF timer automatically activates OFF timer at the next operation. |
| 7 | This is the Lossnay interlock button.   |
| 8 | This sets the current time, timer start and stop times.   |
| 9 | This resets the Filter service indication display.  |

### Display

- |    |   |
|----|---|
| 10 | <b>ERROR</b> - When an error is occurring on an air conditioner unit, the affected unit and the error code are displayed.     |
| 11 | This lamp lights during operation, goes off when the unit stops and flashes when a malfunction occurs.                        |
| 12 | <b>FILTER DISPLAY</b> - Indicates that it is time to clean the filter.  |
| 13 | <b>DEFROST DISPLAY</b> - This indicates when the defrost operation is performed.  |
| 14 | <b>INDOOR UNIT INTAKE TEMPERATURE</b> - Measures the intake temperature of the indoor unit when the indoor unit is operating. |
| 15 | <b>OPERATION MODE</b> - Displays the operation mode.  |
| 16 | <b>LIMIT TEMP DISPLAY</b> - Displayed when the set temperature range is restricted.   |
| 17 | <b>TIMERS</b> - Displays the current time and timer set times.  |
| 18 | This displays the air direction.  |
| 19 | The selected fan speed is displayed.  |
| 20 | This indicates when a malfunction has occurred.   |
| 21 | This displays the selected temperature.   |
| 22 | This lamp lights when electricity is supplied to the unit.  |
| 23 | <b>SENSOR DISPLAY</b> - Displayed when the remote controller sensor is used.  |