

# PAC-SE5 | CRA

## User Guide

### CONTROLS



IF YOU ARE TOO  
HOT PRESS



IF YOU ARE TOO  
COLD PRESS



### Operation Buttons

- |   |   |
|---|---|
| 1 | <b>ON/OFF</b> - Switches between run and stop.<br>The light flashes when a malfunction occurs.  |
| 2 | <b>TEMPERATURE SETTING</b> -<br>Sets the room temperature: Range of temperature setting:<br>Cool/Dry: 19°C-30°C / Heat: 17°C-28°C / Auto: 19°C-28°C |
| 3 | <b>FAN SPEED SETTING</b> -<br>Models with 4 airflow speed settings: Hi / Mid-2 / Mid-1 / Low<br>Models with 2 airflow speed settings: Hi / Low      |

### Display

- |   |  |
|---|--|
| 4 | <b>OPERATION MODE</b> - Displays the operation status between Cool / Dry / Auto / Fan / Heat. Operation modes vary depending on the air conditioning system, Auto mode is available with the City Multi R2 and VWR2 series only. |
| 5 | <b>POWER DISPLAY</b> -<br>Displayed while the remote control is powered on.  |
| 6 | <b>CHECK</b> - Displayed together with the address of the malfunctioning unit (3 digits) and an error code (4 digits).   |
| 7 | Displays set temperature.  |