


2-3. Simple MA remote controller [PAC-YT52CRA]

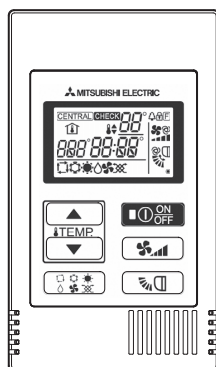

■ Functions


□ : Each unit ○ : Each group ■ : Each block
△ : Each floor ⊙ : Collective × : Not available

Item	Description	Operations	Display
ON/OFF	Changes between ON and OFF.	○	○
Operation mode switching *1	Select from COOL, DRYING, FAN, AUTO, and HEAT.	○	○
Room temp. Setting *1	The temperature can be set within the following range. Cool/Drying: 19°C - 35°C/67°F - 95°F Heat: 5°C - 28°C/40°F - 83°F Auto (single set point): 19°C - 28°C/67°F - 83°F Auto (dual set points) [Cool] Same as the set temp. range for Cool mode. [Heat] Same as the set temp. range for Heat mode. * Set temperature range varies depending on the model.	○	○
Fan speed setting	Changes the fan speed. *The settable fan speed varies depending on the indoor unit model to be connected.	○	○
Vane setting	Switches the vane directions. *The settable vane direction varies depending on the indoor unit model to be connected.	○	○
Ventilation equipment control	When the CITY MULTI indoor unit is connected, interlocked setting of the CITY MULTI LOSSNAY unit is possible. When the Mr. SLIM indoor unit (A-control) is connected, interlocked operation of the microcomputer-type LOSSNAY unit is possible.	○	○
Backlight	Pressing the button lights up a backlight. The light automatically turns off after a certain period of time. (The brightness settings can be selected from Bright, Dark, and Light off.)	○	○
Error information	Displays the current error status with the address. *The address may not be displayed depending on the error status.	—	○
Allows/disallows local operation	By setting a centralized controller, the following local operations are prohibited: ON/OFF; operation mode; preset temperature; *The CENTRAL icon appears while the local operations are prohibited.	×	○
Operation lock	Locks all buttons.	○	○
Temperature range restriction	The preset temperature range can be restricted for each operation mode (COOL/HEAT/AUTO).	○	○
Room temperature detection	The temperature sensor is built-in on the remote controller.	—	—
Various settings	The following settings can be made by setting the dip switches. • Remote controller Main/Sub setting • Temperature display unit setting (Celsius/Fahrenheit) • Cooling/heating display in AUTO mode • Indoor temperature display	—	—

- Control: ON/OFF, room temperature, vane, fan speed, and operation mode
- The only wiring required is cross-over wiring based on two-wire signal lines.
- Room temperature sensors are built-in.
- Set temperature range limit
- Can operate all types of indoor units
- * : Since this controller has limited functions, it should always be used in conjunction with standard controller or centralized controller.
- Backlit LCD
- Flat back

■ System example

*1 AUTO mode is settable only when those functions are available on the indoor unit.

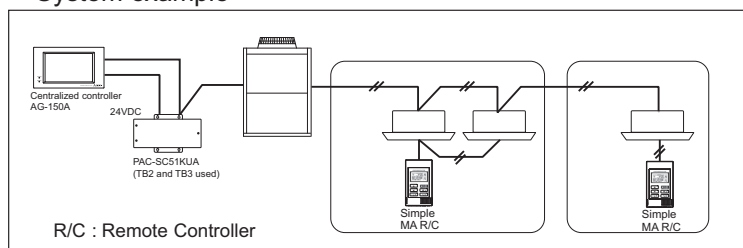

■ External dimension

