

# TECHNICAL & SERVICE MANUAL

<Outdoor unit>  
[Model Name]

PUMY-P200YKM

[Service Ref.]

**PUMY-P200YKM**


Note:

- This service manual describes technical data of the outdoor units only.

Salt proof model

PUMY-P200YKM-BS

**PUMY-P200YKM-BS**

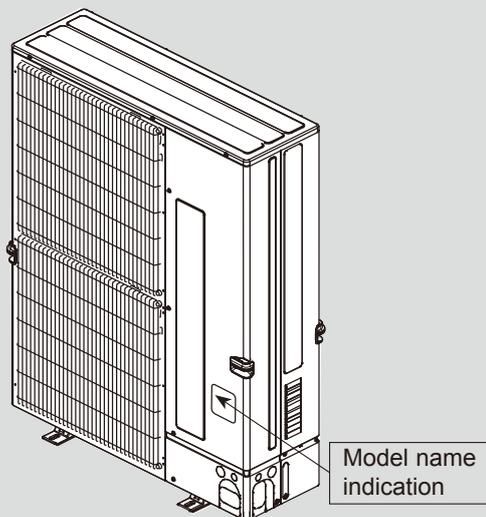

OUTDOOR UNIT

## CONTENTS

1. SAFETY PRECAUTION.....	2
2. OVERVIEW OF UNITS.....	5
3. SPECIFICATIONS.....	7
4. DATA.....	8
5. OUTLINES AND DIMENSIONS.....	15
6. WIRING DIAGRAM.....	16
7. NECESSARY CONDITIONS FOR SYSTEM CONSTRUCTION.....	17
8. TROUBLESHOOTING.....	27
9. ELECTRICAL WIRING.....	111
10. REFRIGERANT PIPING TASKS.....	115
11. DISASSEMBLY PROCEDURE.....	119

**PARTS CATALOG (OCB575)**

**1-1. CAUTIONS RELATED TO NEW REFRIGERANT**

Cautions for units utilizing refrigerant R410A

**Use new refrigerant pipes.**

Avoid using thin pipes.

**Make sure that the inside and outside of refrigerant piping is clean and it has no contaminants such as sulfur, oxides, dirt, shaving particles, etc, which are hazard to refrigerant cycle. In addition, use pipes with specified thickness.**

Contamination inside refrigerant piping can cause deterioration of refrigerant oil, etc.

**Store the piping indoors, and both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)**

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

**The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.**

If large amount of mineral oil enters, that can cause deterioration of refrigerant oil, etc.

**Charge refrigerant from liquid phase of gas cylinder.**

If the refrigerant is charged from gas phase, composition change may occur in refrigerant and the efficiency will be lowered.

**Do not use refrigerant other than R410A.**

If other refrigerant (R22, etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil, etc.

**Use a vacuum pump with a reverse flow check valve.**

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil, etc.

**Use the following tools specifically designed for use with R410A refrigerant.**

The following tools are necessary to use R410A refrigerant.

Tools for R410A	
Gauge manifold	Flare tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adaptor
Torque wrench	Electronic refrigerant charging scale

**Handle tools with care.**

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

**Do not use a charging cylinder.**

If a charging cylinder is used, the composition of refrigerant will change and the efficiency will be lowered.

**Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.**

**Use the specified refrigerant only.**

**Never use any refrigerant other than that specified.**

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.


### [1] Cautions for service

- (1) Perform service after recovering the refrigerant left in unit completely.
- (2) Do not release refrigerant in the air.
- (3) After completing service, charge the cycle with specified amount of refrigerant.
- (4) When performing service, install a filter drier simultaneously.  
Be sure to use a filter drier for new refrigerant.

### [2] Additional refrigerant charge

#### When charging directly from cylinder

- Check that cylinder for R410A on the market is a syphon type.
- Charging should be performed with the cylinder of syphon stood vertically. (Refrigerant is charged from liquid phase.)

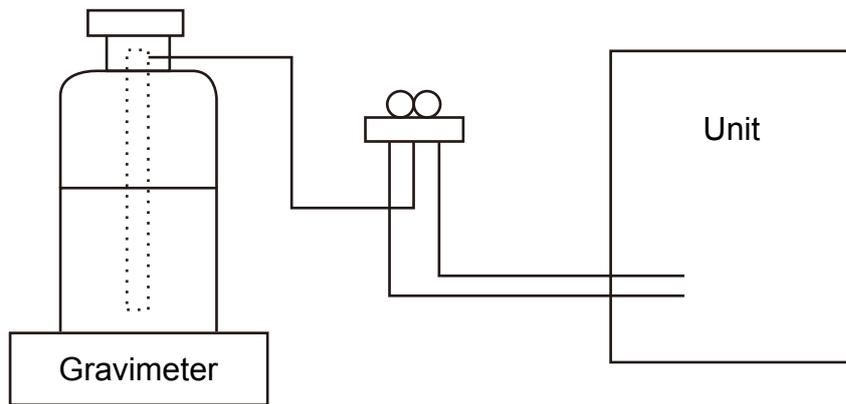

### [3] Service tools

Use the below service tools as exclusive tools for R410A refrigerant.

No.	Tool name	Specifications
①	Gauge manifold	· Only for R410A
		· Use the existing fitting specifications. (UNF1/2)
		· Use high-tension side pressure of 5.3MPa·G or over.
②	Charge hose	· Only for R410A
		· Use pressure performance of 5.09MPa·G or over.
③	Electronic scale	—
④	Gas leak detector	· Use the detector for R134a, R407C or R410A.
⑤	Adaptor for reverse flow check	· Attach on vacuum pump.
⑥	Refrigerant charge base	—
⑦	Refrigerant cylinder	· Only for R410A · Top of cylinder (Pink)
		· Cylinder with syphon
⑧	Refrigerant recovery equipment	—

## 1-2. PRECAUTIONS FOR SALT PROOF TYPE "-BS" MODEL

Although "-BS" model has been designed to be resistant to salt damage, observe the following precautions to maintain the performance of the unit.

1. Avoid installing the unit in a location where it will be exposed directly to seawater or sea breeze.
2. If the cover panel may become covered with salt, be sure to install the unit in a location where the salt will be washed away by rainwater. (If a sunshade is installed, rainwater may not clean the panel.)
3. To ensure that water does not collect in the base of the outdoor unit, make sure that the base is level, not at angle. Water collecting in the base of the outdoor unit could cause rust.
4. If the unit is installed in a coastal area, clean the unit with water regularly to remove any salt build-up.
5. If the unit is damaged during installation or maintenance, be sure to repair it.
6. Be sure to check the condition of the unit regularly.
7. Be sure to install the unit in a location with good drainage.

### Cautions for refrigerant piping work

New refrigerant R410A is adopted for replacement inverter series. Although the refrigerant piping work for R410A is same as for R22, exclusive tools are necessary so as not to mix with different kind of refrigerant. Furthermore as the working pressure of R410A is 1.6 times higher than that of R22, their sizes of flared sections and flare nuts are different.

#### ① Thickness of pipes

Because the working pressure of R410A is higher compared to R22, be sure to use refrigerant piping with thickness shown below. (Never use pipes of 0.7 mm or below.)

Diagram below: Piping diameter and thickness



Nominal dimensions (in)	Outside diameter (mm)	Thickness (mm)	
		R410A	R22
1/4	6.35	0.8	0.8
3/8	9.52	0.8	0.8
1/2	12.70	0.8	0.8
5/8	15.88	1.0	1.0
3/4	19.05	1.0*	1.0
7/8	22.22	1.0*	1.0

\* Use 1/2 H or H pipes.

#### ② Dimensions of flare cutting and flare nut

The component molecules in HFC refrigerant are smaller compared to conventional refrigerants. In addition to that, R410A is a refrigerant, which has higher risk of leakage because its working pressure is higher than that of other refrigerants. Therefore, to enhance airtightness and strength, flare cutting dimension of copper pipe for R410A has been specified separately from the dimensions for other refrigerants as shown below. The dimension B of flare nut for R410A also has partly been changed to increase strength as shown below. Set copper pipe correctly referring to copper pipe flaring dimensions for R410A below. For 1/2 and 5/8 inch pipes, the dimension B changes.

Use torque wrench corresponding to each dimension.

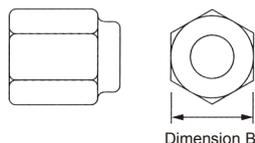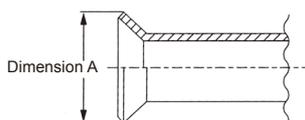

Flare cutting dimensions

Nominal dimensions (in)	Outside diameter (mm)	Dimension A ( $^{+0.4}_{-0.4}$ ) (mm)	
		R410A	R22
1/4	6.35	9.1	9.0
3/8	9.52	13.2	13.0
1/2	12.70	16.6	16.2
5/8	15.88	19.7	19.4
3/4	19.05	—	23.3

Flare nut dimensions

Nominal dimensions (in)	Outside diameter (mm)	Dimension B (mm)	
		R410A	R22
1/4	6.35	17.0	17.0
3/8	9.52	22.0	22.0
1/2	12.70	26.0	24.0
5/8	15.88	29.0	27.0
3/4	19.05	—	36.0

#### ③ Tools for R410A (The following table shows whether conventional tools can be used or not.)

Tools and materials	Use	R410A tools	Can R22 tools be used?	Can R407C tools be used?
Gauge manifold	Air purge, refrigerant charge and operation check	Tool exclusive for R410A	×	×
Charge hose	Gas leak check	Tool exclusive for R410A	×	×
Gas leak detector	Refrigerant recovery	Tool for HFC refrigerant	×	○
Refrigerant recovery equipment	Refrigerant charge	Tool exclusive for R410A	×	×
Refrigerant cylinder	Apply to flared section	Tool exclusive for R410A	×	×
Applied oil	Prevent compressor malfunction when charging refrigerant by spraying liquid refrigerant	Ester oil, ether oil and alkylbenzene oil (minimum amount)	×	Ester oil, ether oil: ○ Alkylbenzene oil: minimum amount
Safety charger	Prevent gas from blowing out when detaching charge hose	Tool exclusive for R410A	×	×
Charge valve	Vacuum drying and air purge	Tools for other refrigerants can be used if equipped with adopter for reverse flow check	△ (Usable if equipped with adopter for reverse flow)	△ (Usable if equipped with adopter for reverse flow)
Vacuum pump	Flaring work of piping	Tools for other refrigerants can be used by adjusting flaring dimension	△ (Usable by adjusting flaring dimension)	△ (Usable by adjusting flaring dimension)
Flare tool	Bend the pipes	Tools for other refrigerants can be used	○	○
Bender	Cut the pipes	Tools for other refrigerants can be used	○	○
Pipe cutter	Weld the pipes	Tools for other refrigerants can be used	○	○
Welder and nitrogen gas cylinder	Refrigerant charging scale	Tools for other refrigerants can be used	○	○
Refrigerant charging scale	Check the degree of vacuum. (Vacuum valve prevents back flow of oil and refrigerant to thermistor vacuum gauge)	Tools for other refrigerants can be used	○	○
Vacuum gauge or thermistor vacuum gauge and vacuum valve	Refrigerant charge	Tool exclusive for R410A	×	—
Charging cylinder				

× : Prepare a new tool. (Use the new tool as the tool exclusive for R410A.)

△ : Tools for other refrigerants can be used under certain conditions.

○ : Tools for other refrigerants can be used.

# 2

# OVERVIEW OF UNITS

## 2-1. UNIT CONSTRUCTION

Outdoor unit		8HP	
		PUMY-P200YKM PUMY-P200YKM-BS	
Applicable indoor unit	Capacity	Type 15 to Type 250	
	Number of units	1 to 12 unit	
	Total system wide capacity	50 to 130% of outdoor unit capacity *2	

Branching pipe components	CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E
	Branch header (2 branches)	Branch header (4 branches)	Branch header (8 branches)

Model Capacity	Cassette Ceiling			Ceiling Concealed	Wall Mounted	Ceiling Suspended	Floor standing		Ceiling Concealed (Fresh Air) <sup>*1</sup>	CONNECTION KIT PAC-LV11M-J
	4-way flow	2-way flow	1-way flow				Exposed	Concealed		
15	PLFY-P 15VCM-E	PLFY-P -	PMFY-P -	PEFY-P 15VMS1(L)-E	PKFY-P 15VBM-E	PCFY-P -	PFFY-P -	PFFY-P -	PEFY-P -	M series indoor unit *3 MSZ-GF Series MSZ-EF Series MSZ-SF Series MSZ-FH Series MFZ-KJ Series
20	PLFY-P 20VCM-E(2) 20VBM-E	PLFY-P 20VLM-D-E	PMFY-P 20VBM-E	PEFY-P 20VMS1(L)-E / VMA(L)-E	PKFY-P 20VBM-E	PCFY-P -	PFFY-P 20VLEM-E VKM-E(2)	PFFY-P 20VLRM-E	PEFY-P -	
25	PLFY-P 25VCM-E(2) 25VBM-E	PLFY-P 25VLM-D-E	PMFY-P 25VBM-E	PEFY-P 25VMS1(L)-E / VMA(L)-E	PKFY-P 25VBM-E	PCFY-P -	PFFY-P 25VLEM-E VKM-E(2)	PFFY-P 25VLRM-E	PEFY-P -	
32	PLFY-P 32VCM-E(2) 32VBM-E	PLFY-P 32VLM-D-E	PMFY-P 32VBM-E	PEFY-P 32VMS1(L)-E / VMA(L)-E	PKFY-P 32VHM-E	PCFY-P -	PFFY-P 32VLEM-E VKM-E(2)	PFFY-P 32VLRM-E	PEFY-P -	
40	PLFY-P 40VCM-E(2) 40VBM-E	PLFY-P 40VLM-D-E	PMFY-P 40VBM-E	PEFY-P 40VMS1(L)-E / VMA(L)-E / VMH-E	PKFY-P 40VHM-E	PCFY-P 40VKM-E	PFFY-P 40VLEM-E VKM-E(2)	PFFY-P 40VLRM-E	PEFY-P -	
50	PLFY-P 50VBM-E	PLFY-P 50VLM-D-E	PMFY-P -	PEFY-P 50VMS1(L)-E / VMA(L)-E / VMH-E	PKFY-P 50VHM-E	PCFY-P -	PFFY-P 50VLEM-E	PFFY-P 50VLRM-E	PEFY-P -	
63	PLFY-P 63VBM-E	PLFY-P 63VLM-D-E	PMFY-P -	PEFY-P 63VMS1(L)-E / VMA(L)-E / VMH-E	PKFY-P 63VKM-E	PCFY-P 63VKM-E	PFFY-P 63VLEM-E	PFFY-P 63VLRM-E	PEFY-P -	
71	PLFY-P -	PLFY-P -	PMFY-P -	PEFY-P 71VMA(L)-E / VMH	PKFY-P -	PCFY-P -	PFFY-P -	PFFY-P -	PEFY-P -	
80	PLFY-P 80VBM-E	PLFY-P 80VLM-D-E	PMFY-P -	PEFY-P 80VMH-E / VMA(L)-E	PKFY-P -	PCFY-P -	PFFY-P -	PFFY-P -	PEFY-P -	
100	PLFY-P 100VBM-E	PLFY-P 100VLM-D-E	PMFY-P -	PEFY-P 100VMH-E / VMA(L)-E	PKFY-P 100VKM-E	PCFY-P 100VKM-E	PFFY-P -	PFFY-P -	PEFY-P -	
125	PLFY-P 125VBM-E	PLFY-P 125VLM-D-E	PMFY-P -	PEFY-P 125VMH-E / VMA(L)-E	PKFY-P -	PCFY-P 125VKM-E	PFFY-P -	PFFY-P -	PEFY-P -	
140	PLFY-P -	PLFY-P -	PMFY-P -	PEFY-P 140VMH-E / VMA(L)-E	PKFY-P -	PCFY-P -	PFFY-P -	PFFY-P -	PEFY-P -	
200	PLFY-P -	PLFY-P -	PMFY-P -	PEFY-P 200VMH-E / VMHS-E	PKFY-P -	PCFY-P -	PFFY-P -	PFFY-P -	PEFY-P 200VMH-E-F	
250	PLFY-P -	PLFY-P -	PMFY-P -	PEFY-P 250VMH-E / VMHS-E	PKFY-P -	PCFY-P -	PFFY-P -	PFFY-P -	PEFY-P -	

Decorative panel

M series remote controller

Remote controller	Name	M-NET remote controller	MA remote controller
	Model number	PAR-F27MEA-E	
	Functions	<ul style="list-style-type: none"> <li>A handy remote controller for use in conjunction with the Melans centralized management system.</li> <li>Addresses must be set.</li> </ul>	<ul style="list-style-type: none"> <li>Addresses setting is not necessary.</li> </ul>

\*1 PUMY is connectable to Fresh Air type indoor unit.

It is possible to connect 1 Fresh Air type indoor unit to 1 outdoor unit. (1:1 system)

Operating temperature range (outdoor temperature) for fresh air type indoor units differ from other indoor units.

Refer to "2-2-(3). Operating temperature range".

\*2 When the indoor unit of Fresh Air type is connected with the outdoor unit, the maximum connectable total indoor unit capacity is 110% (100% in case of heating below -5°C [23°F]).

\*3 When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT.

## 2-2. UNIT SPECIFICATIONS

### (1) Outdoor Unit


Service Ref.		PUMY-P200YKM PUMY-P200YKM-BS
Capacity	Cooling (kW)	22.4
	Heating (kW)	25.0
Compressor (kW)		5.4

Cooling/Heating capacity indicates the maximum value at operation under the following condition.


\*Cooling Indoor : D.B. 27°C/ W.B. 19.0°C  
Outdoor : D.B. 35°C  
Heating Indoor : D.B. 20°C  
Outdoor : D.B. 7°C/ W.B. 6°C

### (2) Method for identifying MULTI-S model

#### ■ Indoor unit < When using Model 80 >

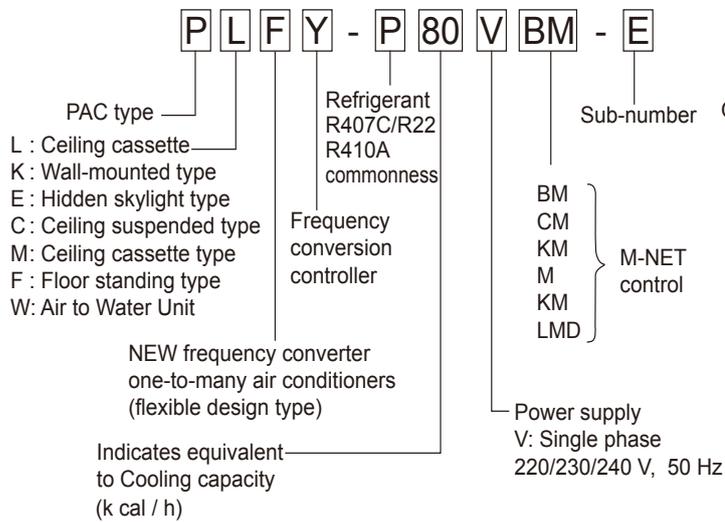

#### ■ Outdoor unit <When using model 125 >

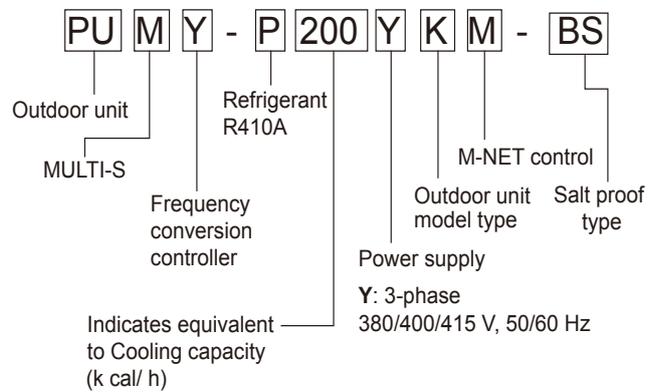

### (3) Operating temperature range

	Cooling	Heating
Indoor-side intake air temperature	W.B. 15 to 24°C	D.B. 15 to 27°C
Outdoor-side intake air temperature	D.B. -5 to 46°C*	W.B. -20 to 15°C

Notes: D.B. : Dry Bulb Temperature  
W.B. : Wet Bulb Temperature

\*10 to 46 °C D.B. : When connecting PKFY-P15/P20/P25VBM, PFFY-P20/25/32VKM, PFFY-P20/25/32 VLE(R)M type indoor unit; and MSZ-GF series, MSZ-EF series and MSZ-SF series, MSZ-FH series and MFZ-KJ series indoor unit.

#### ■ When connecting fresh air type indoor unit

	Capacity of Fresh air type indoor	Cooling	Heating
Indoor-side and Outdoor-side intake air temperature	P200	D.B. 21 to 43°C * W.B. 15.5 to 35°C	D.B. -10 to 20°C **

\*Thermo-OFF (FAN-mode) automatically starts if the outdoor temp. is lower than 21°C D.B.

\*\*Thermo-OFF (FAN-mode) automatically starts if the outdoor temp. is higher than 20°C D.B.

# 3

# SPECIFICATIONS

Service Ref.		PUMY-P200YKM PUMY-P200YKM-BS	
Power source		380/400/415 V, 50 Hz	
Cooling capacity (Nominal)		kW *1	22.4
		kcal/h *1	19,300
		BTU/h *1	76,400
	Power input	kW	6.05
	Current input	A	9.88, 9.39, 9.05
	COP	kW/kW	3.70
Temp. range of cooling	Indoor temp.	W.B.	15 to 24°C
	Outdoor temp.	D.B.	-5 to 46°C
Heating capacity (Nominal)		kW *2	25.0
		kcal/h *2	21,500
		BTU/h *2	85,300
	Power input	kW	5.84
	Current input	A	9.54, 9.06, 8.74
	COP	kW/kW	4.28
Temp. range of heating	Indoor temp.	D.B.	15 to 27°C
	Outdoor temp.	W.B.	-20 to 15°C
Indoor unit connectable	Total capacity	50 to 130% of outdoor unit capacity	
	Model / Quantity	15 - 250 / 12	
Sound pressure level (measured in anechoic room)		dB <A>	56/ 61
Power pressure level (measured in anechoic room)		dB <A>	-
Refrigerant piping diameter	Liquid pipe	mm (in)	9.52 (3/8)*3
	Gas pipe	mm (in)	19.05 (3/4)
FAN *2	Type x Quantity		Propeller Fan x 2
	Air flow rate	m3/min	139
		L/s	2,316
		cfm	4,908
	Control, Driving mechanism		DC control
	Motor output	kW	0.20 + 0.20
External static press.		0	
Compressor	Type x Quantity		Scroll hermetic compressor x 1
	Manufacturer		Siam Compressor Industry Co., Ltd.
	Starting method		Inverter
	Capacity control	%	Cooling 25 to100 Heating 17 to 100
	Motor output	kW	5.3
	Case heater	kW	0
	Lubricant		FV50S(2.3litter)
External finish		Galvanized Steel Sheet Munsell No. 3Y 7.8/1.1	
External dimension HxWxD	mm	1338 x 1050 x 330(+25)	
	in	52-11/16 x 41-11/32 x 13 (+1)	
Protection devices	High pressure protection		High pressure Switch
	Inverter circuit (COMP./FAN)		Overcurrent detection, Overheat detection(Heat sink thermistor)
	Compressor		Compressor thermistor, Over current detection
	Fan motor		Overheating, Voltage protection
Refrigerant	Type x original charge		R410A 7.3 kg
	Control		Electronic Expansion Valve
Net weight	kg (lb)	138 (305)	
Heat exchanger		Cross Fin and Copper tube	
HIC circuit (HIC: Heat Inter-Changer)		HIC circuit	
Defrosting method		Reversed refrigerant circuit	
Drawing	External	BK01N339	
	Wiring	BH79J199	
Standard attachment	Document	Installation Manual	
	Accessory	Joint pipe x 1, Grounded lead wire x2	
Optional parts		Joint: CMY-Y62-G-E Header: CMY-Y64/68-G-E	
<p>* 1 Nominal cooling conditions      * 2 Nominal heating conditions</p> <p>Indoor : 27°C D.B./19°C W.B. [81°F D.B./66°F W.B.]      20°C D.B. [68°F D.B.]</p> <p>Outdoor : 35°C D.B. [95°F D.B.]      7°C DB/6°C W.B. [45 °F D.B./43 °F W.B.]</p> <p>Pipe length : 7.5 m [24-9/16 ft]      7.5 m [24-9/16 ft]</p> <p>Level difference : 0 m [0 ft]      0 m [0 ft]</p> <p>*3 Liquid pipe diameter: 12.7 mm, in case of further piping length is longer than 60 m.</p> <p>Note : 1. Nominal conditions * 1, * 2 are subject to ISO 15042. 2. Due to continuing improvement, above specifications may be subject to change without notice.</p>			<p>Unit converter</p> <p>kcal/h = kW × 860 BTU/h = kW × 3,412 cfm = m3/min × 35.31 lb = kg/0.4536</p> <p>Above specification data is subject to rounding variation.</p>

## 4-1. COOLING AND HEATING CAPACITY AND CHARACTERISTICS

### 4-1-1. Method for obtaining system cooling and heating capacity:

To obtain the system cooling and heating capacity and the electrical characteristics of the outdoor unit, first add up the ratings of all the indoor units connected to the outdoor unit (see table below), and then use this total to find the standard capacity with the help of the tables on "4-3. STANDARD CAPACITY DIAGRAM".

#### (1) Capacity of indoor unit

P•FY Series	Model Number for indoor unit	Model 15	Model 20	Model 25	Model 32	Model 40	Model 50	Model 63	Model 71	Model 80	Model 100	Model 125	Model 140	Model 200	Model 250
	Model Capacity	1.7	2.2	2.8	3.6	4.5	5.6	7.1	8.0	9.0	11.2	14.0	16.0	22.4	28.0
M Series	Model Number for indoor unit	Model 15	Model 20	Model 22	Model 25	Mod 35	Model 42	Model 50	Model 60	Model 71	-	-	-	-	-
	Model Capacity	1.5	2.0	2.2	2.5	3.5	4.2	5.0	6.0	7.1	-	-	-	-	-

#### (2) Sample calculation

- ① System assembled from indoor and outdoor unit (in this example the total capacity of the indoor units is greater than that of the outdoor unit)
  - Outdoor unit PUMY-P200YKM(-BS)
  - Indoor unit PKFY-P25VBM-E × 1 , PLFY-P50VLMD-E × 4
- ② According to the conditions in ①, the total capacity of the indoor unit will be:  $2.8 + 5.6 \times 4 = 25.2$
- ③ The following figures are obtained from the 25.2 total capacity of indoor units, referring the standard capacity diagram in "4-3-1. PUMY-P200YKM PUMY-P200YKM-BS <cooling>" and "4-3-2. PUMY-P200YKM PUMY-P200YKM-BS <heating>" :

Capacity (kW)		Outdoor unit power consumption (kW)		Outdoor unit current (A)/400V	
Cooling	Heating	Cooling	Heating	Cooling	Heating
Ⓐ 22.75	Ⓑ 25.19	7.04	7.01	10.92	10.88

### 4-1-2. Method for obtaining the heating and cooling capacity of an indoor unit:

(1) The capacity of each indoor unit (kW) = the capacity Ⓐ (or Ⓑ) ×  $\frac{\text{model capacity}}{\text{total model capacity of all indoor units}}$

(2) Sample calculation (using the system described above in 4-1-1. (2) ):

#### During cooling:

- The total model capacity of the indoor unit is:  
 $2.8 + 5.6 \times 4 = 25.2$  kW  
 Therefore, the capacity of PKFY-P25VBM-E and PLFY-P50VLMD-E will be calculated as follows by using the formula in 4-1-2. (1):

$$\text{Model 25} = 22.75 \times \frac{2.8}{25.2} = 2.53 \text{ kW}$$

$$\text{Model 50} = 22.75 \times \frac{5.6}{25.2} = 5.06 \text{ kW}$$

#### During heating:

- The total model capacity of indoor unit is:  
 $3.2 + 6.3 \times 4 = 28.4$   
 Therefore, the capacity of PKFY-P25VBM-E and PLFY-P50VLMD-E will be calculated as follows by using the formula in 4-1-2. (1):

$$\text{Model 25} = 25.19 \times \frac{3.2}{28.4} = 2.84 \text{ kW}$$

$$\text{Model 50} = 25.19 \times \frac{6.3}{28.4} = 5.59 \text{ kW}$$




## 4-2. STANDARD OPERATION DATA (REFERENCE DATA)

Operation				PUMY-P200YKM PUMY-P200YKM-BS	
Operating conditions	Ambient temperature	Indoor	DB/WB	27°C/ 19°C	20°C/ —
		Outdoor		35°C	7°C/ 6°C
	Indoor unit	No. of connected units	Unit	8	
		No. of units in operation		8	
		Model		25 × 7/ 50 × 1	
	Piping	Main pipe	m	5	
		Branch pipe		2.5	
		Total pipe length		25	
		Fan speed	—	Hi	
		Amount of refrigerant	kg	10.9	
Outdoor unit	Electric current	A	9.28	8.96	
	Voltage	V	230/ 400		
	Compressor frequency	Hz	71	86	
LEV opening	Indoor unit	Pulse	219	283	
Pressure	High pressure/Low pressure	MPa	2.98/0.93	2.18/0.60	
Temp. of each section	Outdoor unit	Discharge	°C	65.2	53.8
		Heat exchanger outlet		39.6	-1.4
		Accumulator inlet		10.1	-1.7
		Compressor inlet		9.0	-3.4
	Indoor unit	LEV inlet		28.8	22.6
		Heat exchanger inlet		14.2	49.9

### 4-3. STANDARD CAPACITY DIAGRAM




Before calculating the sum of total capacity of indoor units, please convert the value into the kW model capacity following the formula on "4-1-1. Method for obtaining system cooling and heating capacity".

#### 4-3-1. PUMY-P200YKM PUMY-P200YKM-BS <Cooling>

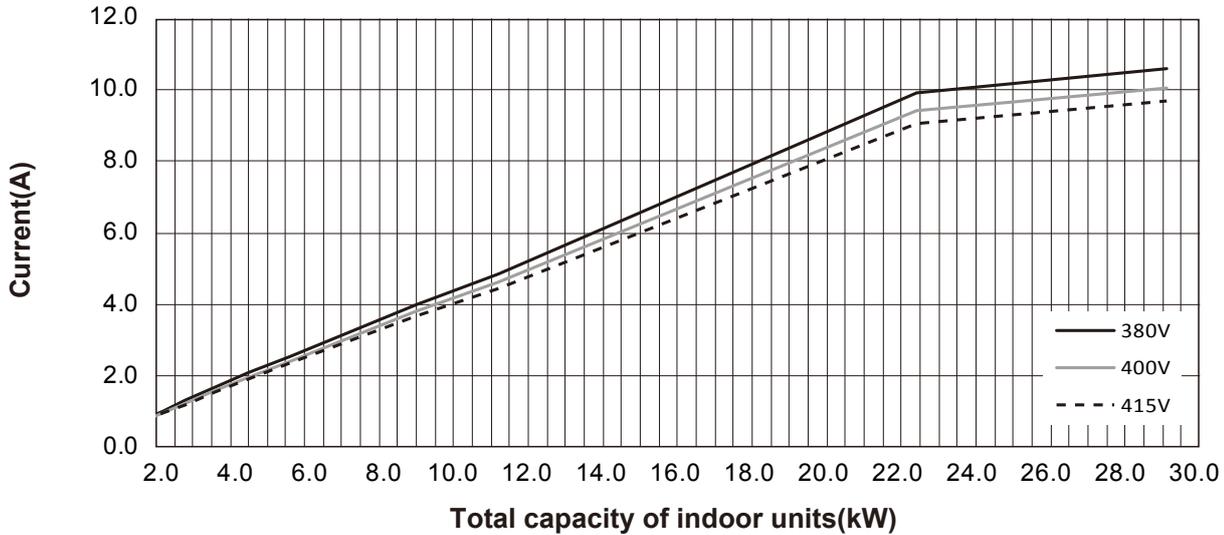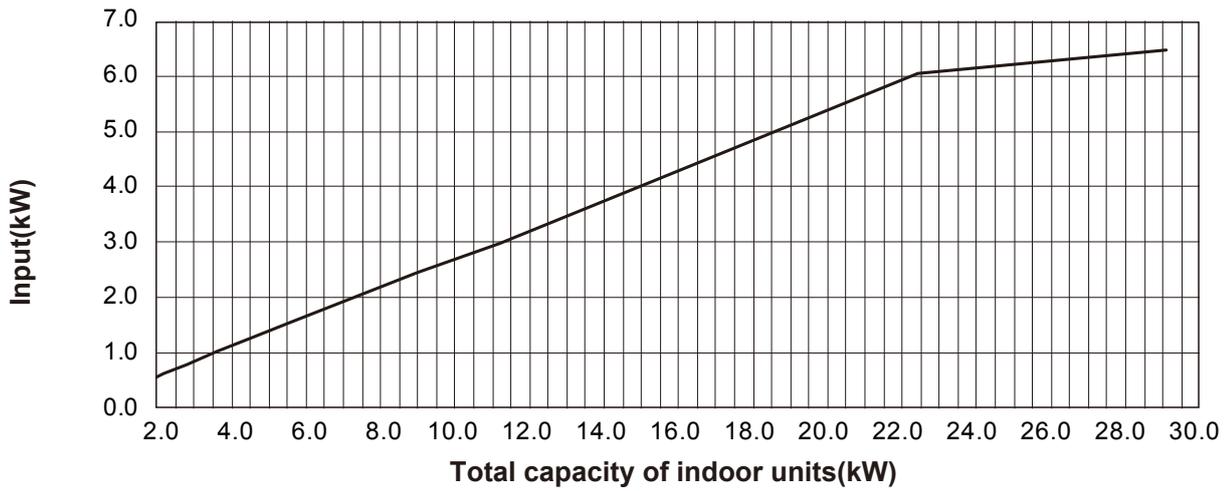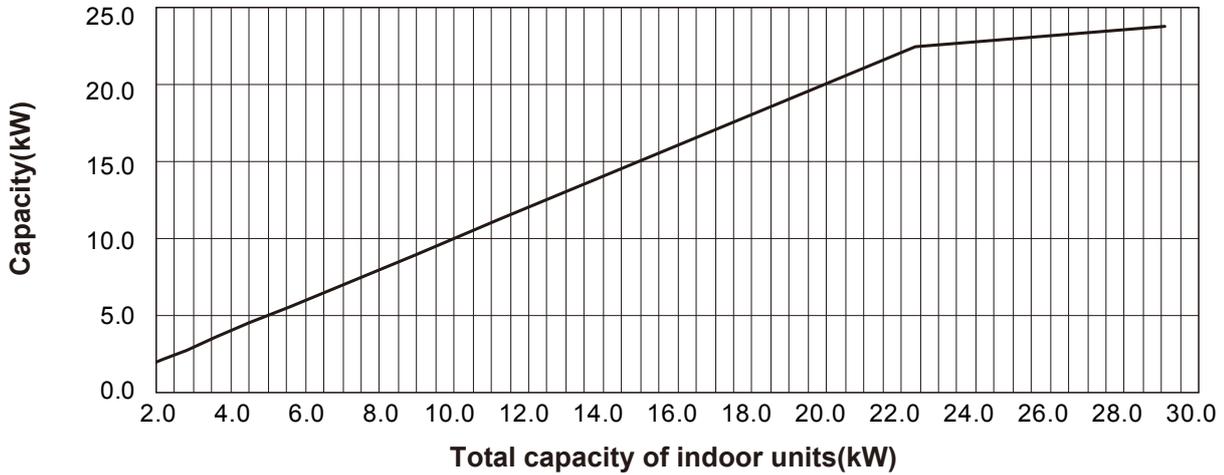

4-3-2. PUMY-P200YKM

PUMY-P200YKM-BS <Heating>

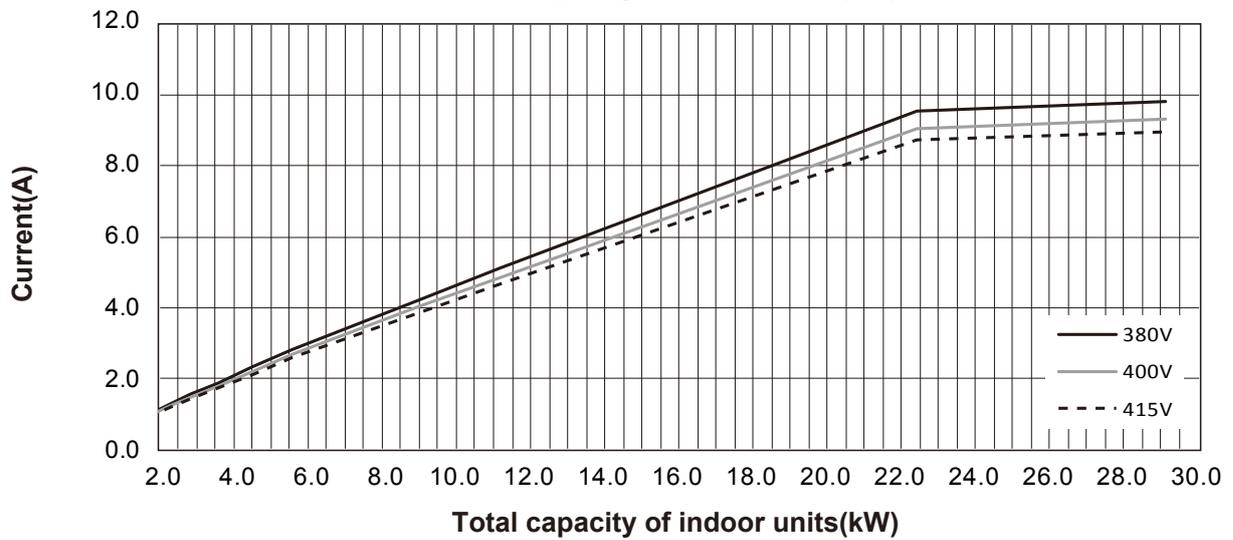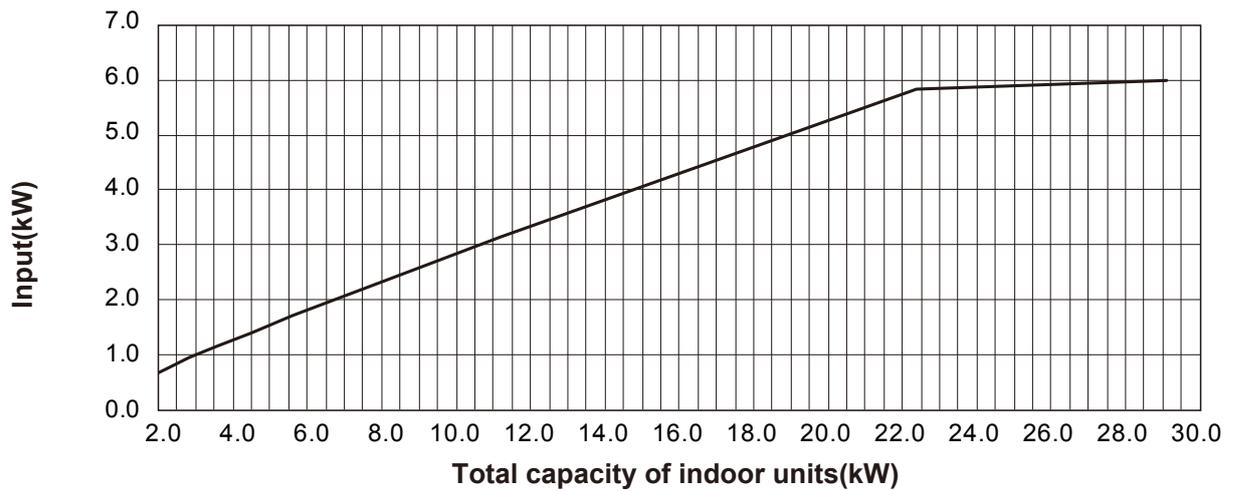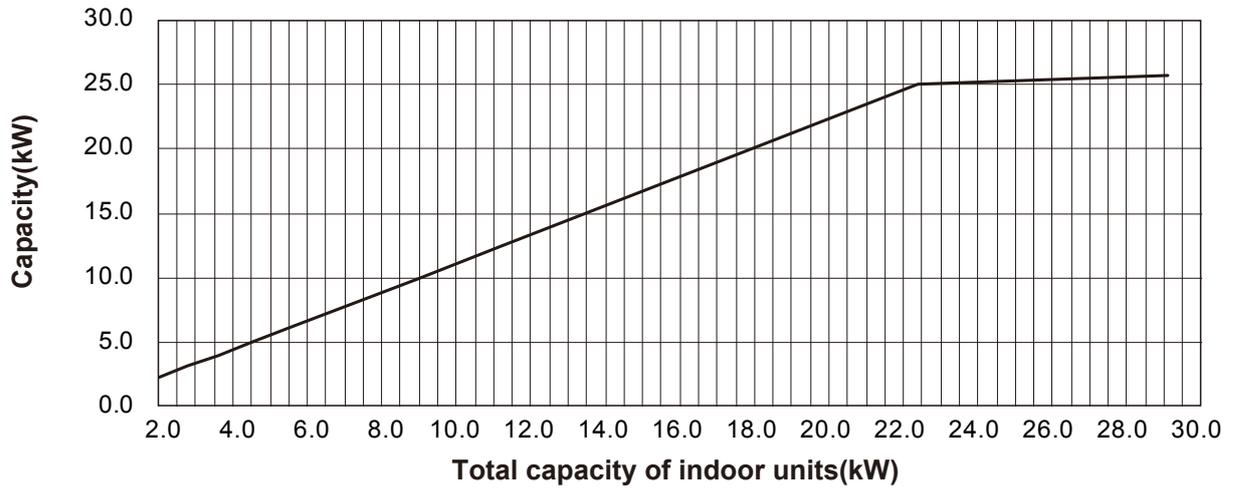

## 4-4. CORRECTING COOLING AND HEATING CAPACITY

### 4-4-1. Correcting Changes in Air Conditions

(1) The performance curve charts (Figure 1, 2) show the change ratio of capacity and input (power consumption) according to the indoor and outdoor temperature condition when defining the rated capacity (total capacity) and rated input under the standard condition in standard piping length (7.5 m) as "1.0".

• Standard conditions:

Rated cooling capacity	Indoor D.B. 27°C / W.B. 19°C Outdoor D.B. 35°C
Rated heating capacity	Indoor D.B. 20°C Outdoor D.B. 7°C / W.B. 6°C

- Use the rated capacity and rated input given in "4-3. Standard capacity diagram".
- The input is the single value on the side of the outdoor unit; the input on the sides of each indoor unit must be added to obtain the total input.

(2) The capacity of each indoor unit may be obtained by multiplying the total capacity obtained in (1) by the ratio between the individual capacity at the rated time and the total capacity at the rated time.

$$\text{Individual capacity under stated conditions} = \text{total capacity under the stated conditions} \times \frac{\text{individual capacity at the rated time}}{\text{total capacity at the rated time}}$$

(3) Capacity correction factor curve

**PUMY-P200YKM      PUMY-P200YKM-BS**

Figure 1


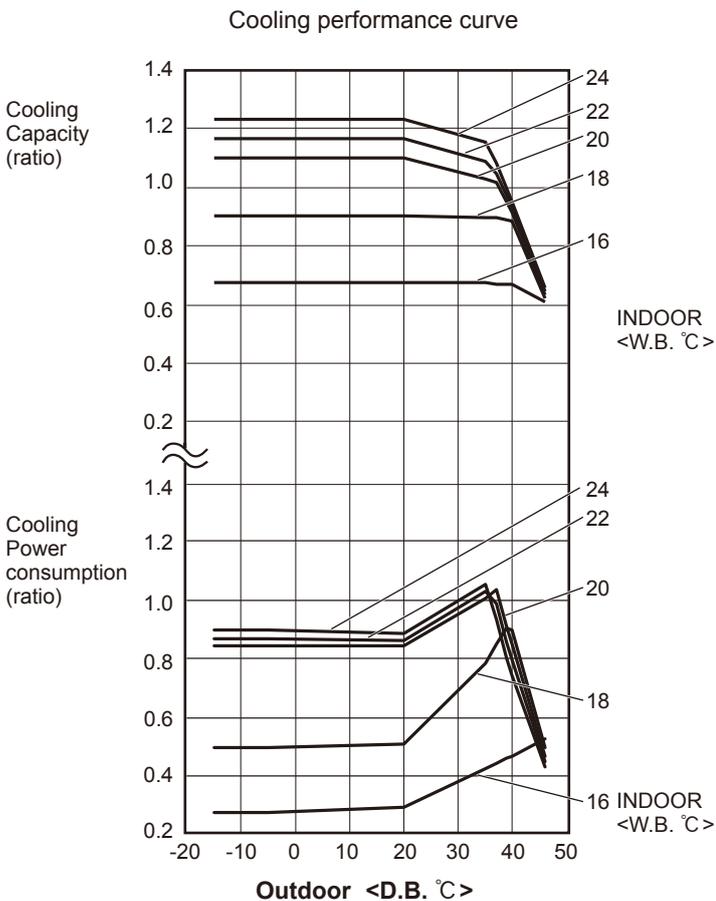


Figure 2

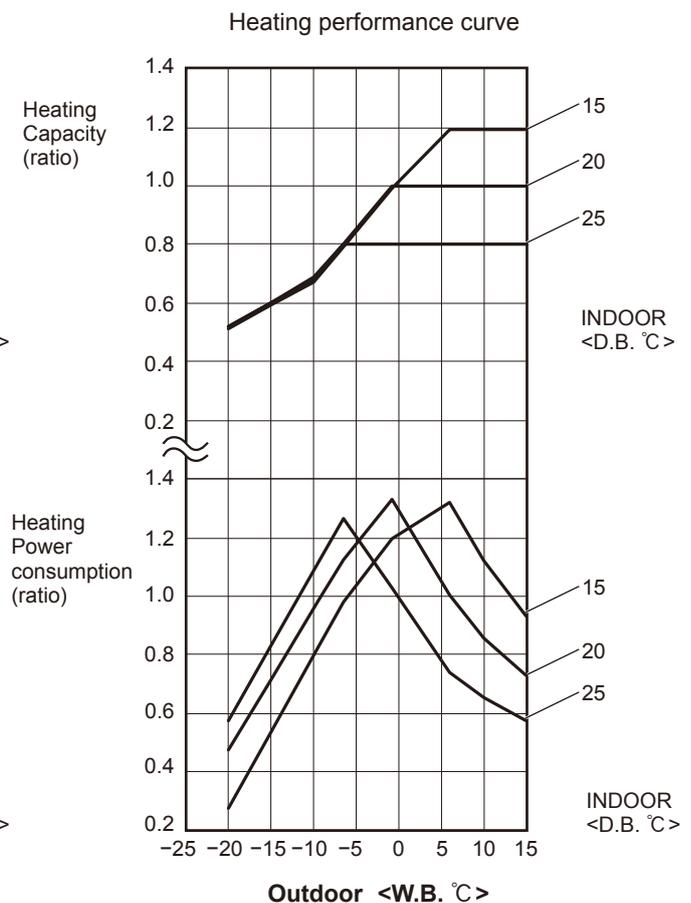


#### 4-4-2. Correcting Capacity for Changes in the Length of Refrigerant Piping

- (1) During cooling, obtain the ratio (and the equivalent piping length) of the outdoor units rated capacity and the total in-use indoor capacity, and find the capacity ratio corresponding to the standard piping length from Figure 3. Then multiply by the cooling capacity from Figure 1 to obtain the actual capacity.
- (2) During heating, find the equivalent piping length, and find the capacity ratio corresponding to standard piping length from Figure 3. Then multiply by the heating capacity from Figure 2 to obtain the actual capacity.

##### (1) Capacity Correction Curve

Figure 3

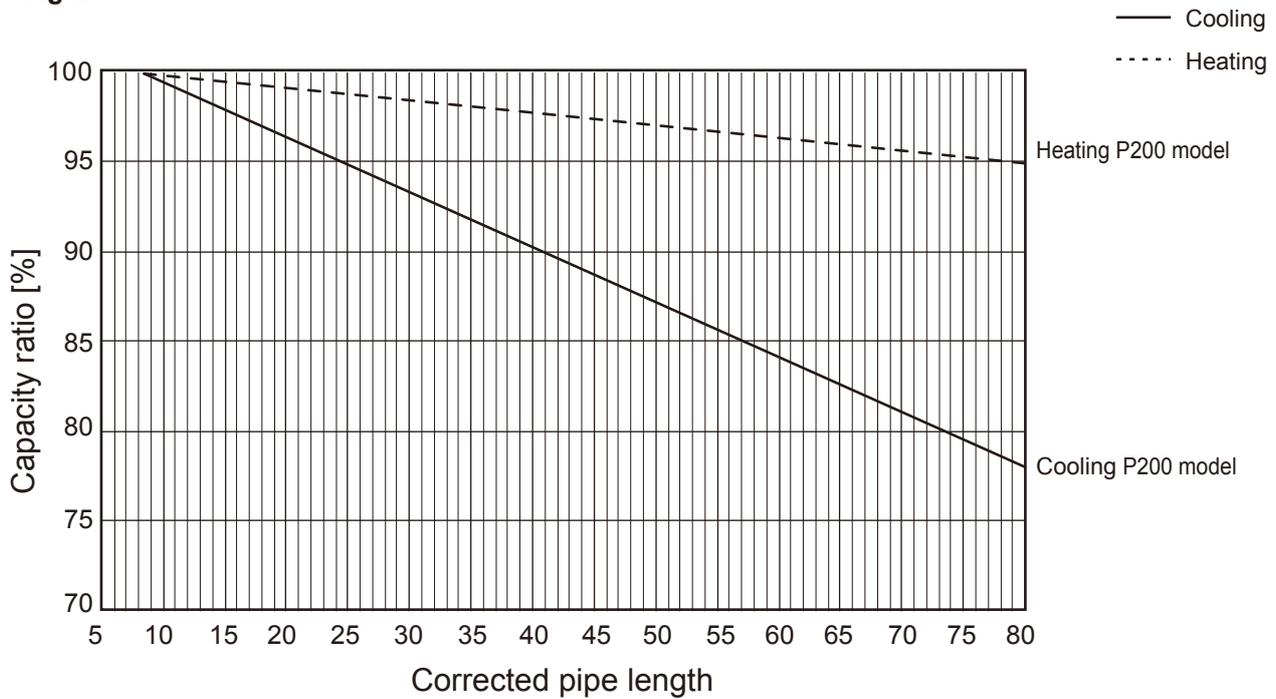

##### (2) Method for Obtaining the Equivalent Piping Length

Equivalent length for type P200 = (length of piping to farthest indoor unit) + (0.3 × number of bends in the piping) (m)

Length of piping to farthest indoor unit: type P200.....80 m

#### 4-4-3. Correction of Heating Capacity for Frost and Defrosting

If heating capacity has been reduced due to frost formation or defrosting, multiply the capacity by the appropriate correction factor from the following table to obtain the actual heating capacity.

##### Correction factor diagram



Outdoor Intake temperature (W.B.°C)	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
Correction factor	1.0	0.98	0.89	0.88	0.89	0.9	0.95	0.95	0.95	0.95	0.95



### 4-5. NOISE CRITERION CURVES

PUMY-P200YKM  
PUMY-P200YKM-BS


MODE	SPL(dB)	LINE
COOLING	56	○—○
HEATING	61	●—●
COOLING SILENT MODE	53	△—△

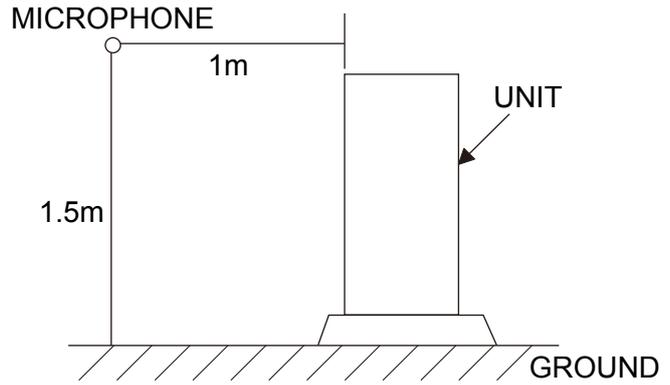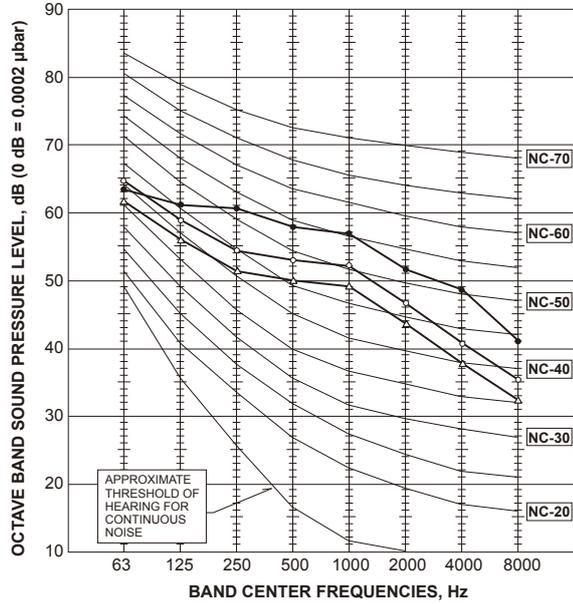

PUMY-P200YKM

PUMY-P200YKM-BS

Unit : mm

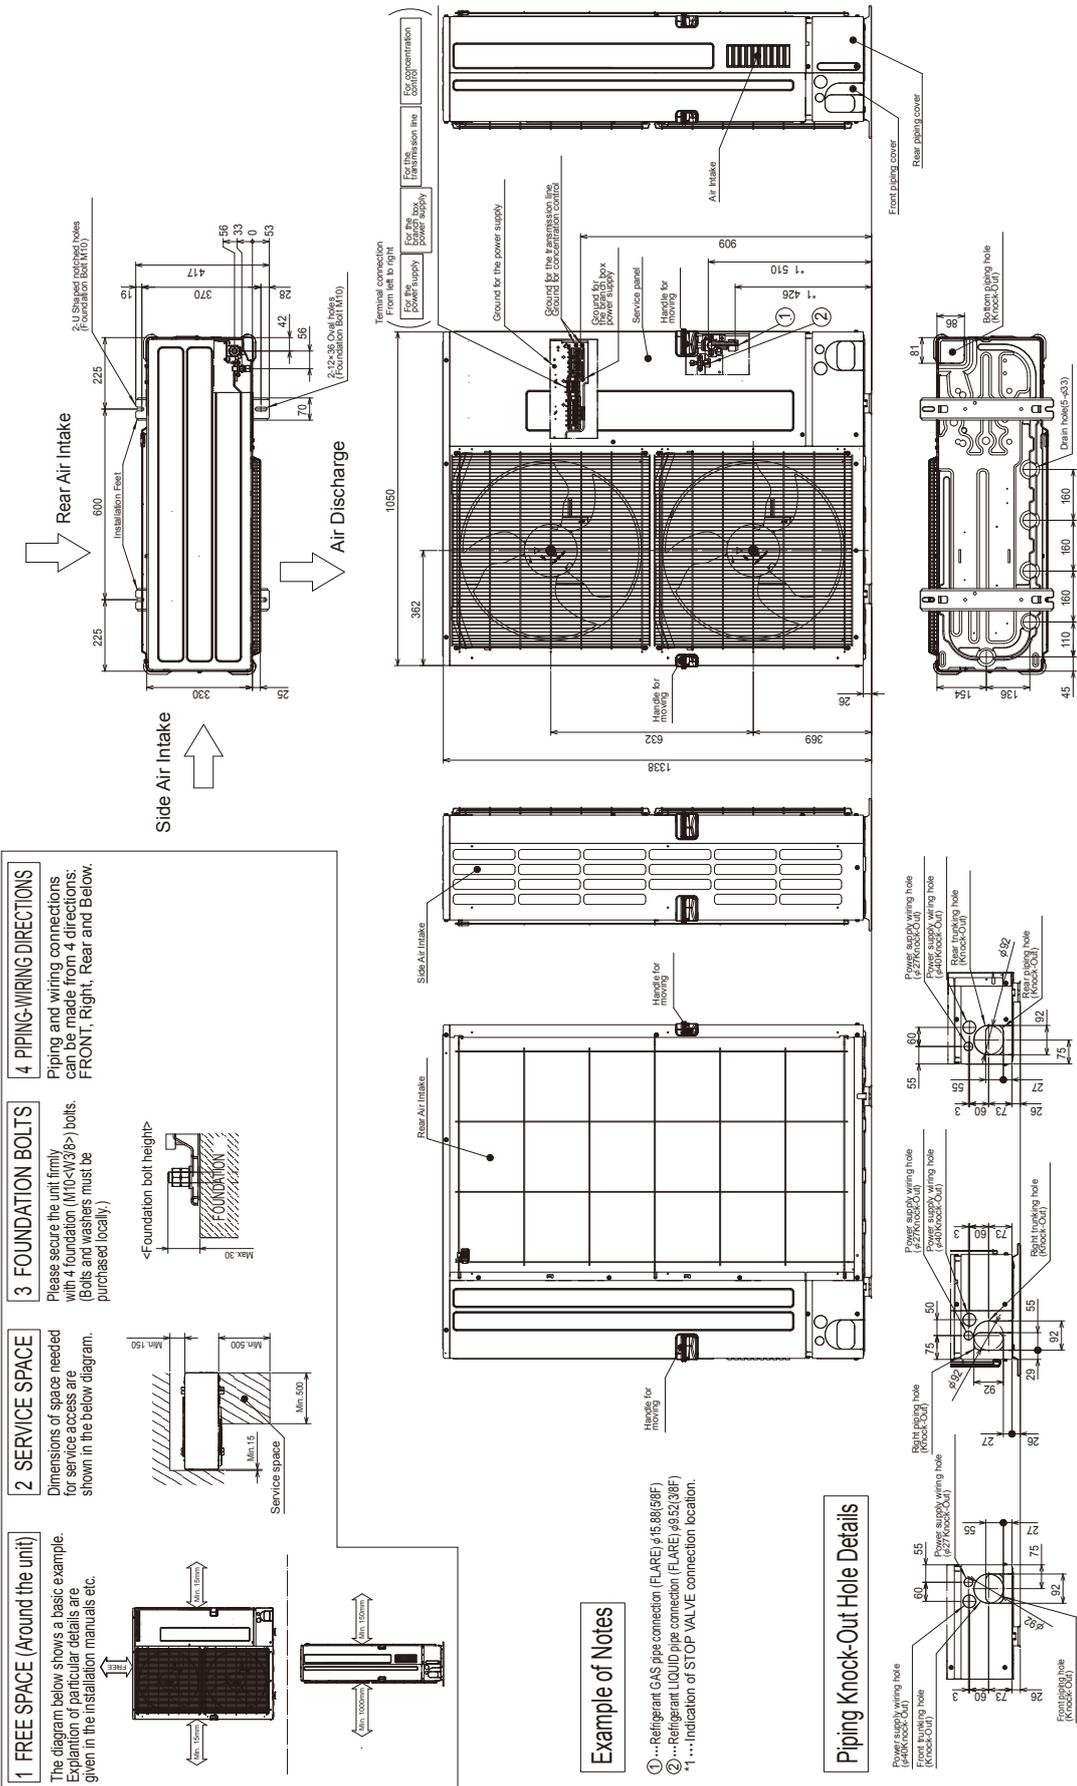


PUMY-P200YKM

PUMY-P200YKM-BS

SYMBOL	NAME
TB1	Terminal Block <Power Supply>
TB3	Terminal Block <Indoor/Outdoor Transmission Line>
TB7	Terminal Block <Centralized Control Transmission Line>
MC	Motor For Compressor
MF1,MF2	Fan Motor
21S4	Solenoid Valve<Four-Way Valve>
63H	High Pressure Switch
63HS	High Pressure Sensor
63LS	Low Pressure Sensor
SV1	Solenoid Valve<Bypass valve>
TH2	Thermistor<Hic Pipe>
TH3	Thermistor<Outdoor Liquid Pipe>
TH4	Thermistor<Compressor>
TH6	Thermistor<Suction Pipe>
TH7	Thermistor<Ambient>
TH8	Thermistor<Heat Sink>
CB1,CB2	Main Smoothing Capacitor
RS	Rush Current Protect Resistor
LEV-A,LEV-B	Electronic Expansion Valve
ACL4	Reactor
DCL	Reactor
P.B.	Power Circuit Board
TB-U/V/W	Connection Terminal<U/V/W-Phase>
TB-L1/L2/L3	Connection Terminal<L1/L2/L3-Power Supply>
TB-P1/P2/C1/N1	Connection Terminal
SC-W/V/U	Connection Terminal
X52A	S2C Relay
N.F.	Noise Filter Circuit Board
LO1/L02/L03	Connection Terminal<L1/L2/L3-Power Supply>
LI1/LI2/LI3/N1	Connection Terminal<L1/L2/L3-Power Supply>
GD1,GD2	Connection Terminal<Electrical Parts Box>
MULTI.B.	Multi Controller Circuit Board
SW1	Switch<Display Selection>
SW2	Switch<Function Selection>
SW3	Switch<Test Run>
SW4	Switch<Model Selection>
SW5	Switch<Function Selection>
SW6	Switch<Function Selection>
SW7	Switch<Function Selection>
SW8	Switch<Model Selection>
SW9	Switch<Function Selection>
SWU1	Switch<Unit Address Selection, unit digit>
SWU2	Switch<Unit Address Selection, tens digit>
CNS1	Connector<Indoor/Outdoor Transmission Line>
CNS2	Connector<Centralized Control Transmission Line>
SS	Connector<Connection For Option>
CN3D	Connector<Connection For Option>
CN3S	Connector<Connection For Option>
CN3N	Connector<Connection For Option>
CN51	Connector<Connection For Option>
LED1,LED2	LED<Operation Inspection Display>
LED3	LED<Power Supply to Main Microcomputer>
F1,F2	Fuse<T6,3AL250V>
X501-505	Relay
M-NET P.B.	M-NET Power Circuit Board
TB1	Connection Terminal<Electrical Parts Box>

\*1 MODEL SELECTION  
The black square (■) indicates a switch position.

MODELS	SW4	SW8
PUMY-P200YKM	ON OFF 1 2 3 4 5 6	ON OFF 1 2

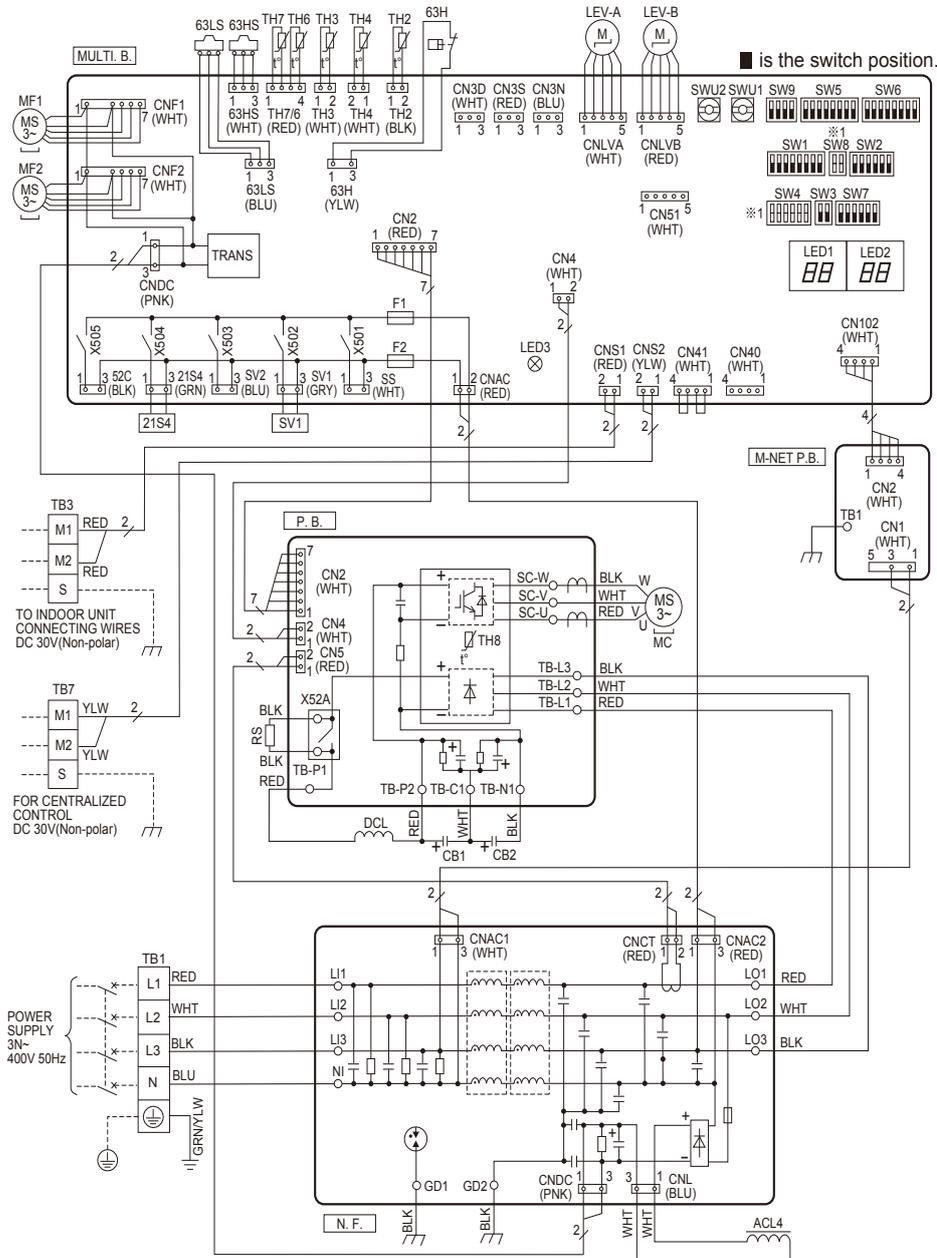

**Cautions when Servicing**

- ⚠ **WARNING:** When the main supply is turned off, the voltage [570 V] in the main capacitor will drop to 20 V in approx. 5 minutes (input voltage: 400 V). When servicing, make sure that LED1, LED2 on the outdoor circuit board goes out, and then wait for at least 5 minute.
- Components other than the outdoor board may be faulty: Check and take corrective action, referring to the service manual. Do not replace the outdoor board without checking.

**NOTES:**

1.Refer to the wiring diagrams of the indoor units for details on wiring of each indoor unit.

**Self-diagnosis function**


The indoor and outdoor units can be diagnosed automatically using the self-diagnosis switch (SW1) and LED1, LED2 (LED indication) found on the multi-controller of the outdoor unit.  
LED indication : Set all contacts of SW1 to OFF.

- During normal operation  
The LED indicates the drive state of the controller in the outdoor unit.


Bit	1	2	3	4	5	6	7	8
Indication	Compressor operated	52C	21S4	SV1	(SV2)	-	-	Always lit

- When fault requiring inspection has occurred  
The LED alternately indicates the inspection code and the location of the unit in which the fault has occurred.

[Example]  
When the compressor and SV1 are turned during cooling operation.




7-1. TRANSMISSION SYSTEM SETUP

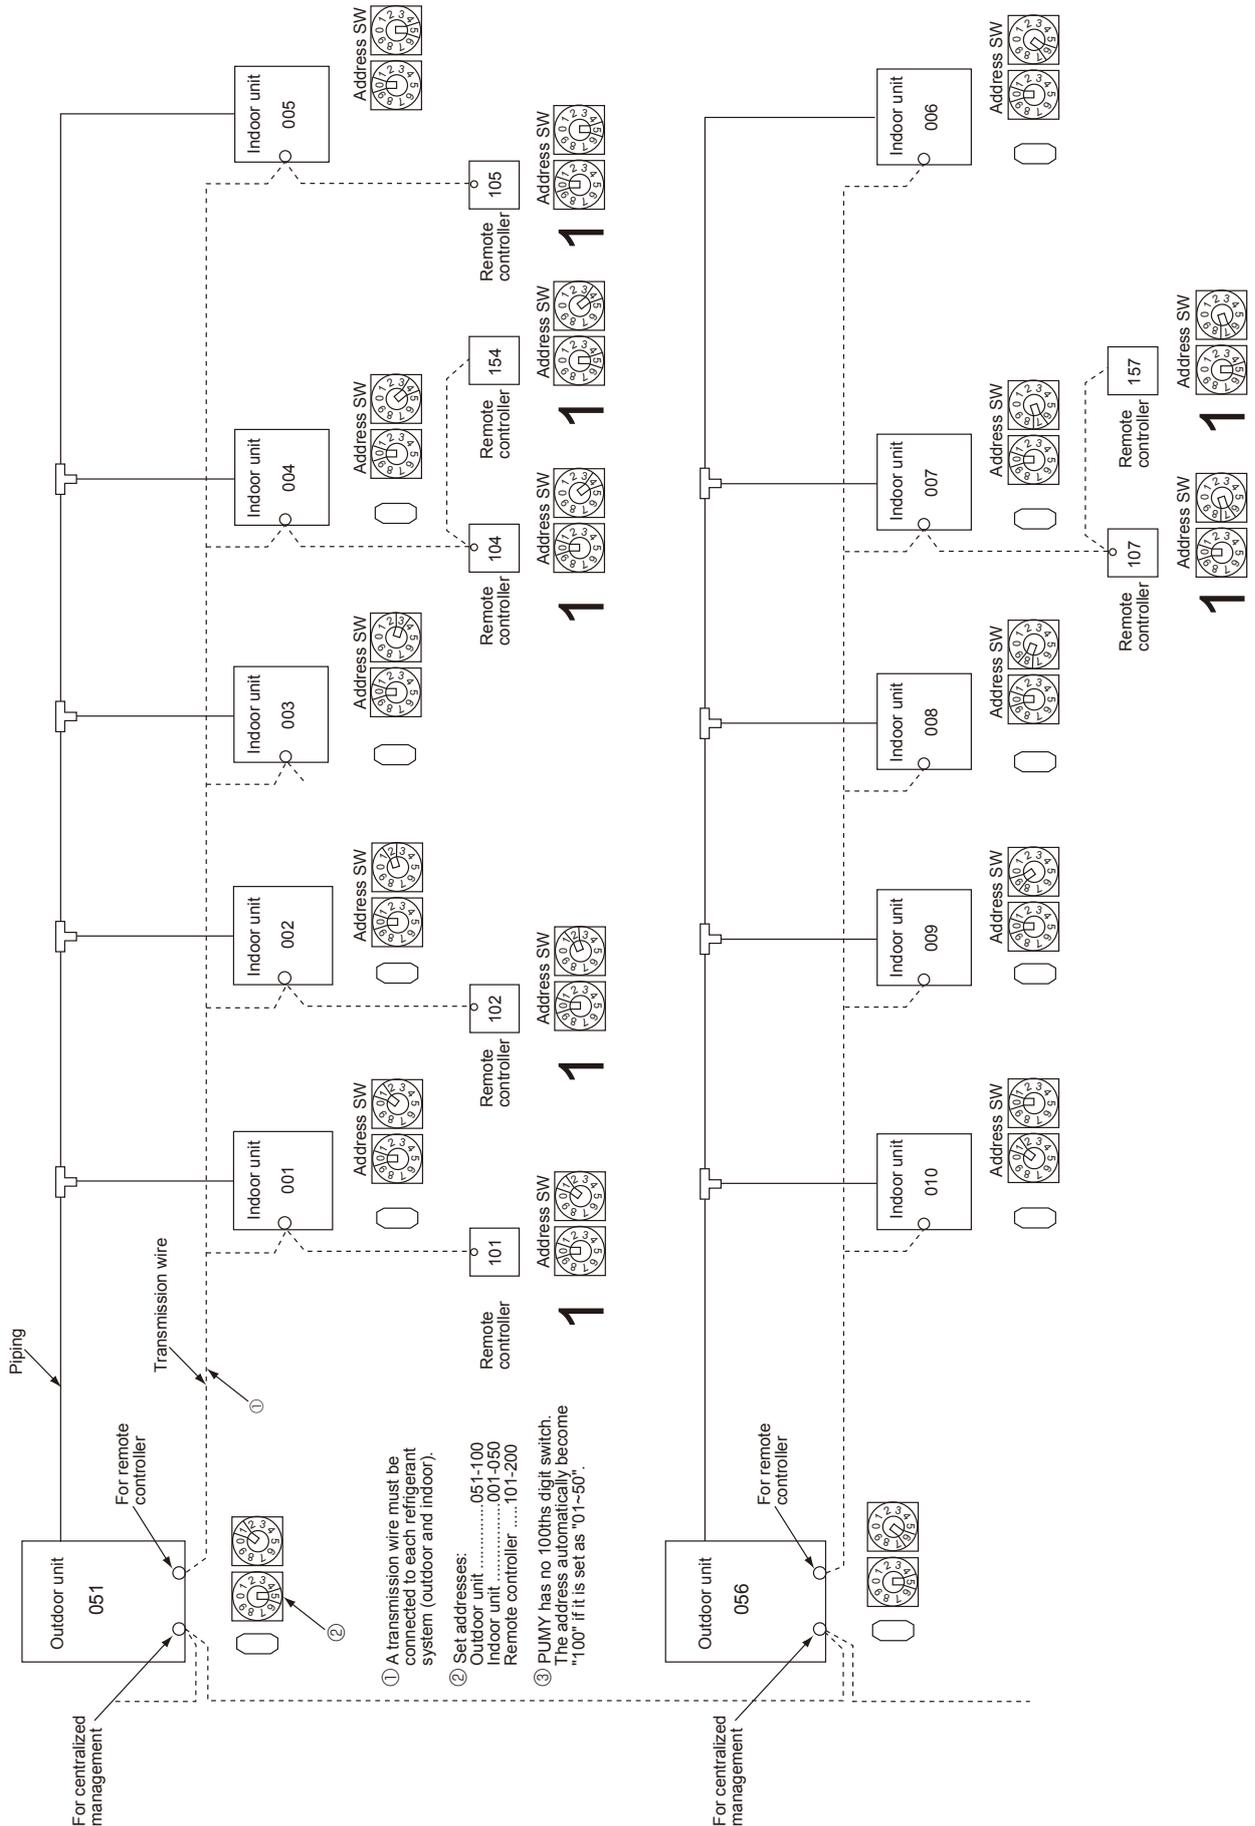

## 7-2. REFRIGERANT SYSTEM DIAGRAM PUMY-P200YKM PUMY-P200YKM-BS

Unit: mm

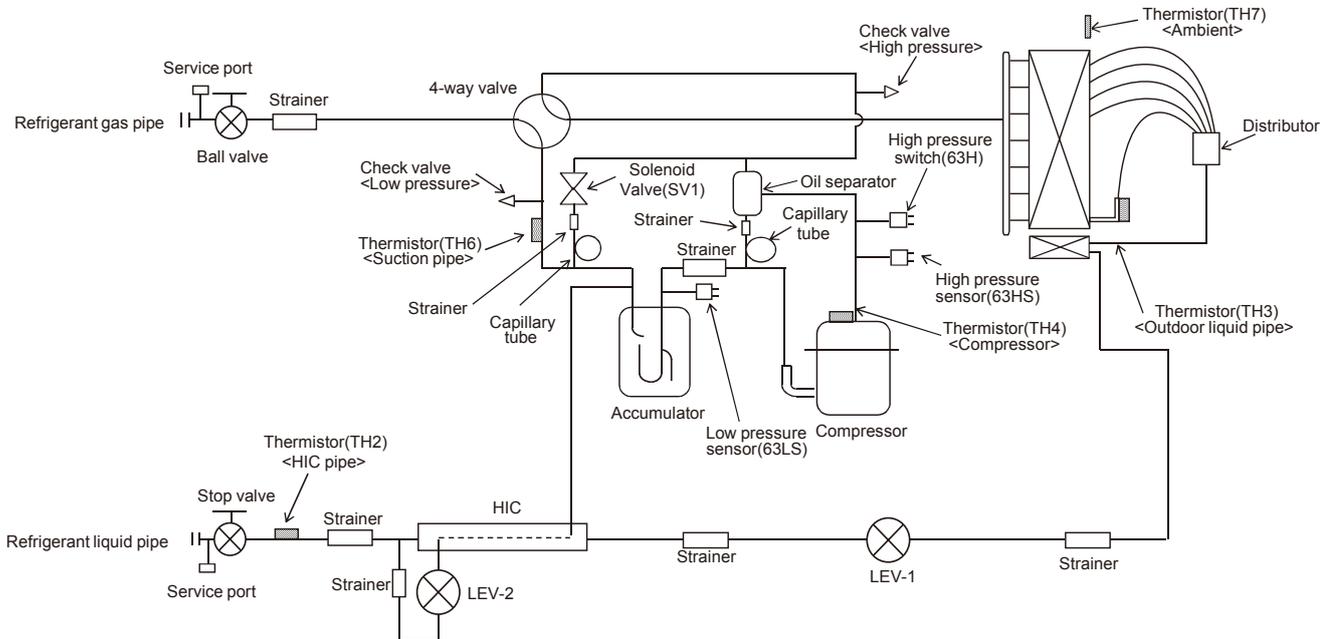

Capillary tube for oil separator :  $\phi 2.5 \times \phi 0.8 \times L800$   
 Capillary tube for solenoid valve :  $\phi 4.0 \times \phi 3.0 \times L500$

Refrigerant piping specifications <dimensions of flared connector>

Capacity		Item	Liquid piping	Gas piping
Indoor unit	P15, 20, 25, 32, 40, 50		$\phi 6.35$ <1/4>	$\phi 12.7$ <1/2>
	P63, 80, 100, 125, 140		$\phi 9.52$ <3/8>	$\phi 15.88$ <5/8>
	P200		$\phi 9.52$ <3/8>	$\phi 19.05$ <3/4>
	P250		$\phi 9.52$ <3/8>	$\phi 22.22$ <7/8>
Outdoor unit	P200		$\phi 9.52$ <3/8> *	$\phi 19.05$ <3/4>

\* Use  $\phi 12.7$  in case of farthest piping length is longer than 60m.

Note:




When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT.

## 7-3. SYSTEM CONTROL

### 7-3-1. Example for the System




- Example for wiring control cables, wiring method and address setting, permissible lengths, and the prohibited items are listed in the standard system with detailed explanation.

#### A. Example of a M-NET remote controller system (address setting is necessary.)

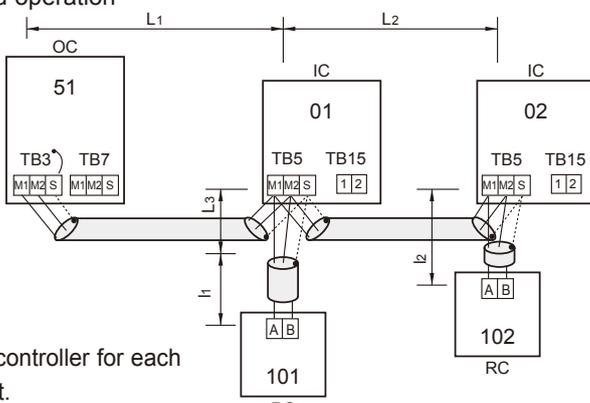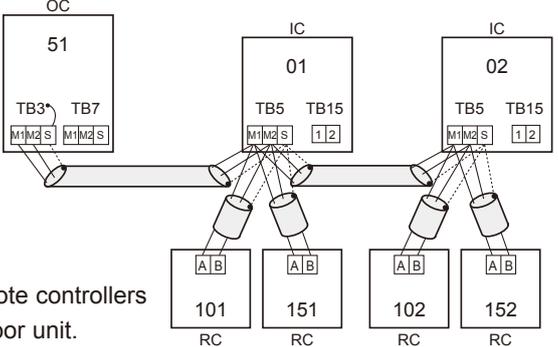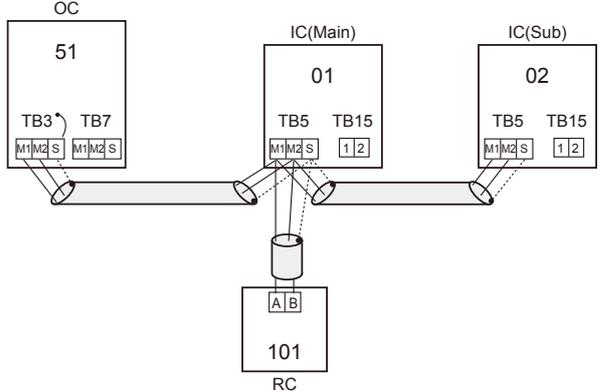
Example of wiring control cables	Wiring Method and Address Setting																		
<p>1. Standard operation</p>  <ul style="list-style-type: none"> <li>• 1 remote controller for each indoor unit.</li> <li>• There is no need for setting the 100 position on the remote controller.</li> </ul>	<p>a. Use feed wiring to connect terminals M1 and M2 on transmission cable block (TB3) for the outdoor unit (OC) to terminals M1 and M2 on the transmission cable block (TB5) of each indoor unit (IC). Use non-polarized 2-core wire.</p> <p>b. Connect terminals M1 and M2 on transmission cable terminal block (TB5) for each indoor unit with the terminal block (TB6) for the remote controller (RC).</p> <p>c. Set the address setting switch (on outdoor unit P.C.B) as shown below.</p> <table border="1" data-bbox="906 761 1525 981"> <thead> <tr> <th>Unit</th> <th>Range</th> <th>Setting Method</th> </tr> </thead> <tbody> <tr> <td>Indoor unit (IC)</td> <td>001 to 050</td> <td>—</td> </tr> <tr> <td>Outdoor unit (OC)</td> <td>051 to 100</td> <td>Use the smallest address of all the indoor unit plus 50.</td> </tr> <tr> <td>Remote controller (RC)</td> <td>101 to 150</td> <td>Indoor unit address plus 100.</td> </tr> </tbody> </table>	Unit	Range	Setting Method	Indoor unit (IC)	001 to 050	—	Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor unit plus 50.	Remote controller (RC)	101 to 150	Indoor unit address plus 100.						
Unit	Range	Setting Method																	
Indoor unit (IC)	001 to 050	—																	
Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor unit plus 50.																	
Remote controller (RC)	101 to 150	Indoor unit address plus 100.																	
<p>2. Operation using 2 remote controllers</p>  <ul style="list-style-type: none"> <li>• Using 2 remote controllers for each indoor unit.</li> </ul>	<p>a. Same as above.</p> <p>b. Same as above.</p> <p>c. Set address switch (on outdoor unit P.C.B) as shown below.</p> <table border="1" data-bbox="906 1097 1525 1377"> <thead> <tr> <th>Unit</th> <th>Range</th> <th>Setting Method</th> </tr> </thead> <tbody> <tr> <td>Indoor Unit (IC)</td> <td>001 to 050</td> <td>—</td> </tr> <tr> <td>Outdoor unit (OC)</td> <td>051 to 100</td> <td>Use the smallest address of all the indoor units plus 50.</td> </tr> <tr> <td>Main Remote Controller (RC)</td> <td>101 to 150</td> <td>Indoor unit address plus 100.</td> </tr> <tr> <td>Sub Remote Controller (RC)</td> <td>151 to 200</td> <td>Indoor unit address plus 150.</td> </tr> </tbody> </table>	Unit	Range	Setting Method	Indoor Unit (IC)	001 to 050	—	Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor units plus 50.	Main Remote Controller (RC)	101 to 150	Indoor unit address plus 100.	Sub Remote Controller (RC)	151 to 200	Indoor unit address plus 150.			
Unit	Range	Setting Method																	
Indoor Unit (IC)	001 to 050	—																	
Outdoor unit (OC)	051 to 100	Use the smallest address of all the indoor units plus 50.																	
Main Remote Controller (RC)	101 to 150	Indoor unit address plus 100.																	
Sub Remote Controller (RC)	151 to 200	Indoor unit address plus 150.																	
<p>3. Group operation</p>  <ul style="list-style-type: none"> <li>• Multiple indoor units operated together by 1 remote controller</li> </ul>	<p>a. Same as above.</p> <p>b. Connect terminals M1 and M2 on transmission cable terminal block (TB5) of the IC main unit with the most recent address within the same indoor unit (IC) group to terminal block (TB6) on the remote controller.</p> <p>c. Set the address setting switch (on outdoor unit P.C.B) as shown below.</p> <table border="1" data-bbox="906 1590 1525 1904"> <thead> <tr> <th>Unit</th> <th>Range</th> <th>Setting Method</th> </tr> </thead> <tbody> <tr> <td>IC (Main)</td> <td>001 to 050</td> <td>Use the smallest address within the same group of indoor units.</td> </tr> <tr> <td>IC (Sub)</td> <td>001 to 050</td> <td>Use an address, other than that of the IC (Main) from among the units within the same group of indoor units. This must be in sequence with the IC (Main).</td> </tr> <tr> <td>Outdoor Unit</td> <td>051 to 100</td> <td>Use the smallest address of all the indoor units plus 50.</td> </tr> <tr> <td>Main Remote Controller</td> <td>101 to 150</td> <td>Set at an IC (Main) address within the same group plus 100.</td> </tr> <tr> <td>Sub Remote Controller</td> <td>151 to 200</td> <td>Set at an IC (Main) address within the same group plus 150.</td> </tr> </tbody> </table> <p>d. Use the indoor unit (IC) within the group with the most functions as the IC (Main) unit.</p>	Unit	Range	Setting Method	IC (Main)	001 to 050	Use the smallest address within the same group of indoor units.	IC (Sub)	001 to 050	Use an address, other than that of the IC (Main) from among the units within the same group of indoor units. This must be in sequence with the IC (Main).	Outdoor Unit	051 to 100	Use the smallest address of all the indoor units plus 50.	Main Remote Controller	101 to 150	Set at an IC (Main) address within the same group plus 100.	Sub Remote Controller	151 to 200	Set at an IC (Main) address within the same group plus 150.
Unit	Range	Setting Method																	
IC (Main)	001 to 050	Use the smallest address within the same group of indoor units.																	
IC (Sub)	001 to 050	Use an address, other than that of the IC (Main) from among the units within the same group of indoor units. This must be in sequence with the IC (Main).																	
Outdoor Unit	051 to 100	Use the smallest address of all the indoor units plus 50.																	
Main Remote Controller	101 to 150	Set at an IC (Main) address within the same group plus 100.																	
Sub Remote Controller	151 to 200	Set at an IC (Main) address within the same group plus 150.																	
<p>Combinations of 1 through 3 above are possible.</p>																			

• Name, Symbol and the Maximum Remote controller Units for Connection

Name	Symbol	Maximum units for connection
Outdoor unit	OC	—
Indoor unit	IC	1 OC unit can be connected to 1 to 12(P175)/1 to 12 (P200)/1 to 12 (P225) IC units
M-NET remote controller	RC	Maximum 2 RC for 1 indoor unit, Maximum 12 RC for 1 OC

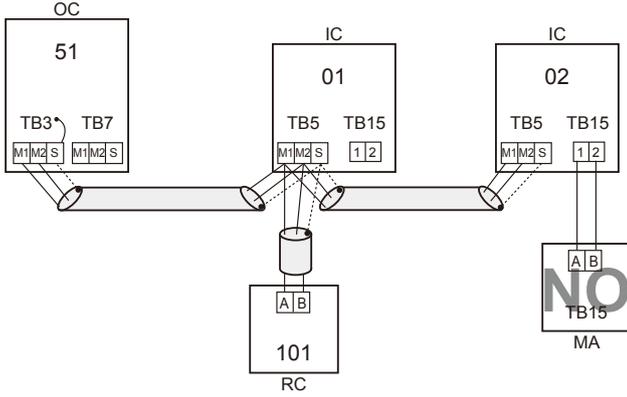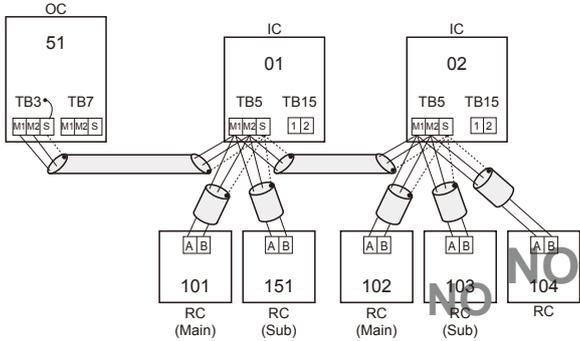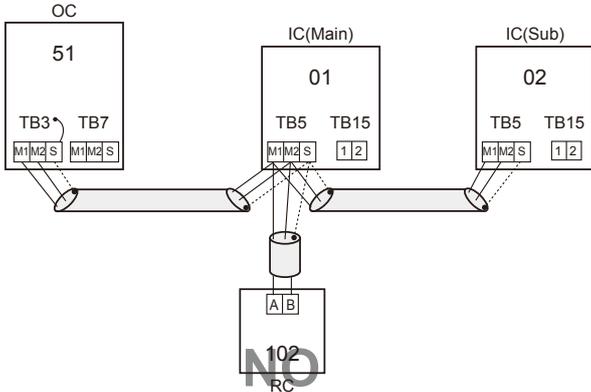Permissible Lengths	Prohibited items
<p>Longest transmission cable length (1.25 mm<sup>2</sup>)  <math>L_1 + L_2, L_2 + L_3, L_3 + L_1 \leq 200</math> m                      Remote controller cable length</p> <ol style="list-style-type: none"> <li>If 0.5 to 1.25 mm<sup>2</sup>  <math>l_1, l_2 \leq 10</math> m</li> <li>If the length exceeds 10 meters, the exceeding section should be 1.25 mm<sup>2</sup> and that section should be a value within the total extension length of the transmission cable and maximum transmission cable length. (L3)</li> </ol>	<ul style="list-style-type: none"> <li>M-NET remote controller (RC) and MA remote controller (MA) cannot be used together.</li> <li>Do not connect anything with TB15 of indoor unit (IC).</li> </ul> 
Same as above	 <ul style="list-style-type: none"> <li>Use the indoor unit (IC) address plus 150 as the sub remote controller address. In this case, it should be 152.</li> <li>3 or more remote controller (RC) cannot be connected to 1 indoor unit.</li> </ul>
Same as above	 <ul style="list-style-type: none"> <li>The remote controller address is the indoor unit main address plus 100. In this case, it should be 101.</li> </ul>

B. Example of a group operation system with 2 or more outdoor units and a M-NET remote controller.  
(Address settings are necessary.)

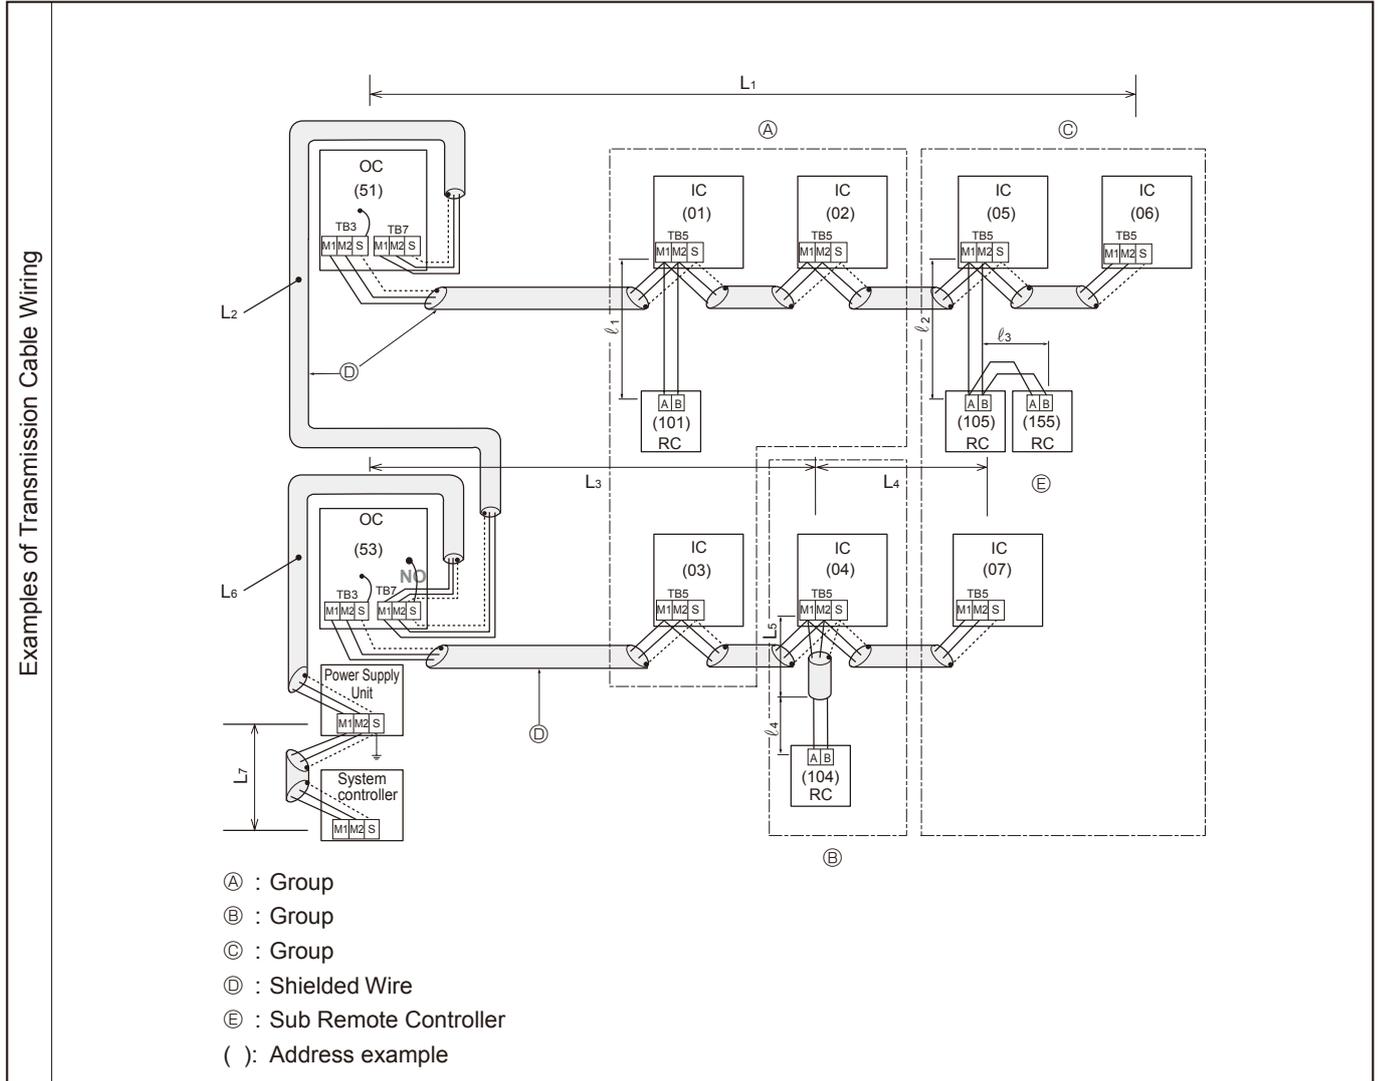

- Wiring Method Address Settings
- Always use shielded wire when making connections between the outdoor unit (OC) and the indoor unit (IC), as well as for all OC-OC, and IC-IC wiring intervals.
  - Use feed wiring to connect terminals M1 and M2 and the ground terminal on the transmission cable terminal block (TB3) of each outdoor unit (OC) to terminals M1 and M2 on the terminal S on the transmission cable block of the indoor unit (IC).
  - Connect terminals M1 and M2 on the transmission cable terminal block of the indoor unit (IC) that has the most recent address within the same group to the terminal block on the remote controller (RC).
  - Connect together terminals M1, M2 and terminal S on the terminal block for centralized control (TB7) for the outdoor unit (OC).
  - DO NOT change the jumper connector CN41 on MULTI controller circuit board.
  - The earth processing of S terminal for the centralized control terminal block (TB7) is unnecessary. Connect the terminal S on the power supply unit with the earth.
  - Set the address setting switch as follows.

Unit	Range	Setting Method
IC (Main)	01 to 00	Use the smallest address within the same group of indoor units.
IC (Sub)	01 to 50	Use an address, other than the IC (Main) in the same group of indoor units. This must be in sequence with the IC (Main).
Outdoor Unit	51 to 100	Use the smallest address of all the indoor units plus 50. The address automatically becomes "100" if it is set as "01-50".
Main Remote Controller	101 to 150	Set at an IC (Main) address within the same group plus 100.
Sub Remote Controller	151 to 200	Set at an IC (Main) address within the same group plus 150.
MA Remote Controller	—	Address setting is not necessary. (Main/ sub setting is necessary.)


h. The group setting operations among the multiple indoor units is done by the remote controller (RC) after the electrical power has been turned on.

• Name, Symbol, and the Maximum Units for Connection

**Permissible Length**




- Longest length via outdoor units :  $L_1+L_2+L_3+L_4, L_1+L_2+L_3+L_5, L_1+L_2+L_6+L_7 \leq 500$  meters (1.25mm<sup>2</sup>)
- Longest transmission cable length :  $L_1, L_3+L_4, L_3+L_5, L_6, L_2+L_6, L_7 \leq 200$  meters (1.25mm<sup>2</sup>)
- Remote controller cable length :  $l_1, l_2, l_2+l_3, l_4 \leq 10$  meters (0.5 to 1.25mm<sup>2</sup>)

If the length exceeds 10 meters, use a 1.25 mm<sup>2</sup> shielded wire. The length of this section (L<sub>8</sub>) should be included in the calculation of the maximum length and overall length.



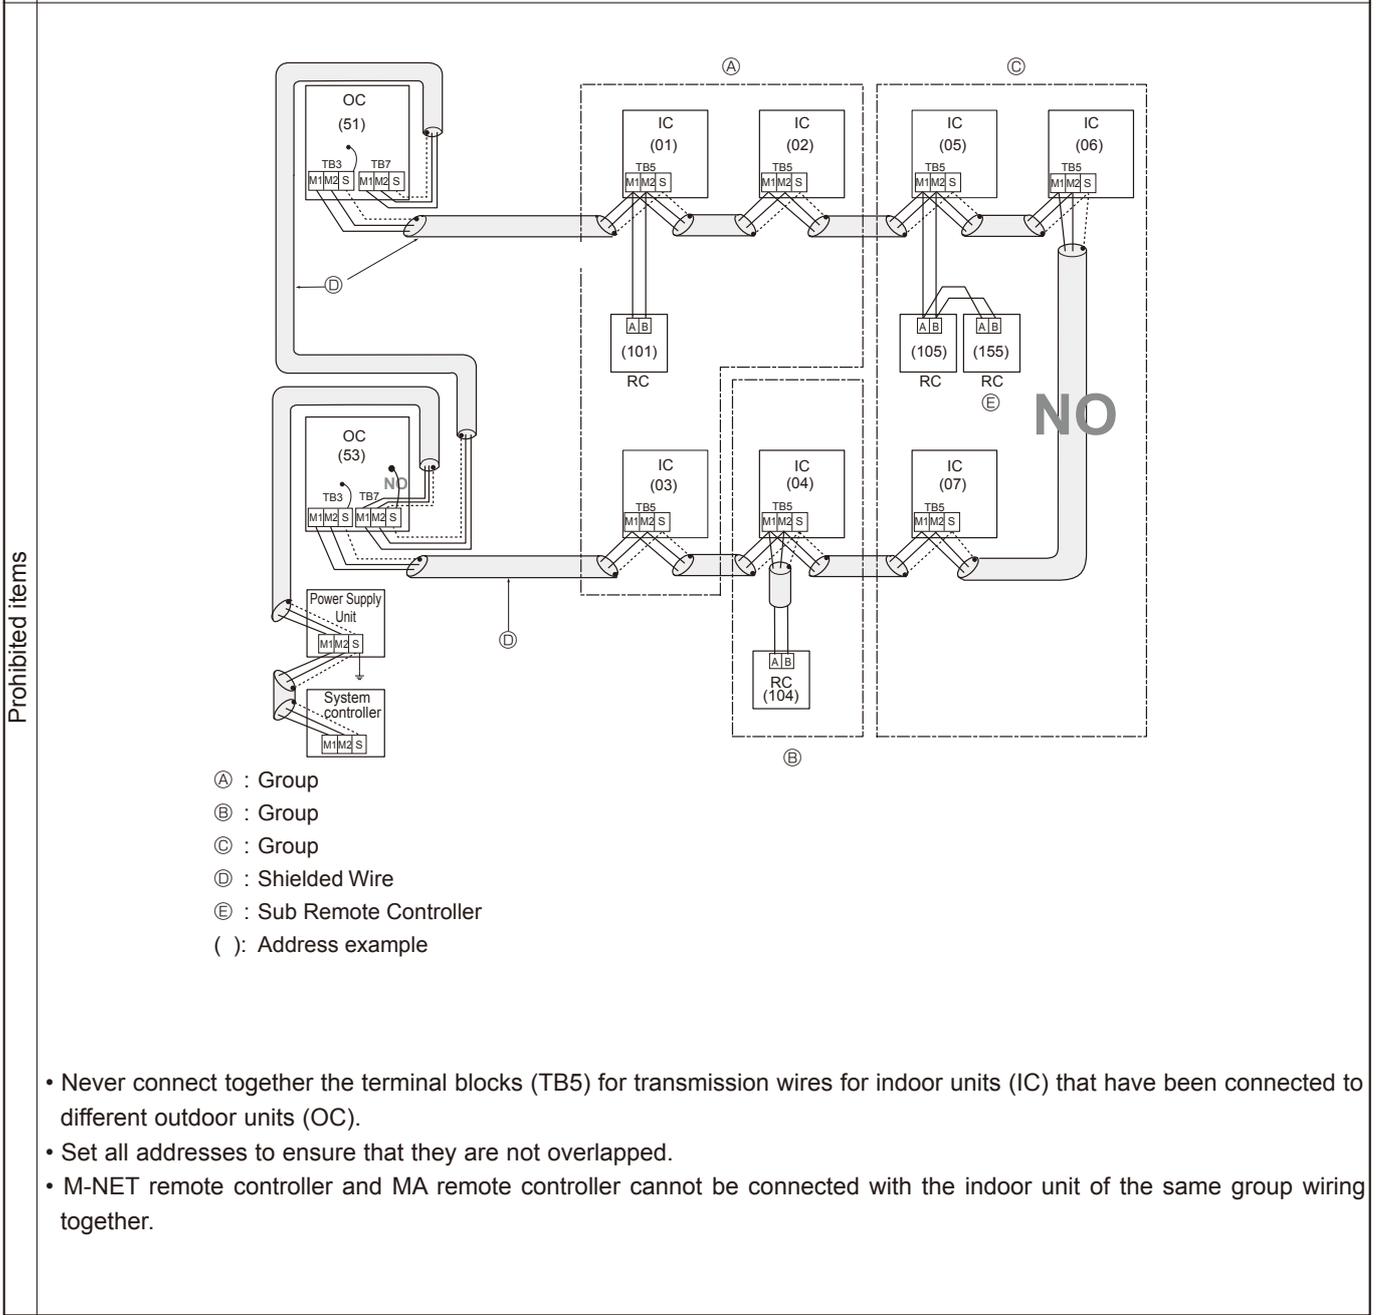


C. Example of a MA remote controller system (address setting is not necessary.)


NOTE : In the case of same group operation, need to set the address that is only main indoor unit.

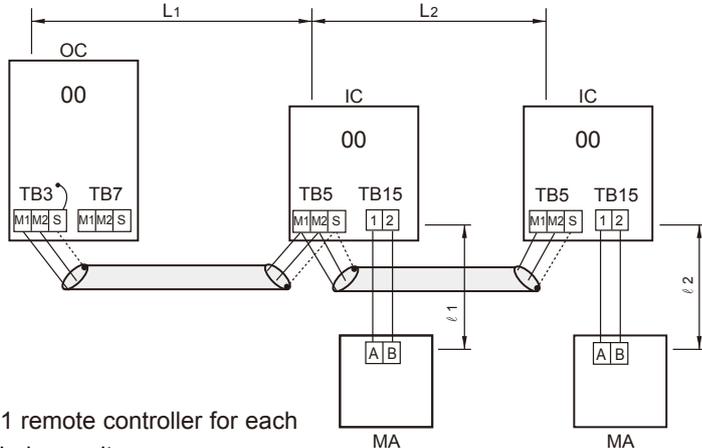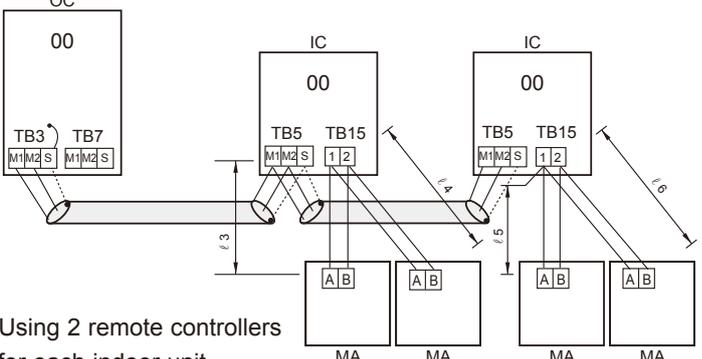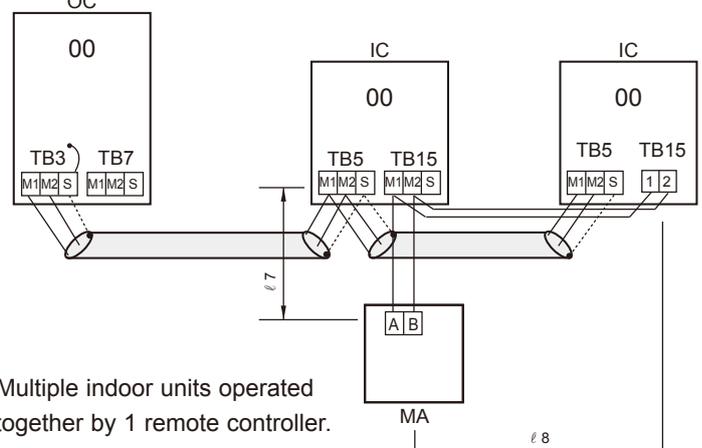Example of wiring control cables	Wiring Method and Address Setting
<p>1. Standard operation</p>  <p>• 1 remote controller for each indoor unit.</p>	<p>a. Use feed wiring to connect terminals M1 and M2 on transmission cable block (TB3) for the outdoor unit (OC) to terminals M1 and M2 on the transmission cable block (TB5) of each indoor unit (IC). Use non-polarized 2-core wire.</p> <p>b. Connect terminals 1 and 2 on transmission cable terminal block (TB15) for each indoor unit with the terminal block for the MA remote controller (MA).</p>
<p>2. Operation using two remote controllers</p>  <p>• Using 2 remote controllers for each indoor unit.</p>	<p>a. The same as above a.</p> <p>b. The same as above b.</p> <p>c. In the case of using 2 remote controllers, connect terminals 1 and 2 on transmission cable terminal block (TB15) for each indoor unit with the terminal block for 2 remote controllers.</p> <p>· Set either one of the MA remote controllers to "sub remote controller" Refer to the installation manual of MA remote controller.</p>
<p>3. Group operation</p>  <p>• Multiple indoor units operated together by 1 remote controller.</p>	<p>a. The same as above a.</p> <p>b. The same as above b.</p> <p>c. Connect terminals 1 and 2 on transmission cable terminal block (TB15) of each indoor unit, which is doing group operation with the terminal block the MA remote controller. Use non-polarized 2-core wire.</p> <p>d. In the case of same group operation, need to set the address that is only main indoor unit. Please set the smallest address within number 01–50 of the indoor unit with the most functions in the same group.</p>
<p>Combinations of 1 through 3 above are possible.</p>	

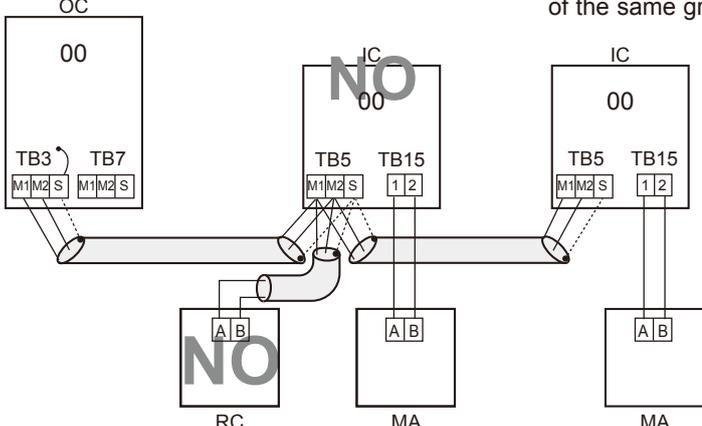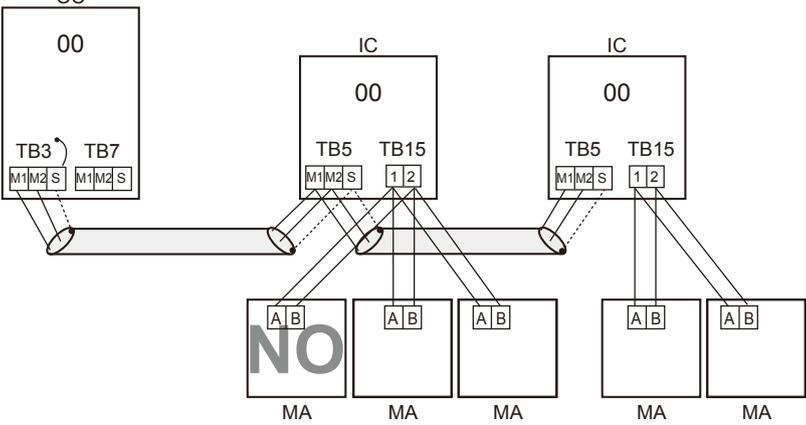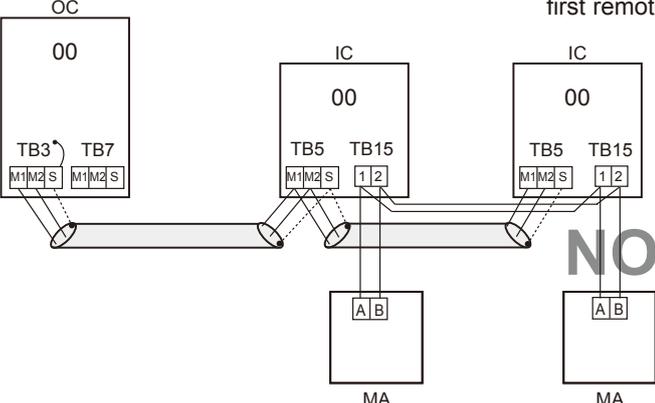

Permissible Lengths	Prohibited items
<p>Longest transmission cable length:  <math>L_1 + L_2 \leq 200 \text{ m}</math> (1.25 mm<sup>2</sup>)            MA remote controller cable length:  <math>l_1, l_2 \leq 200 \text{ m}</math> (0.3 to 1.25 mm<sup>2</sup>)</p>	<p>The MA remote controller and the M-NET remote controller cannot be used together with the indoor unit of the same group.</p> 
<p>Longest transmission cable length:  <math>L_1 + L_2 \leq 200 \text{ m}</math> (1.25 mm<sup>2</sup>)            MA remote controller cable length:  <math>l_3 + l_4, l_5 + l_6 \leq 200 \text{ m}</math>            (0.3 ~ 1.25 mm<sup>2</sup>)</p>	<p>3 MA remote controller or more cannot be connected with the indoor unit of the same group.</p> 
<p>Longest transmission cable length:  <math>L_1 + L_2 \leq 200 \text{ m}</math> (1.25 mm<sup>2</sup>)            MA remote controller cable length:  <math>l_7 + l_8 \leq 200 \text{ m}</math> (0.3 to 1.25 mm<sup>2</sup>)</p>	<p>The second MA remote controller is connected with the terminal block (TB15) for the MA remote controller of the same indoor unit (IC) as the first remote control.</p> 

D. Example of a group operation with 2 or more outdoor units and a MA remote controller.  
(Address settings are necessary.)

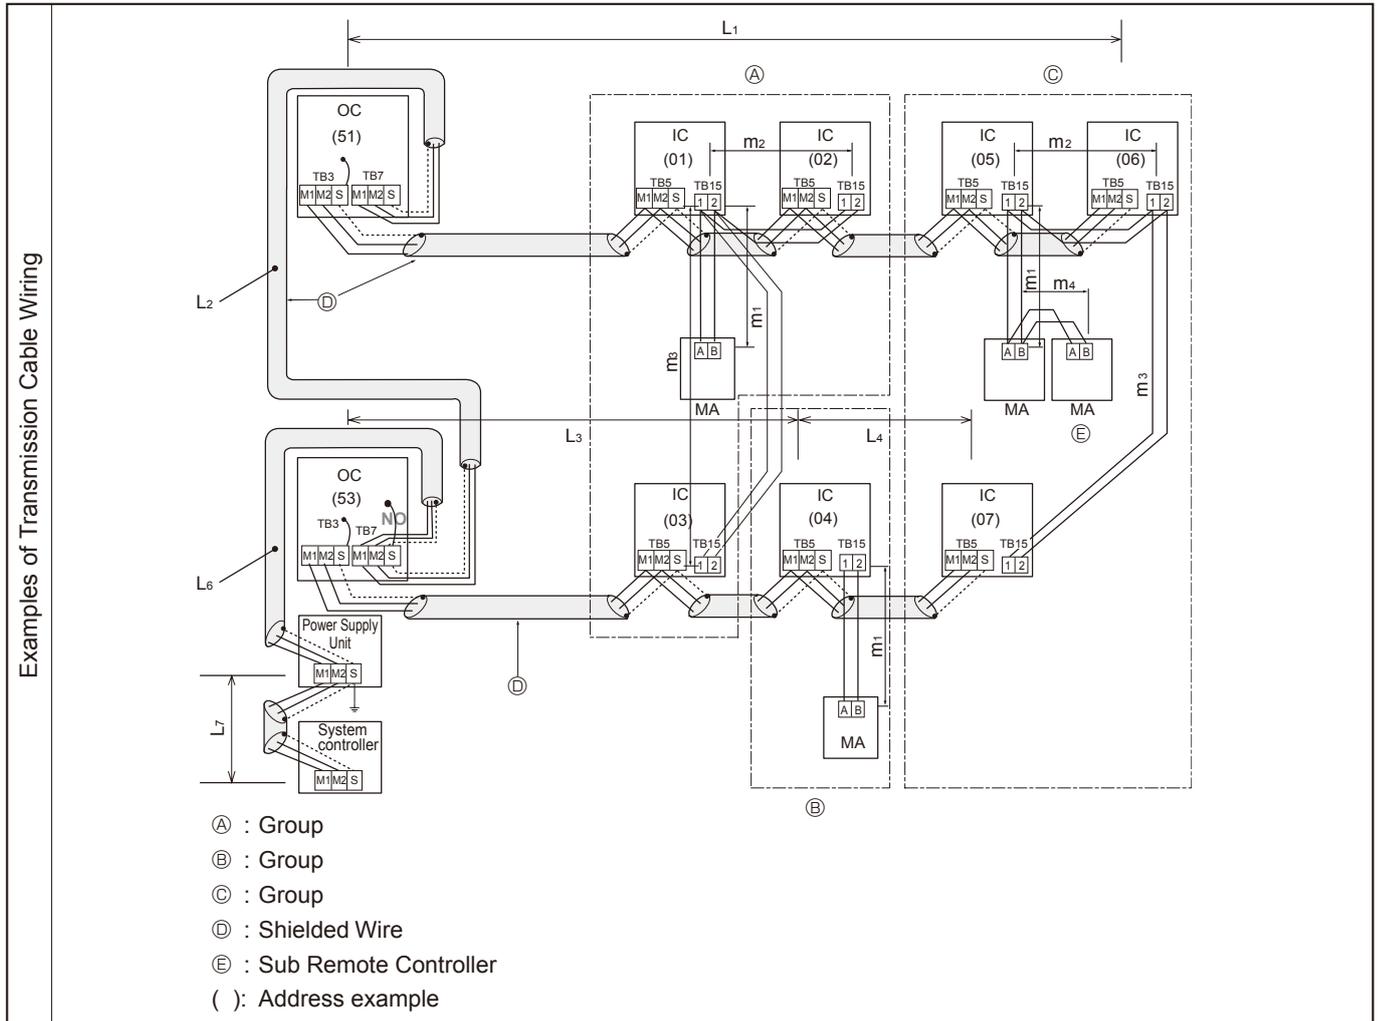


- Wiring Method Address Settings
- Always use shielded wire when making connections between the outdoor unit (OC) and the indoor unit (IC), as well for all OC-OC, and IC-IC wiring intervals.
  - Use feed wiring to connect terminals M1 and M2 and the ground terminal on the transmission cable terminal block (TB3) of each outdoor unit (OC) to terminals M1 and M2 on the terminal S on the transmission cable block of the indoor unit (IC).
  - Connect terminals M1 and M2 on the transmission cable terminal block of the indoor unit (IC) that has the most recent address within the same group to the terminal block on the remote controller (RC).
  - Connect together terminals M1, M2 and terminal S on the terminal block for centralized control (TB7) for the outdoor unit (OC).
  - DO NOT change the jumper connector CN41 on MULTI controller circuit board.
  - The earth processing of S terminal for the centralized control terminal block (TB7) is unnecessary. Connect the terminal S on the power supply unit with the earth.
  - Set the address setting switch as follows.
- | Unit                   | Range      | Setting Method   |
|------------------------|------------|--|
| IC (Main)              | 01 to 00   | Use the smallest address within the same group of indoor units.  |
| IC (Sub)               | 01 to 50   | Use an address, other than the IC (Main) in the same group of indoor units. This must be in sequence with the IC (Main).   |
| Outdoor Unit           | 51 to 100  | Use the smallest address of all the indoor units plus 50. The address automatically becomes "100" if it is set as "01-50". |
| Main Remote Controller | 101 to 150 | Set at an IC (Main) address within the same group plus 100.  |
| Sub Remote Controller  | 151 to 200 | Set at an IC (Main) address within the same group plus 150.  |
| MA Remote Controller   | —          | Address setting is not necessary. (Main/ sub setting is necessary.)  |
- The group setting operations among the multiple indoor units is done by the remote controller (RC) after the electrical power has been turned on.
  - When connecting PWFY unit
    - For PWFY series, do not set up group connection with other indoor units.
    - LOSSNAY is not available for use with PWFY series.
    - Use a WMA remote controller for operation of PWFY series.
- For more details, refer to the service manual for PWFY series.

• Name, Symbol, and the Maximum Units for Connection

Permissible Length

Longest length via outdoor unit (M-NET cable):  $L_1+L_2+L_3+L_4$  and  $L_1+L_2+L_6+L_7 \leq 500$  m (1.25 mm<sup>2</sup> more)  
 Longest transmission cable length (M-NET cable):  $L_1$  and  $L_3+L_4$  and  $L_6$  and  $L_2+L_6$  and  $L_7 \leq 200$  m (1.25 mm<sup>2</sup> or more)  
 Remote controller cable length:  $m_1$  and  $m_1+m_2+m_3$  and  $m_1+m_2+m_3+m_4 \leq 200$  m (0.3 to 1.25 mm<sup>2</sup>)

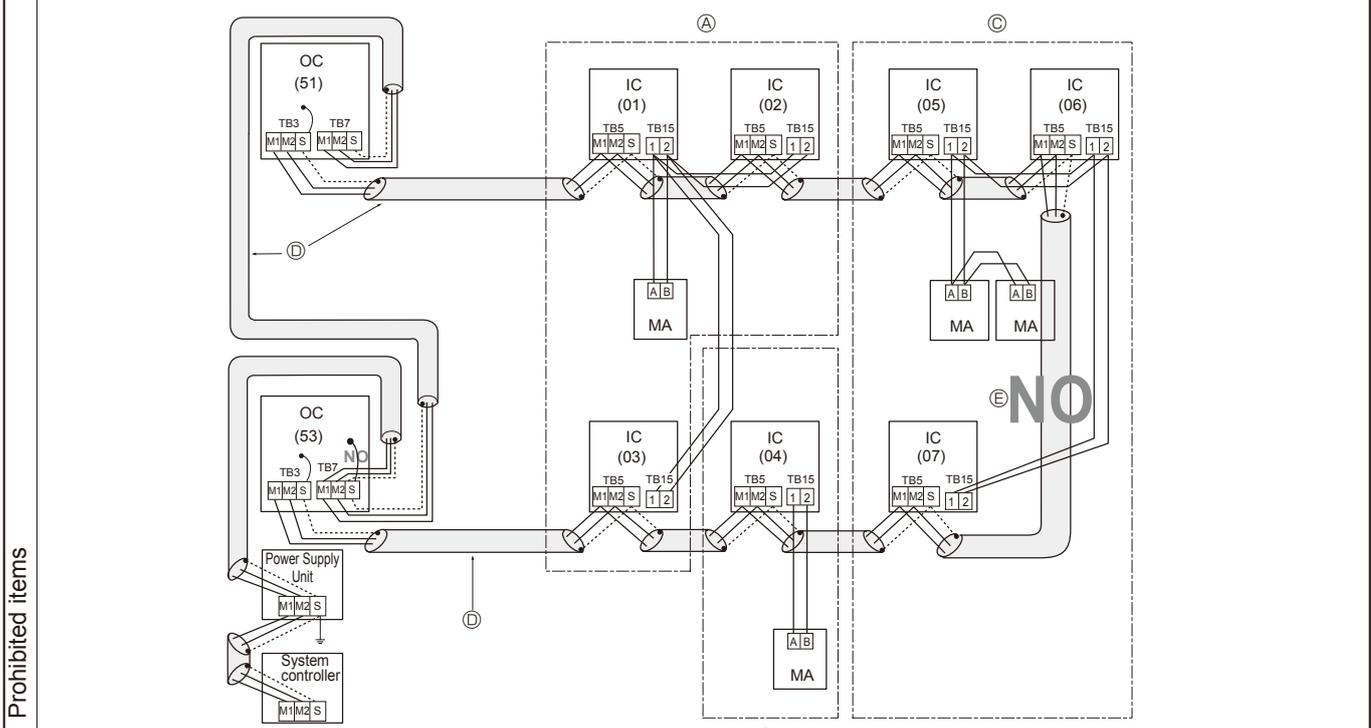

- Ⓐ : Group
- Ⓑ : Group
- Ⓒ : Group
- Ⓓ : Shielded Wire
- Ⓔ : Sub Remote Controller
- ( ) : Address example

- Never connect together the terminal blocks (TB5) for transmission wires for indoor units (IC) that have been connected to different outdoor units (OC).
- M-NET remote controller and MA remote controller cannot be connected with the indoor unit of the same group wiring together.


## 8-1. CHECK POINTS FOR TEST RUN

### 8-1-1. Procedures before test run

- (1) Before a test run, make sure that the following work is completed.
  - Installation related :
    - Make sure that the panel of cassette type and electrical wiring are done.
    - Otherwise electrical functions like auto vane will not operate normally.
  - Piping related :
    - Perform leakage test of refrigerant and drain piping.
    - Make sure that all joints are perfectly insulated.
    - Check stop valves on both liquid and gas side for full open.
  - Electrical wiring related :
    - Check ground wire, transmission cable, remote controller cable, and power supply cable for secure connection.
    - Make sure that all switch settings of address or adjustments for special specification systems are correctly settled.
- (2) Safety check :
  - With the insulation tester of 500V, inspect the insulation resistance.
  - Do not touch the transmission cable and remote controller cable with the tester.
  - The resistance should be over 1.0 MΩ. Do not proceed inspection if the resistance is under 1.0 MΩ.
  - Inspect between the outdoor unit power supply terminal block and ground first, metallic parts like refrigerant pipes or the electrical box next, then inspect all electrical wiring of outdoor unit, indoor unit, and all linked equipment .
- (3) Before operation :
  - a) Turn the power supply switch of the outdoor unit to on for compressor protection. For a test run, wait at least 12 hours from this point.
  - b) Register control systems into remote controller(s). Never touch the on/off switch of the remote controller(s). Refer to “ 8-1-2. Special Function Operation and Settings (for M-NET Remote Controller)” as for settings. In MA remote controller(s), this registration is unnecessary.
- (4) More than 12 hours later from power supply to the outdoor unit, turn all power switch to on for the test run. Perform test run according to the “Operation procedure” table of the bottom of this page. While test running, make test run reports .

#### 8-1-1-1. Test run for M-NET Remote controller

When you deliver the unit after the test run, instruct the end user for proper usage of the system using owners' manual and the test run report you made to certificate normal operation. If abnormalities are detected during test run, refer to “8-1-3 Countermeasures for Error During Test Run”. As for DIP switch setting of outdoor unit, refer to “8-5. INTERNAL SWITCH FUNCTION TABLE”.

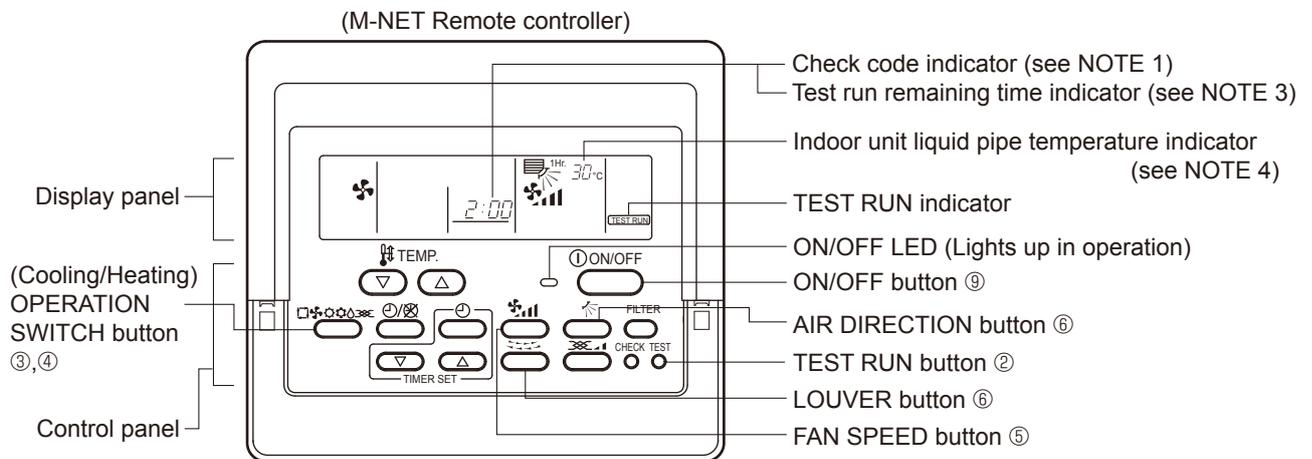


#### Operation procedure

①	Turn on the main power supply of all units at least 12 hours before test run. "HO" appears on display panel for 3 min.
②	12 hours later, press TEST RUN button twice to perform test run. "TEST RUN " appears on display panel.
③	Press OPERATION SWITCH button to make sure that air blows out.
④	Select Cooling (or Heating) by OPERATION SWITCH button to make sure that cool (or warm) air blows out.
⑤	Press Fan speed button to make sure that fan speed is changed by the button.
⑥	Press AIR DIRECTION button or LOUVER button to make sure that air direction is adjustable (horizontal, downward, upward, and each angle).
⑦	Check outdoor fans for normal operation.
⑧	Check interlocked devices (like ventilator) for normal operation, if any. This is the end of test run operation.
⑨	Press ON/OFF button to stop and cancel test run.

#### Notes:

1. If check code appears on remote controller or remote controller malfunctions, refer to “ 8-1-3 Countermeasures for Error During Run”.
2. During test run operation, 2-hour off timer activates automatically and remaining time is on remote controller and test run stops 2 hours later.
3. During test run, the indoor liquid pipe temperature is displayed on remote controller instead of room temperature.
4. Depending on a model, “This function is not available” appears when air direction button is pressed. However, this is not malfunction.



8-1-1-2. Test run for wired remote controller <PAR-31MAA>

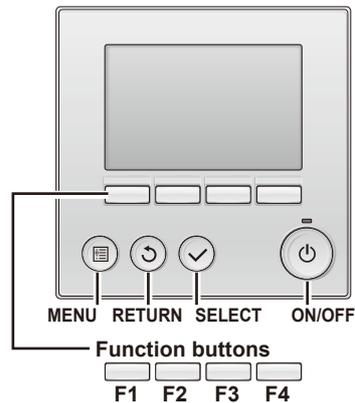



① Select "Service" from the Main menu, and press the button.



Select "Test run" with the **F1** or **F2** button, and press the button.

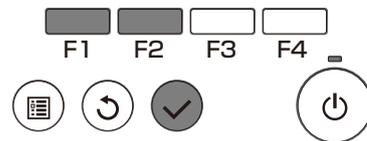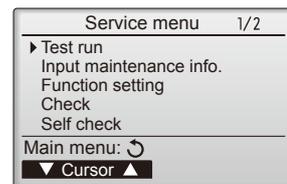

② Select "Test run" with the **F1** or **F2** button, and press the button.

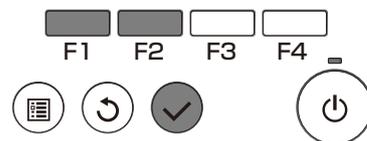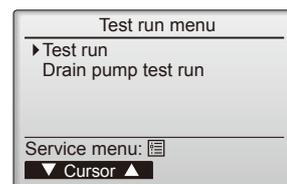

**Test run operation**



Press the **F1** button to go through the operation modes in the order of "Cool and Heat".

- Cool mode:** Check the cold air blow off.
- Heat mode:** Check the heat blow off.

Check the operation of the outdoor unit fan, also.



Press the button and open the Vane setting screen.

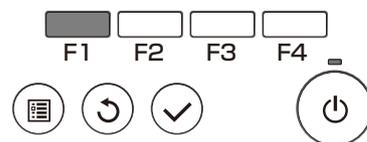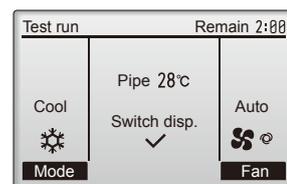

**Auto vane check\***



Check the auto vane with the **F1** **F2** buttons.



Press the button to return to "Test run operation".



Press the button.

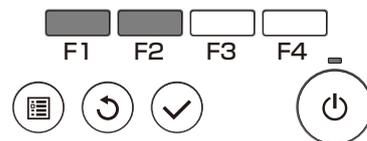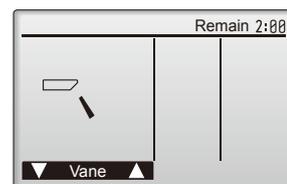

When the test run is completed, the "Test run menu" screen will appear. The test run will automatically stop after 2 hours.

\*The function is available only for the model with vanes.

### 8-1-2. Special Function Operation and Settings (for M-NET Remote Controller)

- It is necessary to perform "group settings" and "paired settings" at making group settings of different refrigerant systems (multiple outdoor unit).
- (A) Group settings: Enter the indoor unit controlled by the remote controller, check the content of entries, and clear entries, etc.
- (B) Paired settings: Used to set the linked operation of a Lossnay unit.

(1) Entering address: Follow the steps below to enter the addresses of the indoor unit using the remote controller.

#### a) Group settings

- Turning off the remote controller: Press the ON/OFF button to stop operation (the indicator light will go off).
- Changing to indoor unit address display mode: If the FILTER and  buttons on the remote controller are pressed simultaneously and held for 2 seconds, the display shown in Figure 1 will appear.
- Changing address: Press the temperature adjustment  buttons to change the displayed address to the address to be entered.
- Entering the displayed address: Press the TEST RUN button to enter the indoor unit with the displayed address. The type of the unit will be displayed as shown in Figure 2 if entry is completed normally. If a selected indoor unit does not exist, an error signal will be displayed as shown in Figure 3. When this happens, check whether the indoor unit actually exists and perform entry again.
- Returning to the normal mode after completing entry: Press the FILTER and  buttons simultaneously and hold for 2 seconds to return to the normal mode.

Figure 1. (A) Group setting display






Figure 2. Normal completion of entry



Type of unit is displayed.

Figure 3. Entry error signal



Flashing "88" indicates entry error.


#### b) Paired Settings

- Turn off the remote controller: Press the remote controller's ON/OFF button to turn it off (the indicator light will go off).
- Put in indoor unit address display mode: Press the FILTER and  buttons on the remote controller simultaneously and hold for 2 seconds.
- Note: The above steps are the same as when making group settings (A).
- Changing to the linked operation unit address display state: The display shown in Figure 4 will appear when the  button on the remote control is pressed.
- Displaying the address of the Lossnay unit and linked indoor unit: In this situation, the indoor unit number will be the lowest address of the group. The Lossnay unit will not operate if this setting is incorrect.

Notes:


- If the temperature adjustment  buttons are pressed, the address may be changed to the indoor unit that is to be linked.
  - If the time setting  buttons are pressed, the address of the linked units may be changed to the address where it is desired to enter the Lossnay.
- Linking the Lossnay and the indoor unit: The display shown in Figure 5 will appear when the TEST RUN button is pressed. The indoor unit whose address is displayed and the Lossnay unit with a linked address will operate in a linked manner.
  - Note:
    - If it is desired to display the address of the Lossnay in the indoor unit address, display the indoor unit address in the linked unit address, and the above content will also be recorded.
    - Apart from the indoor unit with the lowest address in the group, display and enter the addresses of the other indoor unit that are to be linked with the Lossnay unit.
  - Returning to the normal mode after completing entry: Press the FILTER and  buttons on the remote controller simultaneously and hold for 2 seconds to return to the normal mode.

Figure 4. (B) Making paired settings



The addresses of indoor unit and linked units are displayed simultaneously.

Figure 5. Completing normal entry

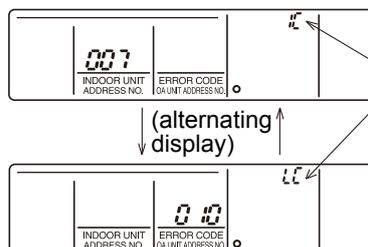

These alternating IC or LC displays will appear when entry is completed normally.

A flashing "88" will appear if there is a problem with the entry (indicating that the unit does not exist).

(2) Address check: Refer to section (1) regarding address entry.

**a) In making group settings:**

- Turn off the remote controller: Press the remote controller's ON/OFF button to stop operation (the indicator light will go off).
- Locate the indoor unit address display mode: Press the FILTER and  buttons on the remote controller simultaneously and hold for 2 seconds.
- Display indoor unit address: The entered indoor units address and type will be displayed each time the button is pressed. Note that when 1 entry is made, only 1 address will be displayed no matter how many times the  button is pressed.
- Returning to the normal mode after completing check: Simultaneously press the FILTER and  buttons on the remote controller and hold for 2 seconds to return to the normal mode.

**b) In making paired settings:**


- Turn off the remote controller: Press the remote controller's ON/OFF button to stop operation (the indicator light will go off).
- Put in indoor unit address display mode: Press the FILTER and  buttons on the remote controller simultaneously and hold for 2 seconds.
- Changing to the linked operation unit address display state: Press the  button on the remote control.
- Displaying the address of the indoor unit to be checked: Change the address to that of the indoor unit to be checked by pressing the temperature adjustment buttons .
- Displaying the address of the linked Lossnay unit: Press the  button to display the addresses of the linked Lossnay and indoor unit in alternation.
- Displaying the addresses of other entered units: The addresses of the other entered units will be displayed in alternating fashion after resetting the  button again.
- Returning to the normal mode after completing the check: Simultaneously press the FILTER and  buttons on the remote controller and hold for 2 seconds to return to the normal mode.

(3) Clearing an address: Refer to section (1) regarding the address entry and section (2) regarding checking addresses.

**a) In making group settings:**


- Turn off the remote controller: The procedure is the same as described in **a)** under (2) Address check.
- Put in the indoor unit address display mode: The procedure is the same as described in **a)** under (2) Address check.
- Displaying the indoor unit address to be cleared: The procedure is the same as described in **a)** under (2) Address check.
- Clearing indoor unit address : Pressing the  button on the remote controller twice will clear the address entry of the displayed indoor unit, resulting in the display shown in Figure 6.  
The display shown in Figure 7 will appear if an abnormality occurs and the entry is not cleared.  
Please repeat the clearing procedure.
- Returning to the normal mode after clearing an address: The procedure is the same as described in **a)** under (2) Address check.

Figure 6. Display after address has been cleared normally



"-" will appear in the room temperature display location.

Figure 7. Display when an abnormality has occurred during clearing




"88" will appear in the room temperature display location.

**b) In making paired settings:**

- Turn off the remote controller: The procedure is the same as described in **a)** under (2) Address check.
- Put into the indoor unit address display mode: The procedure is the same as described in **a)** under (2) Address check.
- Put into the linked unit address display mode: The procedure is the same as described in **a)** under (2) Address check.
- Display the address of the Lossnay unit or the indoor unit to be cleared.
- Deleting the address of a linked indoor unit: Pressing the  button on the remote controller twice will clear the address entry of the displayed indoor unit, resulting in the display shown in Figure 8.
- Returning to the normal mode after clearing an address: The procedure is the same as described in **a)** under (2) Address check.

Figure 8. Display after address has been cleared normally

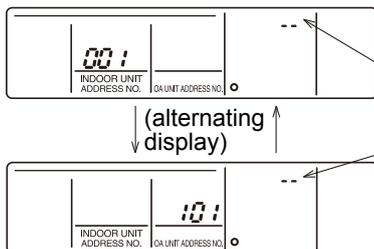

"-" will appear in the unit type display location when an address has been cleared normally.

"88" will appear in the unit type display location when an abnormality has occurred during clearing.

### 8-1-3. Countermeasures for Error During Test Run

- If a problem occurs during test run, a code number will appear on the remote controller (or LED on the outdoor unit), and the air conditioning system will automatically cease operating.

Determine the nature of the abnormality and apply corrective measures.

Check code	Trouble	Detected Unit			Remarks
		Indoor	Outdoor	Remote Controller	
0403	Serial communication error		○		Outdoor multi controller circuit board – Power circuit board communication trouble
1102	Compressor temperature		○		Check delay code 1202
1302	High pressure		○		Check delay code 1402
1500	Superheat due to low discharge temperature		○		Check delay code 1600
1501	Refrigerant shortage		○		Check delay code 1601
	Blocked valve in cooling mode		○		Check delay code 1501
1508	4-way valve trouble in heating mode		○		Check delay code 1608
2500	Water leakage	○			
2502	Drain over flow protection	○			
2503	Drain sensor abnormality	○			
4100	Compressor current interruption (locked compressor)		○		Check delay code 4350
4210	Compressor overcurrent interruption		○		
4220	Undervoltage/overvoltage/PAM error/L1open phase/power synchronization signal error		○		Check delay code 4320
4230	Heat sink temperature		○		Check delay code 4330
4250	Power module		○		Check delay code 4350
4400	Rotational frequency of outdoor fan motor		○		Check delay code 4500
5101	Air inlet thermistor trouble (TH21) or Compressor temperature thermistor (TH4) open/short	○			Check delay code 1202
	Liquid pipe temperature thermistor trouble (TH22)	○			
5102	Suction pipe temperature thermistor (TH6) open/short		○		Check delay code 1211
	Gas pipe temperature thermistor trouble (TH23)	○			
5103	Gas pipe temperature thermistor trouble (TH23)	○			
5105	Outdoor liquid pipe temperature thermistor (TH3) open/short		○		Check delay code 1205
5106	Ambient thermistor (TH7) open/short		○		Check delay code 1221
5109	HIC pipe temperature thermistor (TH2) open/short		○		Check delay code 1222
5110	Heat sink temperature thermistor (TH8) open/short		○		Check delay code 1214
5201	High pressure sensor (63HS)		○		Check delay code 1402
5202	Low pressure sensor (63LS)		○		Check delay code 1400
5701	Contact failure of drain float switch	○			
6600	Duplex address error	○	○	○	Only M-NET Remote controller is detected.
6602	Transmission processor hardware error	○	○	○	Only M-NET Remote controller is detected.
6603	Transmission bus BUSY error	○	○	○	Only M-NET Remote controller is detected.
6606	Signal communication error with transmission processor	○	○	○	Only M-NET Remote controller is detected.
6607	No ACK error	○		○	Only M-NET Remote controller is detected. *
6608	No response frame error	○		○	Only M-NET Remote controller is detected. *
6831	MA communication receive error (no receive signal)	○		○	Only MA Remote controller is detected.
6832	MA communication send error	○		○	Only MA Remote controller is detected.
6833	MA communication send error	○		○	Only MA Remote controller is detected.
6834	MA communication receive error	○		○	Only MA Remote controller is detected.
7100	Total capacity error		○		
7101	Capacity code error	○	○		
7102	Connecting excessive number of units		○		
7105	Address setting error		○		

**Note:**

When the outdoor unit detects No ACK error/No response error, an object indoor unit is treated as a stop, and not assumed to be abnormal.

\*Abnormality for PWFY series

**Self-diagnosis function**

The indoor and outdoor units can be diagnosed automatically using the self-diagnosis switch (SW1) and LED1, LED2 (LED indication) found on the outdoor multi controller circuit board.  
LED indication : Set all contacts of SW1 to OFF.


During normal operation

The LED indicates the drive state of the controller in the outdoor unit.

Bit	1	2	3	4	5	6	7	8
Indication	Compressor operated	52C	21S4	SV1	(SV2)	—	—	Always lit

**[Example]**

When the compressor and SV1 are turned during cooling operation.



Check code

0403

## Serial communication error

Abnormal points and detection methods	Causes and check points
Abnormal if serial communication between the outdoor multi controller circuit board and outdoor power circuit board is defective.	<ul style="list-style-type: none"> <li>① Wire breakage or contact failure of connector CN2 or CN4</li> <li>② Malfunction of communication circuit to power circuit board on outdoor multi controller circuit board</li> <li>③ Malfunction of communication circuit on outdoor power circuit board</li> </ul>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.


Diagnosis	Remedy
<p>Check the connection of the communication line (CN2 and CN4) between the outdoor multi controller board and power circuit board.</p> <p>Are they connected normally?</p> <p><b>No</b></p> <p><b>Yes</b></p>	<p>Connect the CN2 and CN4 properly. Replace them in case of a breakage.</p> <p>The communication circuit of either the outdoor multi controller circuit board or power circuit board is defective. If unable to identify the defective circuit;</p> <ul style="list-style-type: none"> <li>① Replace the outdoor multi controller circuit board if it doesn't recover,</li> <li>② Replace the outdoor power circuit board.</li> </ul>

# Compressor temperature trouble

Abnormal points and detection methods	Causes and check points
<p>(1) Abnormal if TH4 falls into following temperature conditions;</p> <ul style="list-style-type: none"> <li>●exceeds 110°C [230°F] continuously for 5 minutes</li> <li>●exceeds 125°C [257°F]</li> </ul> <p>(2) Abnormal if a pressure detected by the high-pressure sensor and converted to saturation temperature exceeds 40°C [104°F] during defrosting, and TH4 exceeds 110°C [230°F].</p> <p>TH4: Thermistor &lt;Compressor&gt; LEV: Electronic expansion valve</p>	<ul style="list-style-type: none"> <li>① Malfunction of stop valve</li> <li>② Over-heated compressor operation caused by shortage of refrigerant</li> <li>③ Defective thermistor</li> <li>④ Defective outdoor multi controller circuit board</li> <li>⑤ LEV performance failure</li> <li>⑥ Defective indoor controller board</li> <li>⑦ Clogged refrigerant system caused by foreign object</li> <li>⑧ Refrigerant shortage while in heating operation (Refrigerant liquid accumulation in compressor while indoor unit is OFF/thermo-OFF.)</li> </ul>


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

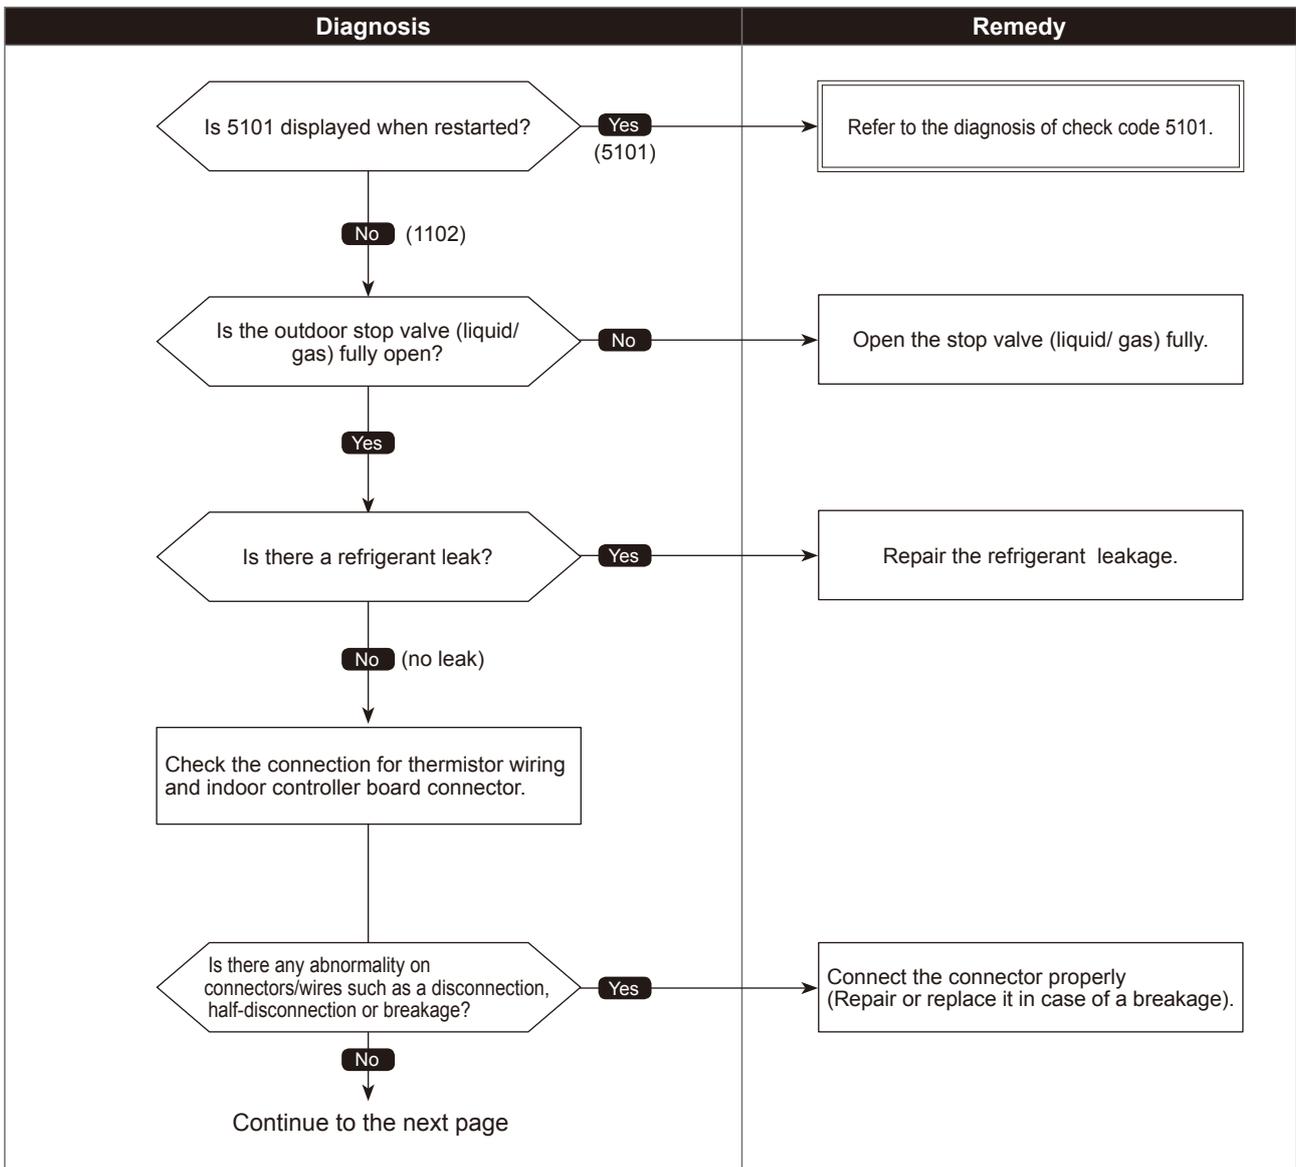

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

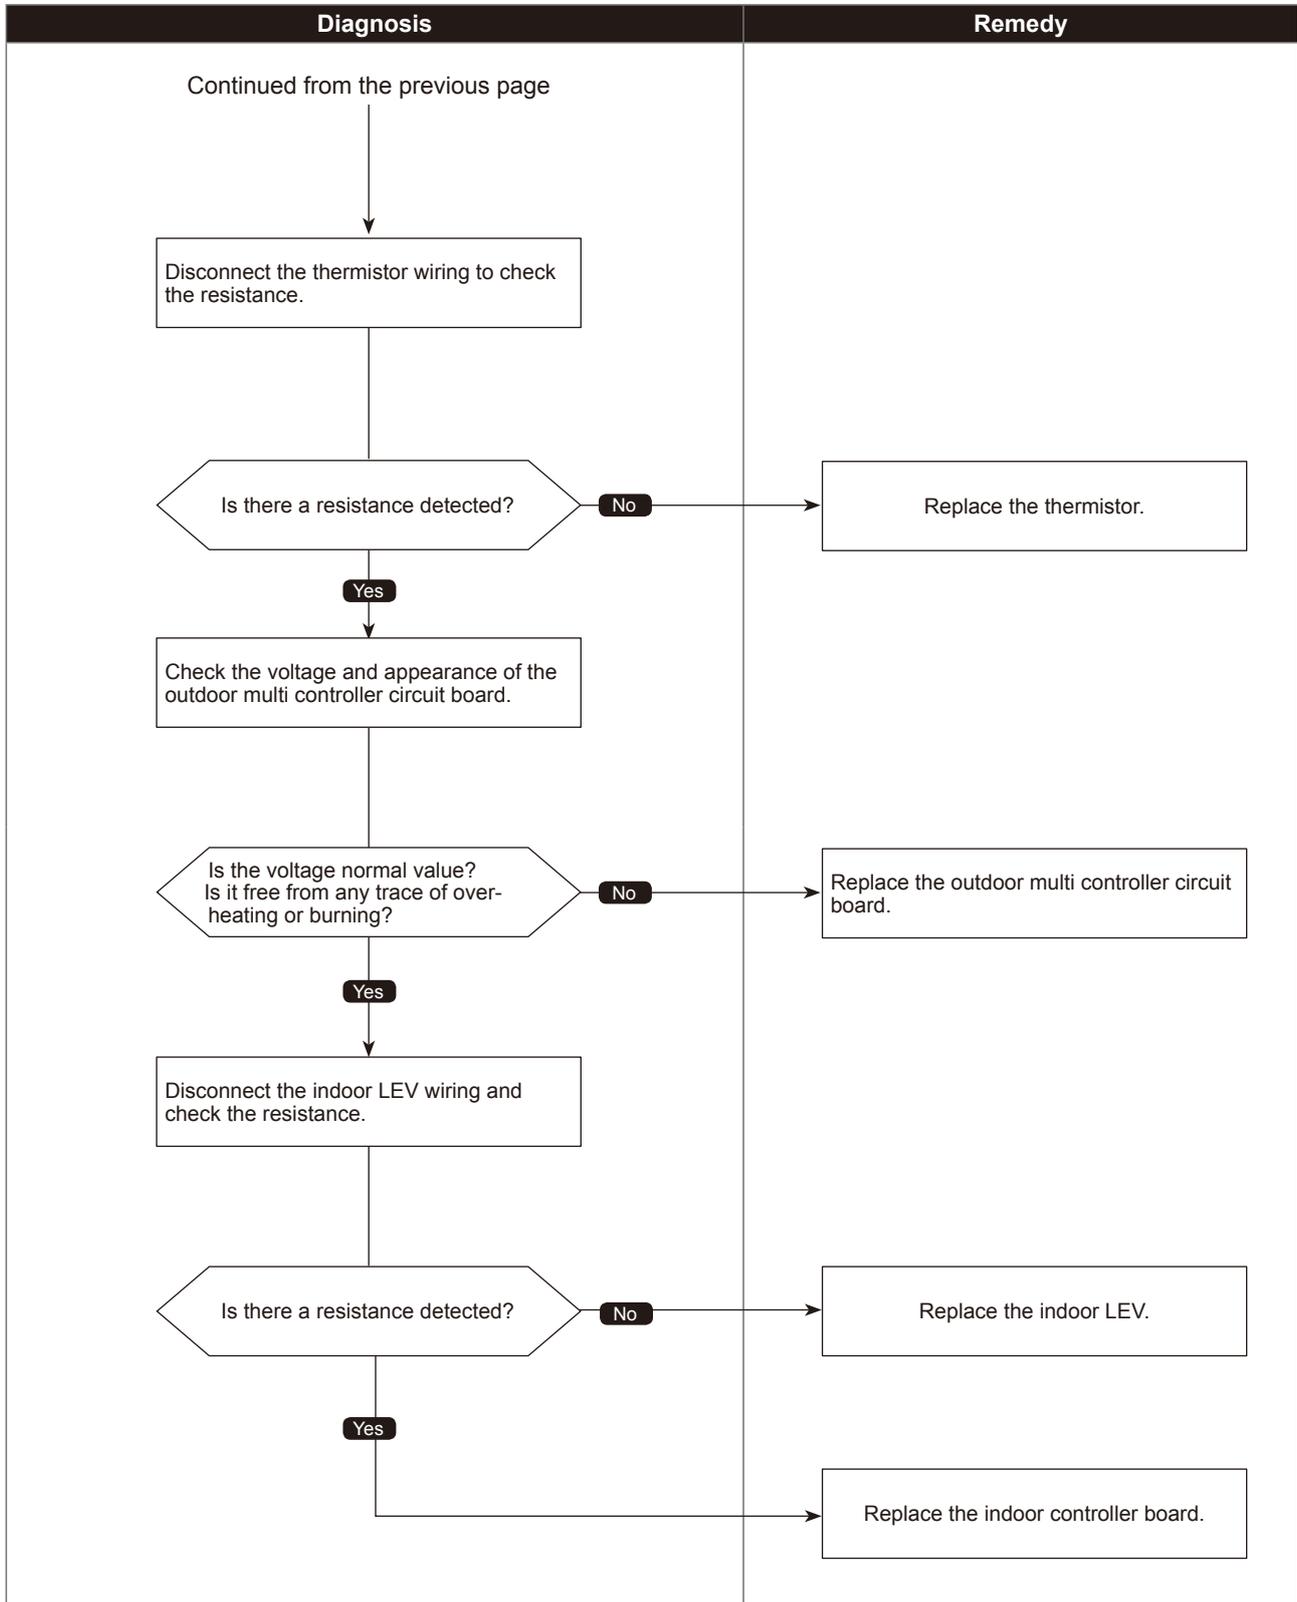


# High pressure trouble

Abnormal points and detection methods	Causes and check points
<p>&lt;63H equipped model (63HS non-equipped)&gt;                      (1) High pressure abnormality (63H operation)                      Abnormal if 63H operates(*) during compressor operation. (* 4.15 MPa)</p> <p>&lt;63HS equipped model (63H non-equipped)&gt;                      (2) High pressure abnormality (63HS detected)                      Abnormal if a pressure detected by 63HS exceeds 4.15 MPa during compressor operation.</p> <p>63H : High-pressure switch                      63HS: High-pressure sensor                      LEV : Electronic expansion valve                      SV1 : Solenoid valve                      TH7 : Thermistor &lt;Ambient&gt;</p>	<p>① Defective operation of stop valve (not fully open)                      ② Clogged or broken pipe                      ③ Malfunction or locked outdoor fan motor                      ④ Short-cycle of outdoor unit                      ⑤ Dirt of outdoor heat exchanger                      ⑥ Remote controller transmitting error caused by noise interference                      ⑦ Contact failure of the outdoor multi controller circuit board                      ⑧ Defective outdoor multi controller circuit board                      ⑨ Short-cycle of indoor unit                      ⑩ Decreased airflow, clogged filter, or dirt on indoor unit.                      ⑪ Malfunction or locked indoor fan motor.                      ⑫ Decreased airflow caused by defective inspection of outdoor temperature thermistor (It detects lower temperature than actual temperature.)                      ⑬ Indoor LEV performance failure                      ⑭ Malfunction of fan driving circuit                      ⑮ SV1 performance failure                      ⑯ Defective high-pressure sensor                      ⑰ Defective high-pressure sensor input circuit on outdoor multi controller circuit board</p>


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

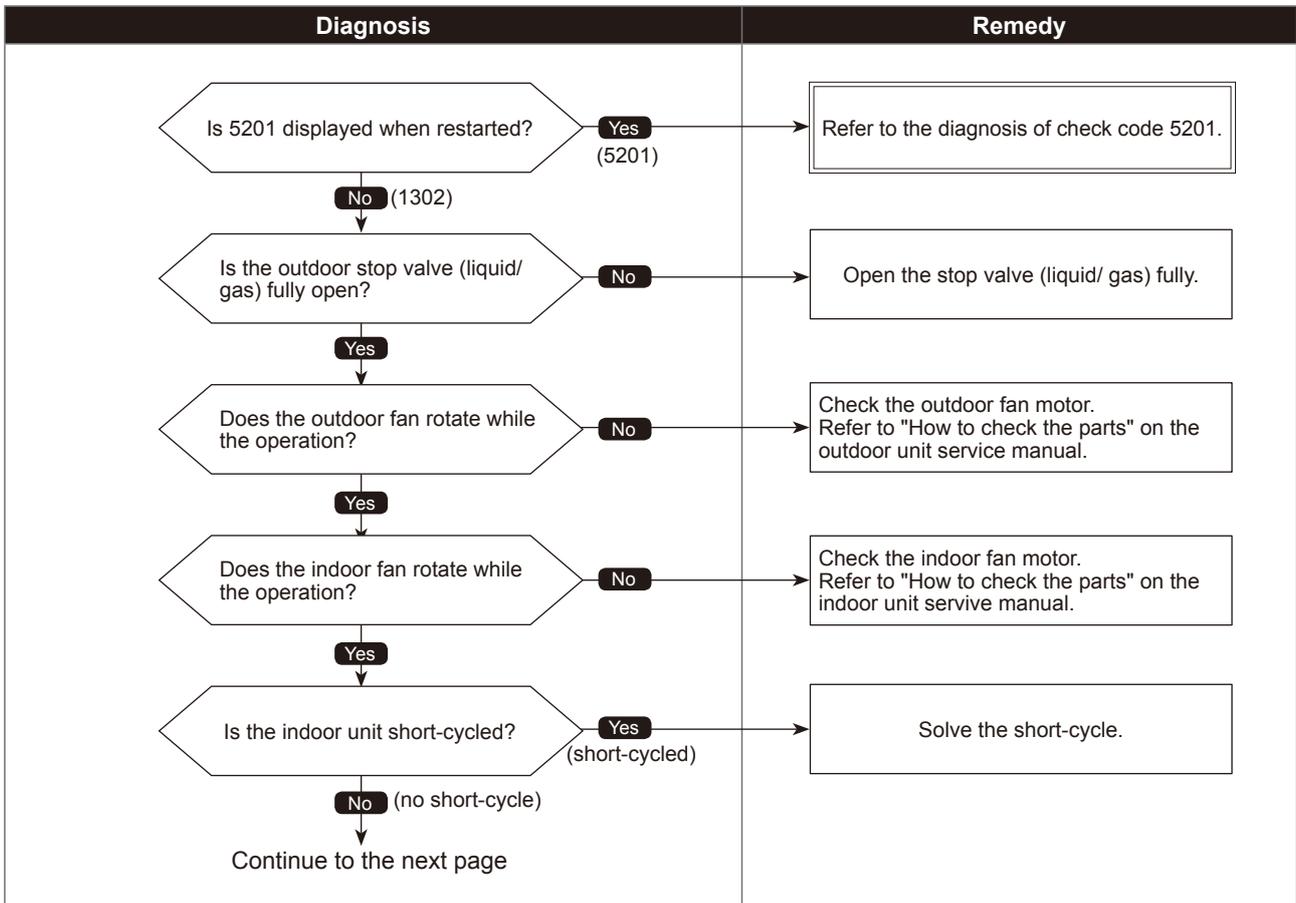


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

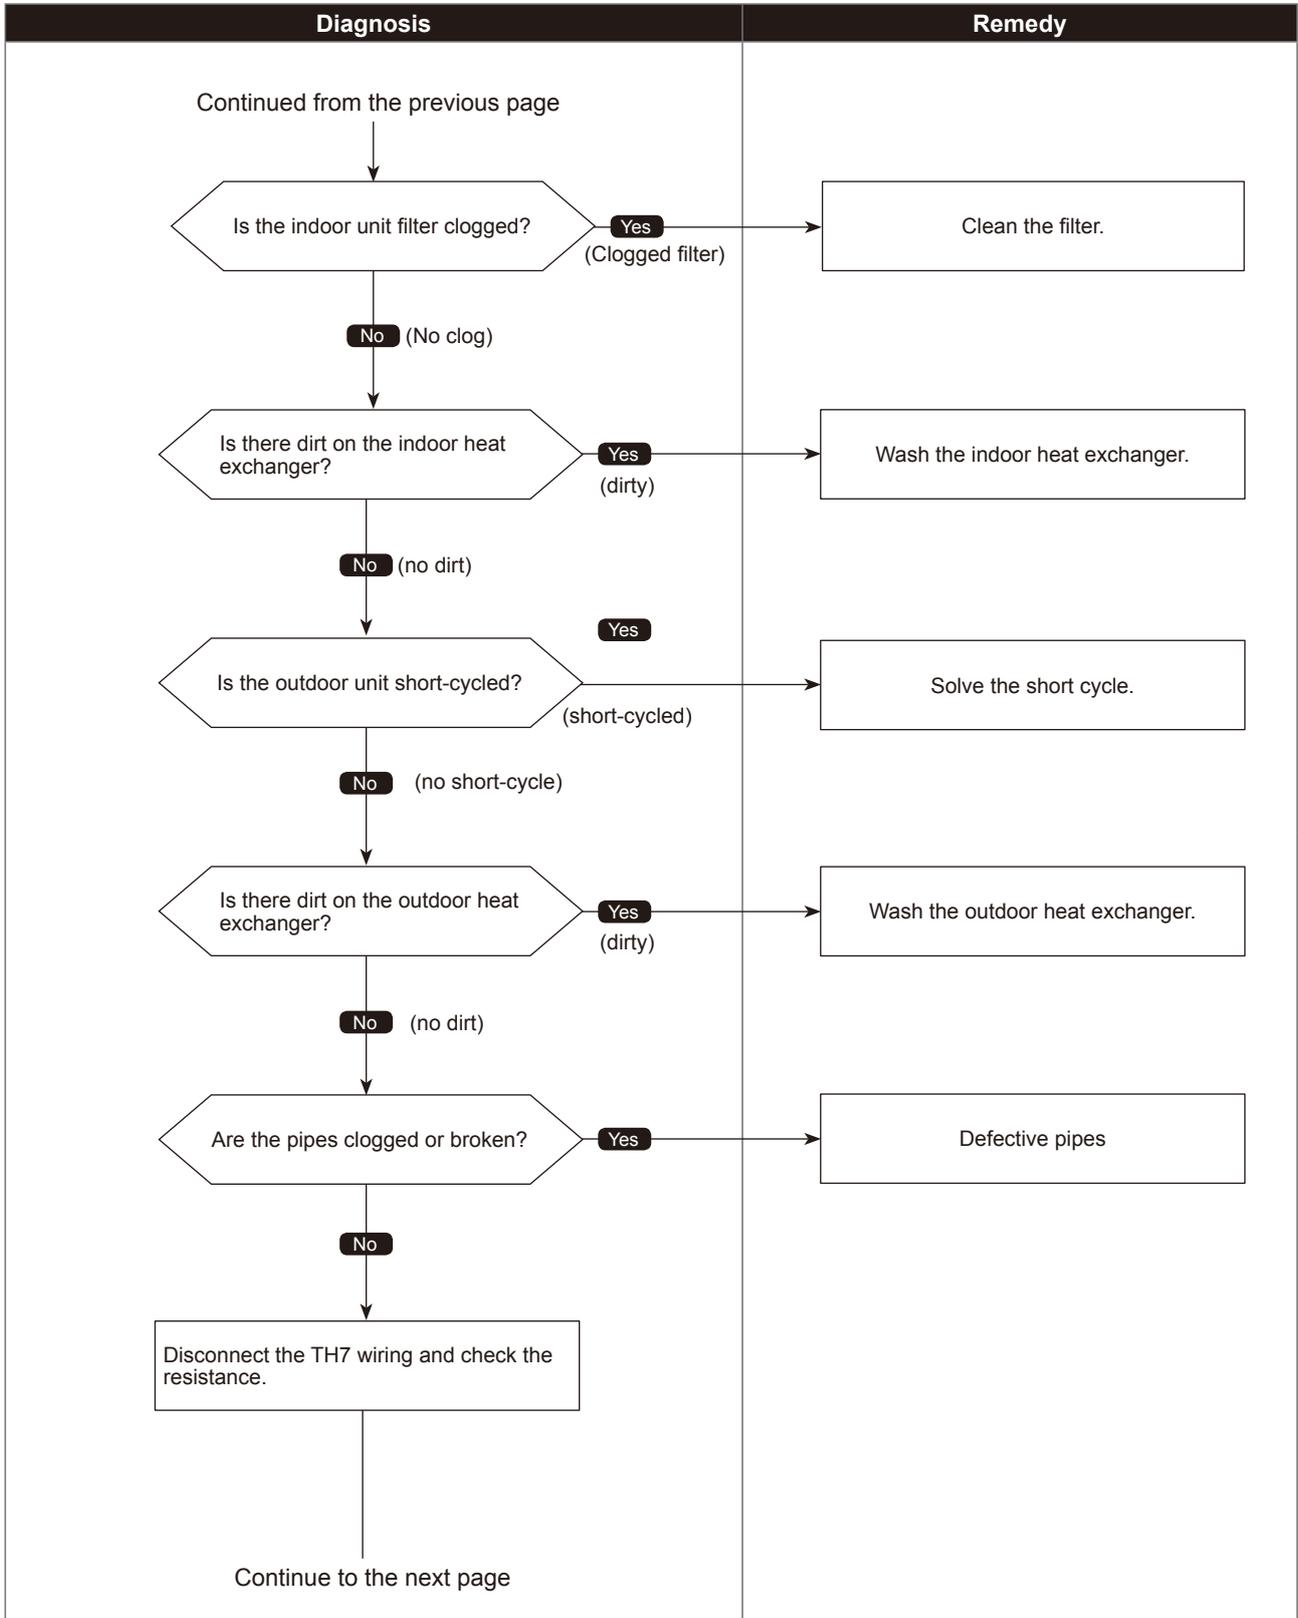


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

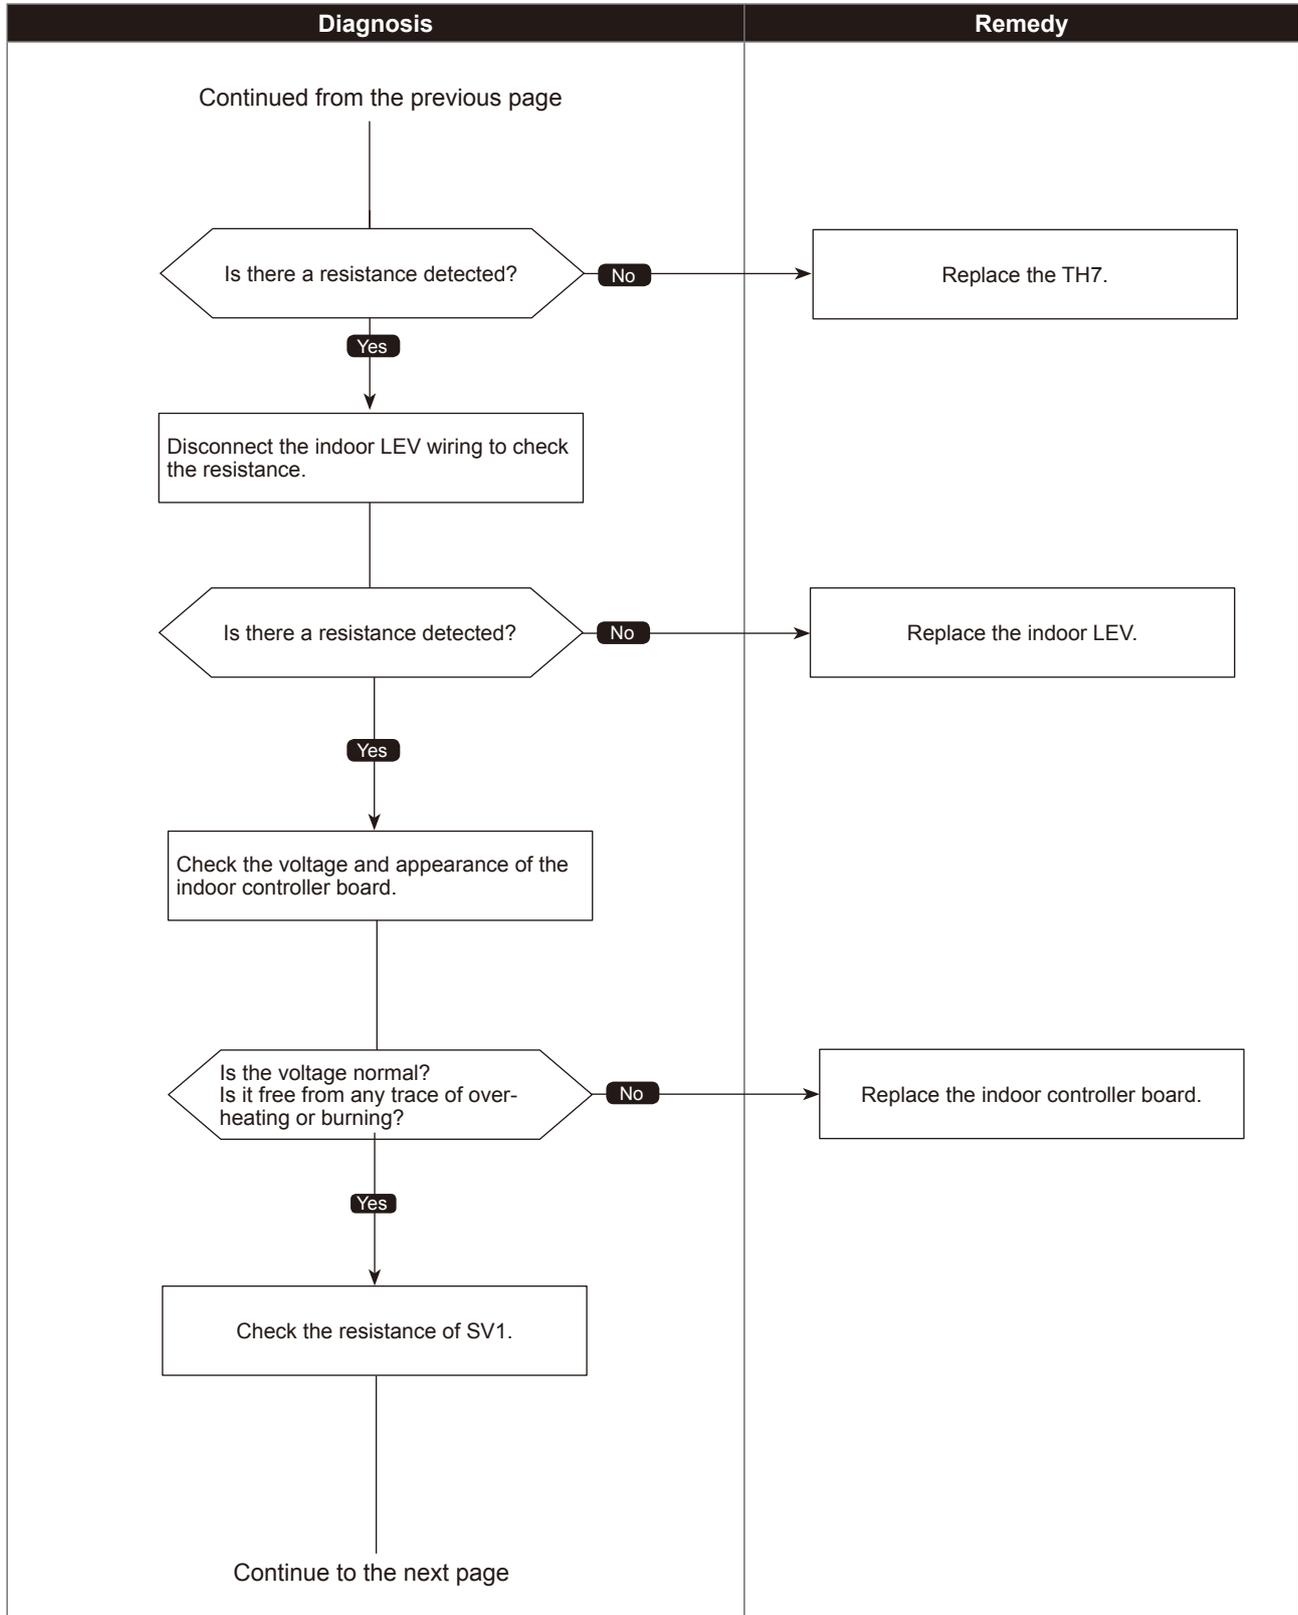

•Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

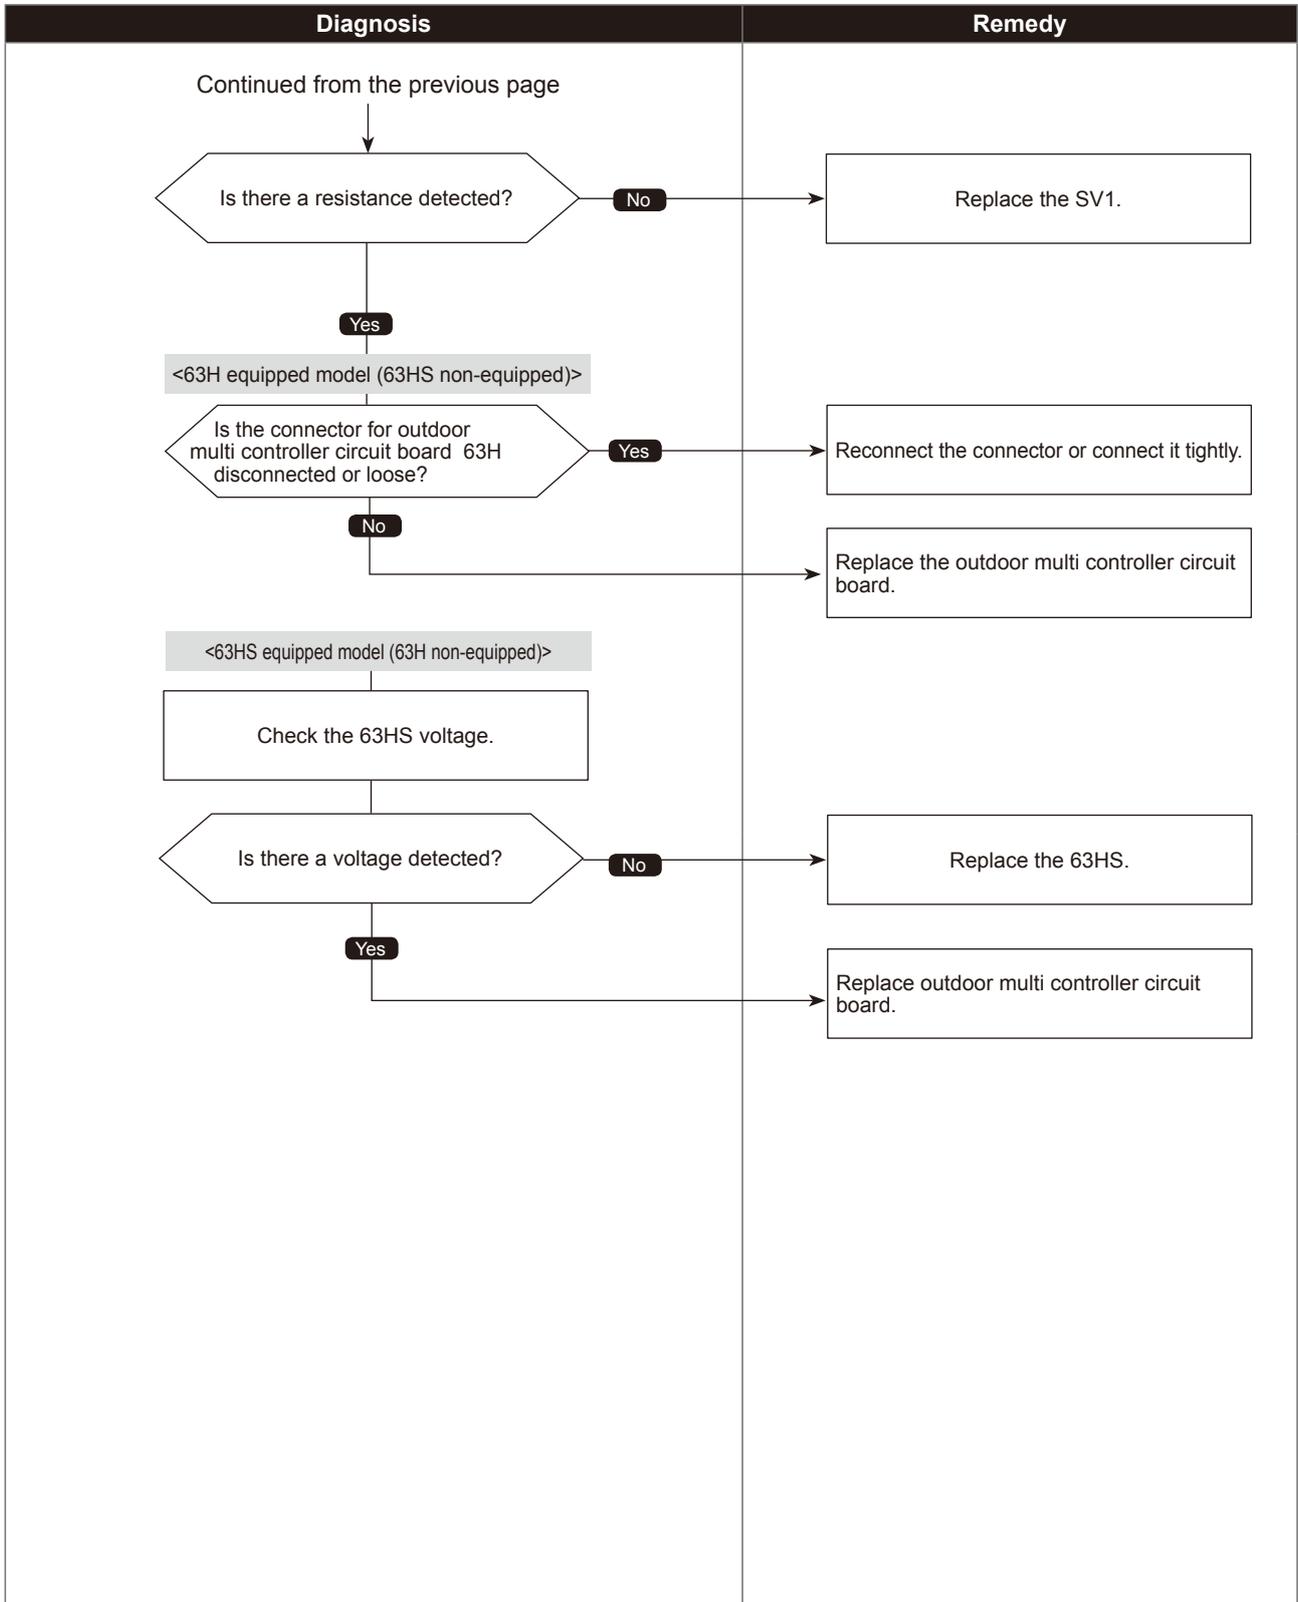


# Superheat due to low discharge temperature trouble

Abnormal points and detection methods	Causes and check points
<p>Abnormal if the discharge superheat is continuously detected less than or equal to <math>-15^{\circ}\text{C}</math> [<math>5^{\circ}\text{F}</math>]* for 5 minutes even though the indoor LEV has minimum open pulse after the compressor starts operating for 10 minutes.</p> <p>LEV : Electronic expansion valve                      TH4 : Thermistor &lt;Compressor&gt;                      63HS: High-pressure sensor</p> <p>*At this temperature, conditions for the abnormality detection will not be satisfied if no abnormality is detected on either TH4 or 63HS.</p>	<p>① Disconnection or loose connection of TH4                      ② Defective holder of TH4                      ③ Disconnection of LEV coil                      ④ Disconnection of LEV connector                      ⑤ LEV performance failure</p>


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

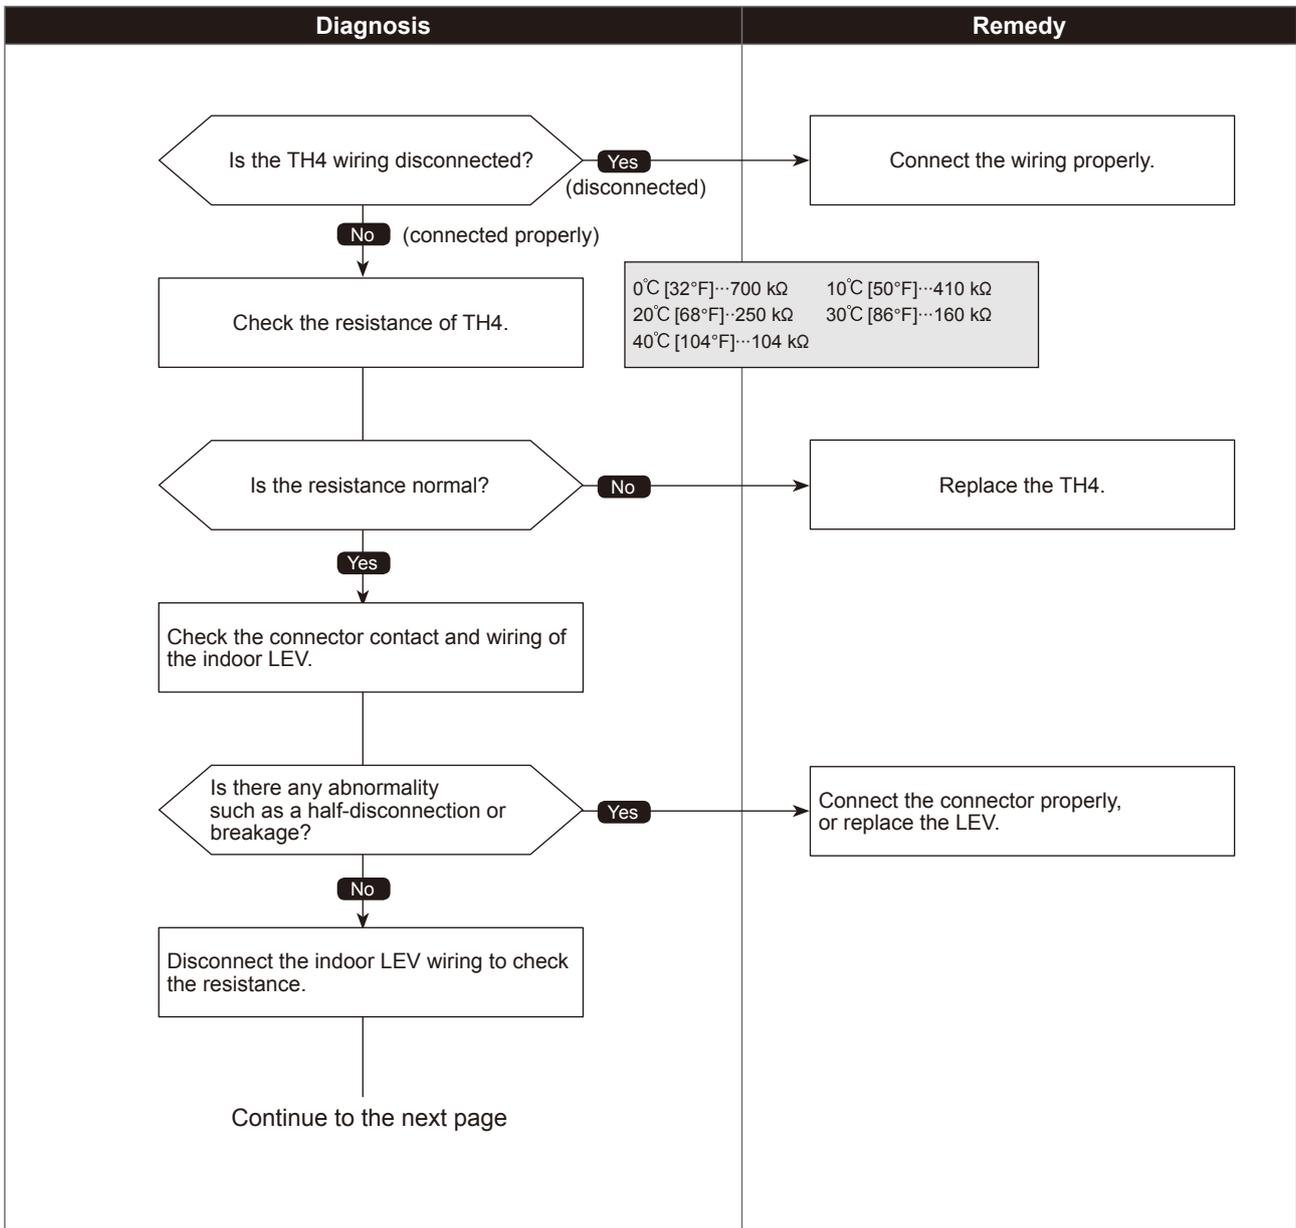

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

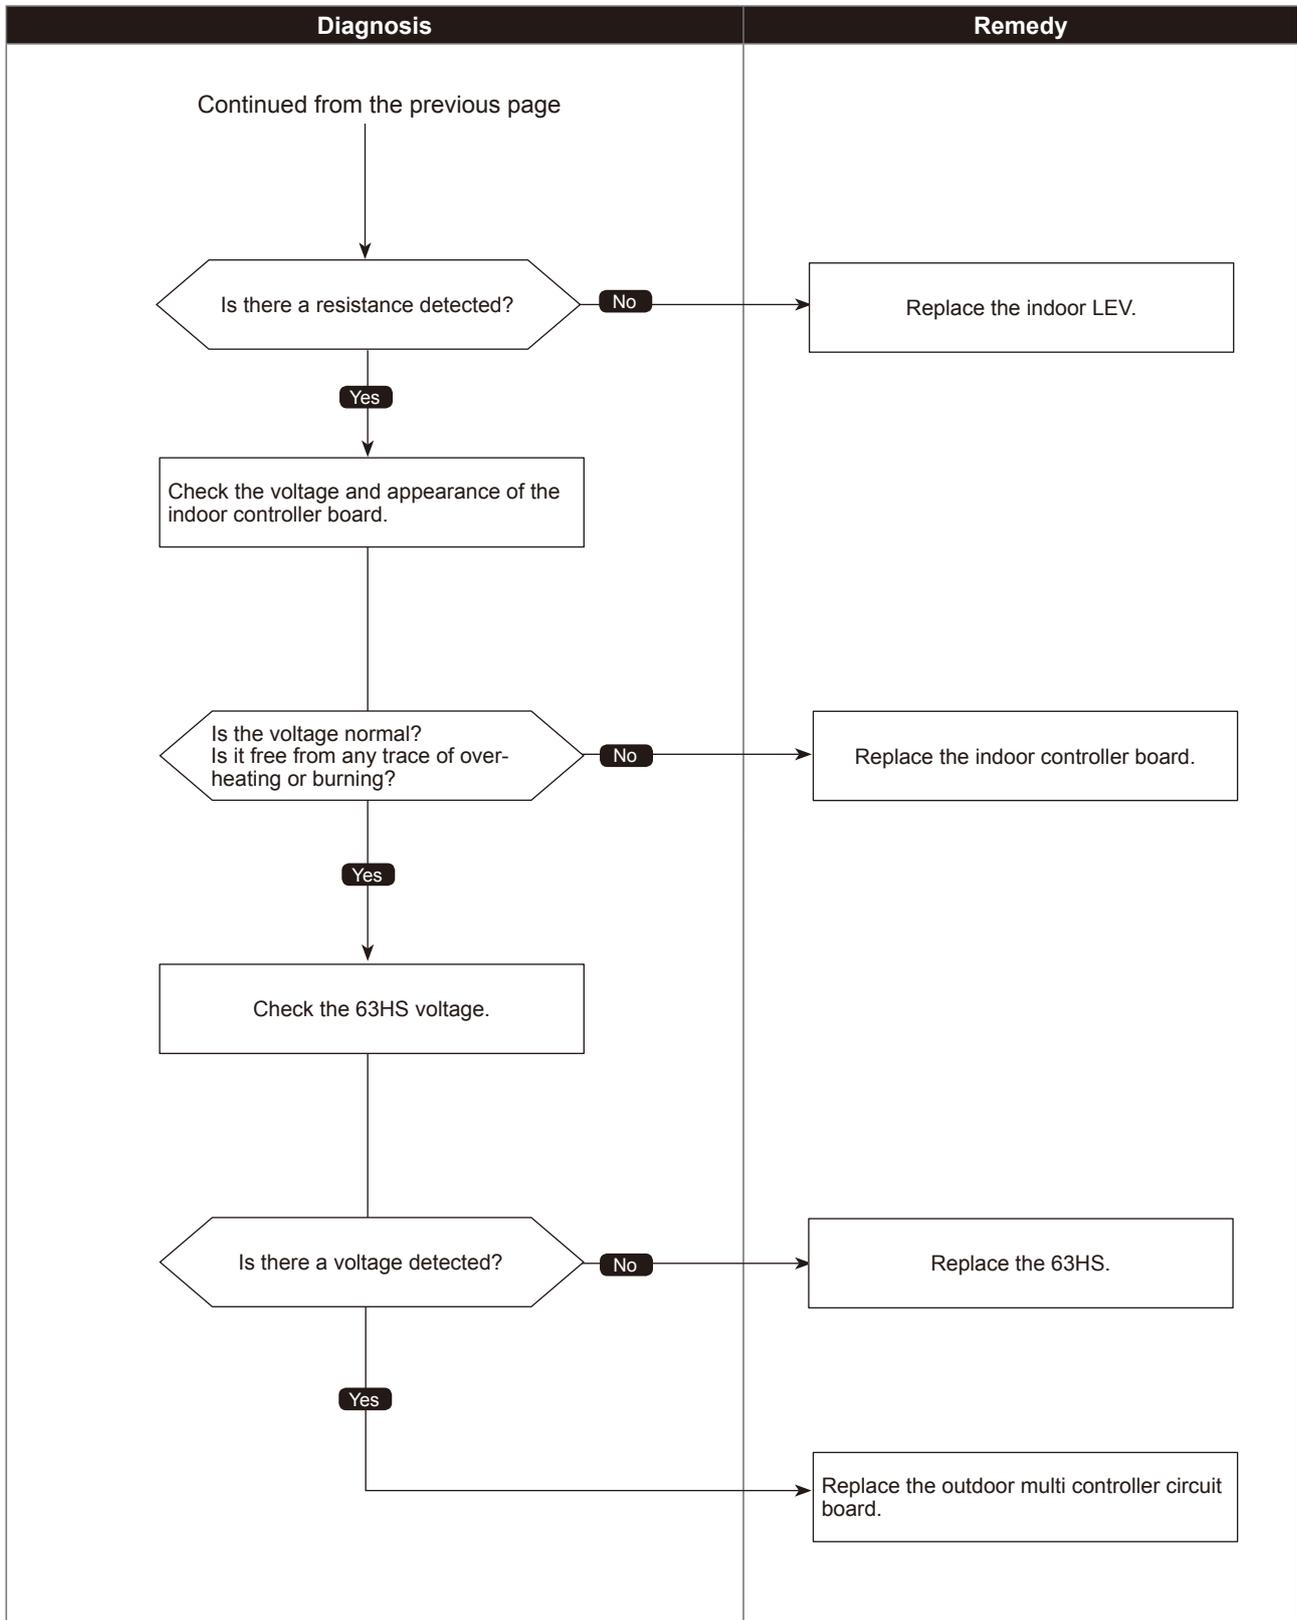


# Refrigerant shortage trouble

Abnormal points and detection methods	Causes and check points
<p>(1) Abnormal when all of the following conditions are satisfied:</p> <ol style="list-style-type: none"> <li>1. The compressor is operating in HEAT mode</li> <li>2. Discharge super heat is 80°C [176°F] or more.</li> <li>3. Difference between TH7 and the TH3 applies to the formula of (TH7-TH3 &lt; 5°C [41°F])</li> <li>4. The 63HS detects below 2.04 MPa.</li> </ol> <p>(2) Abnormal when all of the following conditions are satisfied:</p> <ol style="list-style-type: none"> <li>1. The compressor is in operation</li> <li>2. When cooling, discharge superheat is 80°C [176°F] or more When heating, discharge superheat is 90°C [194°F] or more. The High-pressure sensor detects below 2.32 MPa</li> </ol>	<ol style="list-style-type: none"> <li>① Defective operation of stop valve (not fully open)</li> <li>② Defective thermistor</li> <li>③ Defective outdoor multi controller circuit board</li> <li>④ Indoor LEV performance failure</li> <li>⑤ Gas leakage or shortage</li> <li>⑥ Defective 63HS</li> </ol> <p>TH3 : Thermistor &lt;Outdoor liquid pipe&gt; TH7 : Thermistor &lt;Ambient&gt; LEV : Electronic expansion valve 63HS: High-pressure sensor</p>

●Diagnosis of defectives


Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

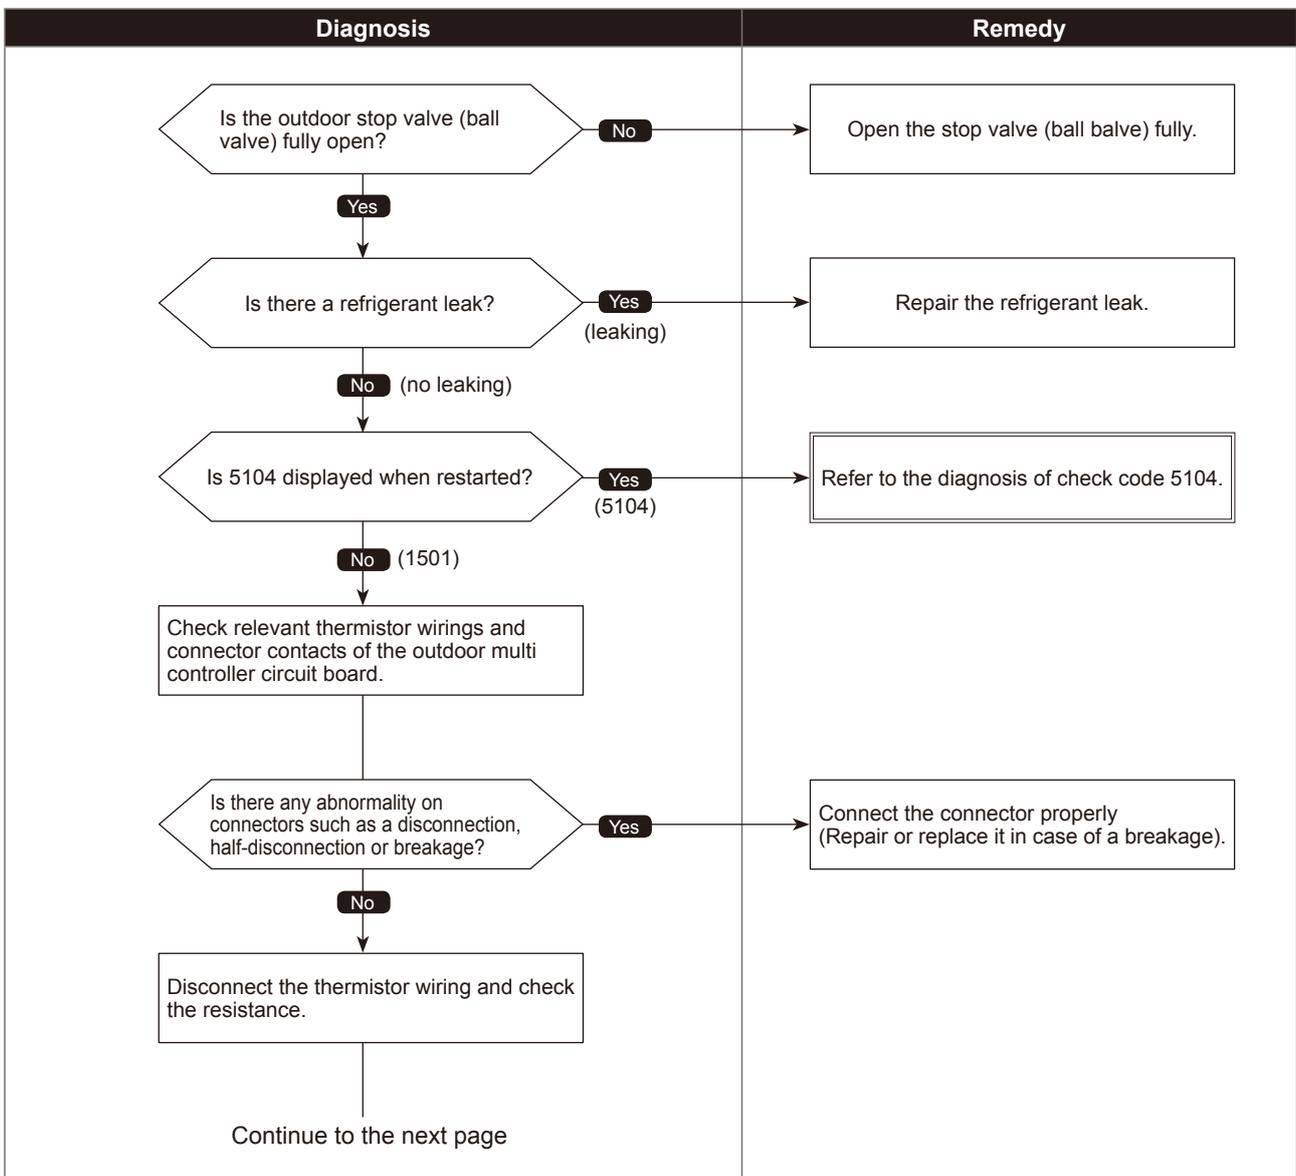

## Refrigerant shortage trouble

## ●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

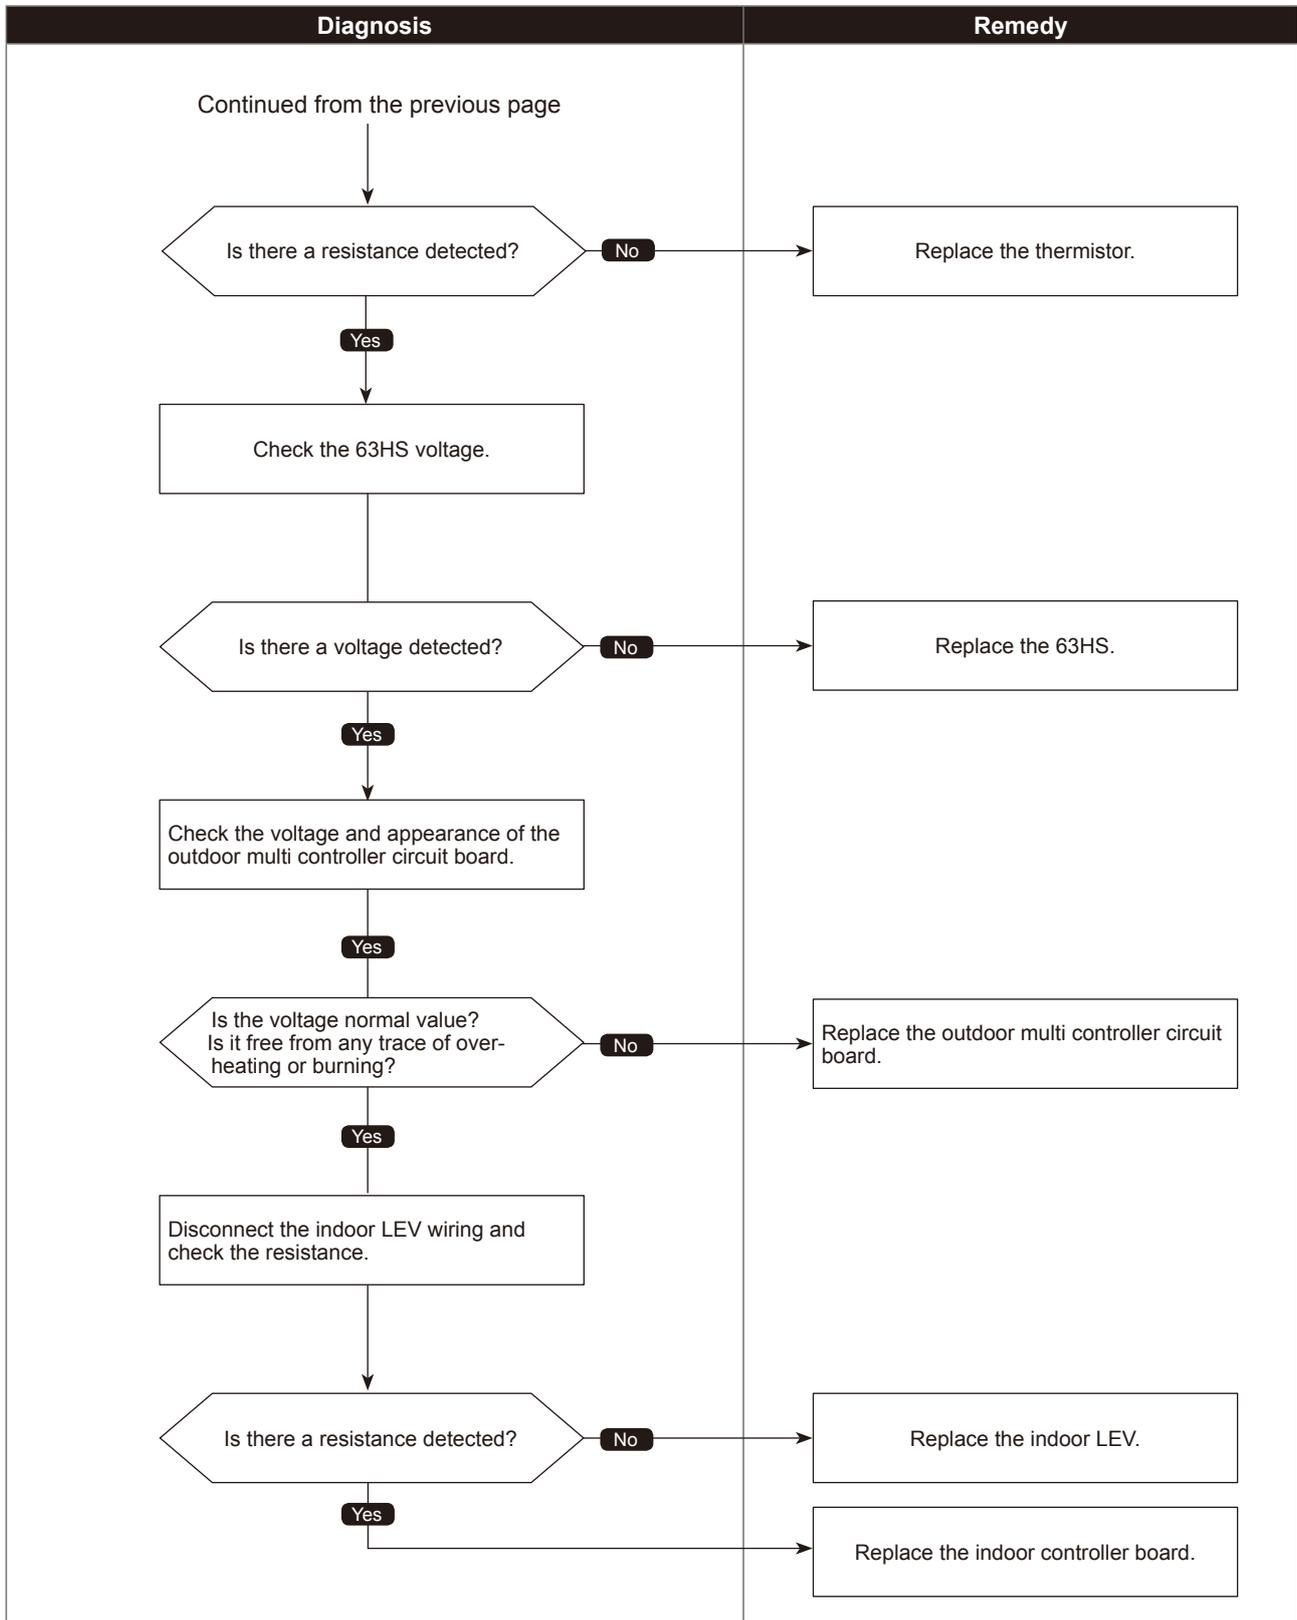


## Blocked valve in cooling mode

Abnormal points and detection methods	Causes and check points
<p>Abnormal if stop valve is blocked during cooling operation.</p> <p>Abnormal when both of the following temperature conditions are satisfied for 20 minutes or more during cooling operation.</p> <ol style="list-style-type: none"> <li>1. TH22j-TH21j <math>\geq -2^{\circ}\text{C}</math> [28.4°F]</li> <li>2. TH23j-TH21j <math>\geq -2^{\circ}\text{C}</math> [28.4°F]</li> </ol> <p>Note: For indoor unit, the abnormality is detected if an operating unit satisfies the condition.</p>	<p>① Outdoor liquid/gas valve is blocked.</p> <p>② Multifunction of outdoor LEV (LEV1)(blockage)</p> <p>TH21: Indoor intake temperature thermistor TH22: Indoor liquid pipe temperature thermistor TH23: Indoor gas pipe temperature thermistor LEV: Electronic expansion valve</p>

## ●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

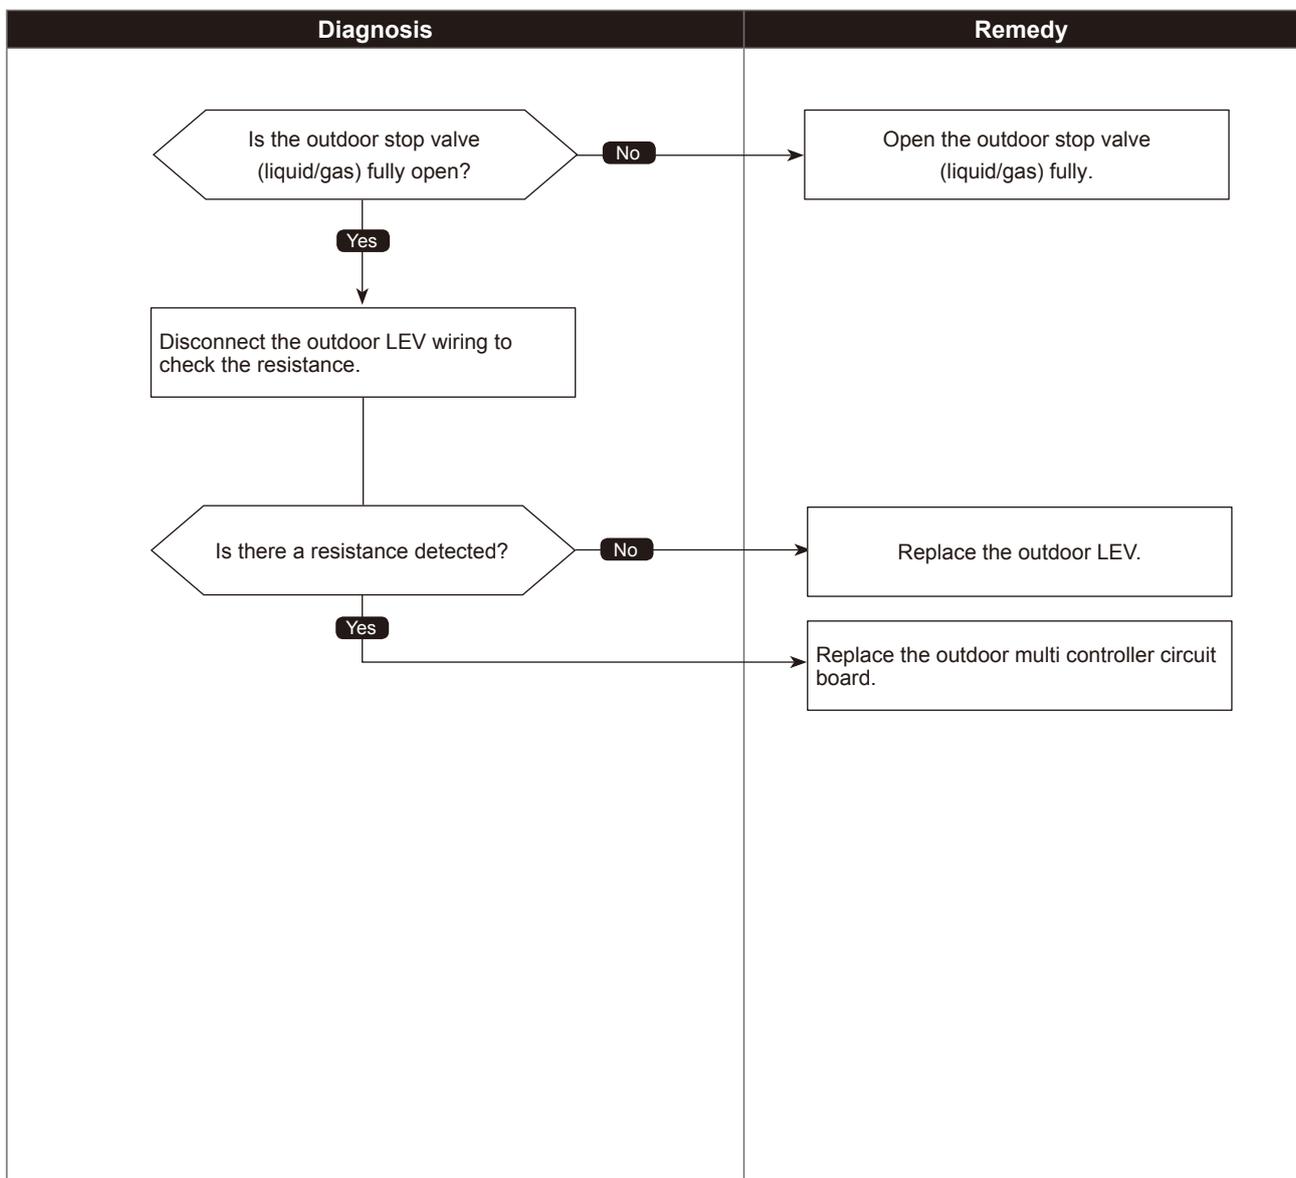


## 4-way valve trouble in heating mode

Abnormal points and detection methods	Causes and check points
<p>Abnormal if 4-way valve does not operate during heating operation.</p> <p>Abnormal when any of the following temperature conditions is satisfied for 3 min. or more during heating operation</p> <ol style="list-style-type: none"> <li>1. TH22j-TH21j <math>\leq -10^{\circ}\text{C}</math> [14°F]</li> <li>2. TH23j-TH21j <math>\leq -10^{\circ}\text{C}</math> [14°F]</li> <li>3. TH22j <math>\leq 3^{\circ}\text{C}</math> [37.4°F]</li> <li>4. TH23j <math>\leq 3^{\circ}\text{C}</math> [37.4°F]</li> </ol> <p>Note: For indoor unit, the abnormality is detected if an operating unit satisfies the condition.</p>	<ol style="list-style-type: none"> <li>① 4-way valve failure</li> <li>② Disconnection or failure of 4-way valve coil</li> <li>③ Clogged drain pipe</li> <li>④ Disconnection or loose connection of connectors</li> <li>⑤ Malfunction of input circuit on outdoor multi controller circuit board</li> <li>⑥ Defective outdoor power circuit board</li> </ol> <p>TH21: Indoor intake temperature thermistor TH22: Indoor liquid pipe temperature thermistor TH23: Indoor gas pipe temperature thermistor</p>

## ●Diagnosis of defectives


Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

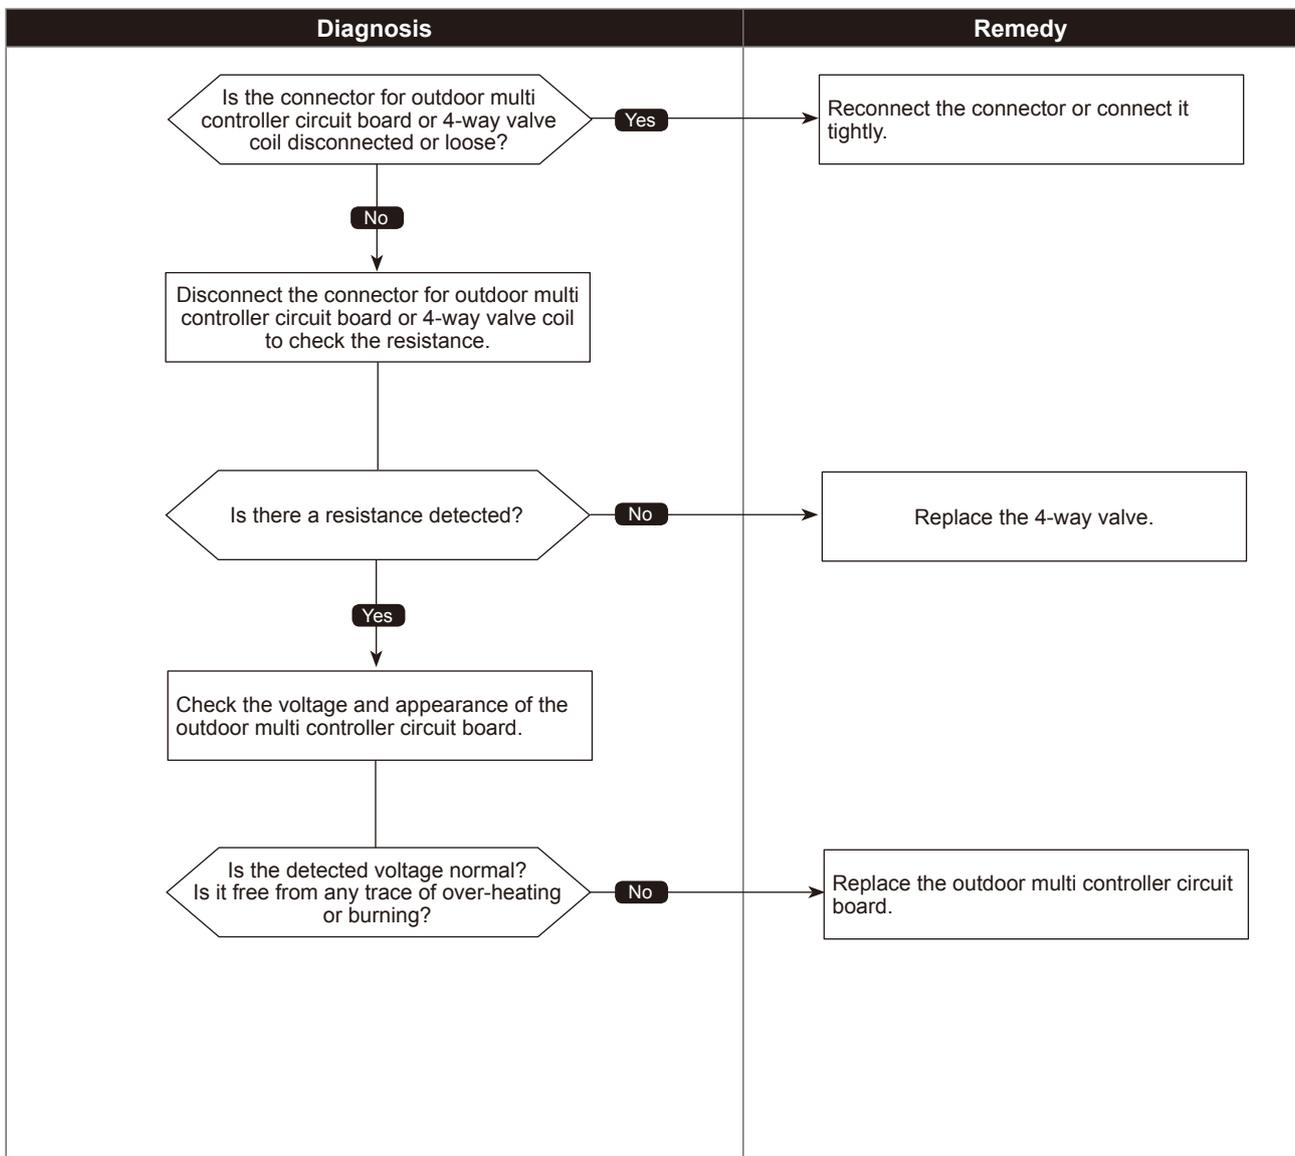

Abnormal points and detection methods	Causes and check points
<p>Abnormal if drain sensor or float switch detects to be in the water during cooling or dry operation.</p> <p><b>To release this abnormality, reset the power (turn OFF and ON).</b></p> <p>TH21: Indoor intake temperature thermistor                      TH22: Indoor liquid pipe temperature thermistor                      TH23: Indoor gas pipe temperature thermistor</p>	<ol style="list-style-type: none"> <li>① Reverse connection of extended piping (when connecting multiple units)</li> <li>② Reverse connection of indoor/ outdoor connector</li> <li>③ Defective thermistor of TH21 or TH22/23</li> <li>④ Defective drain sensor or float switch</li> <li>⑤ Defective drain pump</li> <li>⑥ Poor drainage                             <ul style="list-style-type: none"> <li>· Clogged drain pump</li> <li>· Clogged drain pipe</li> </ul> </li> </ol>


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

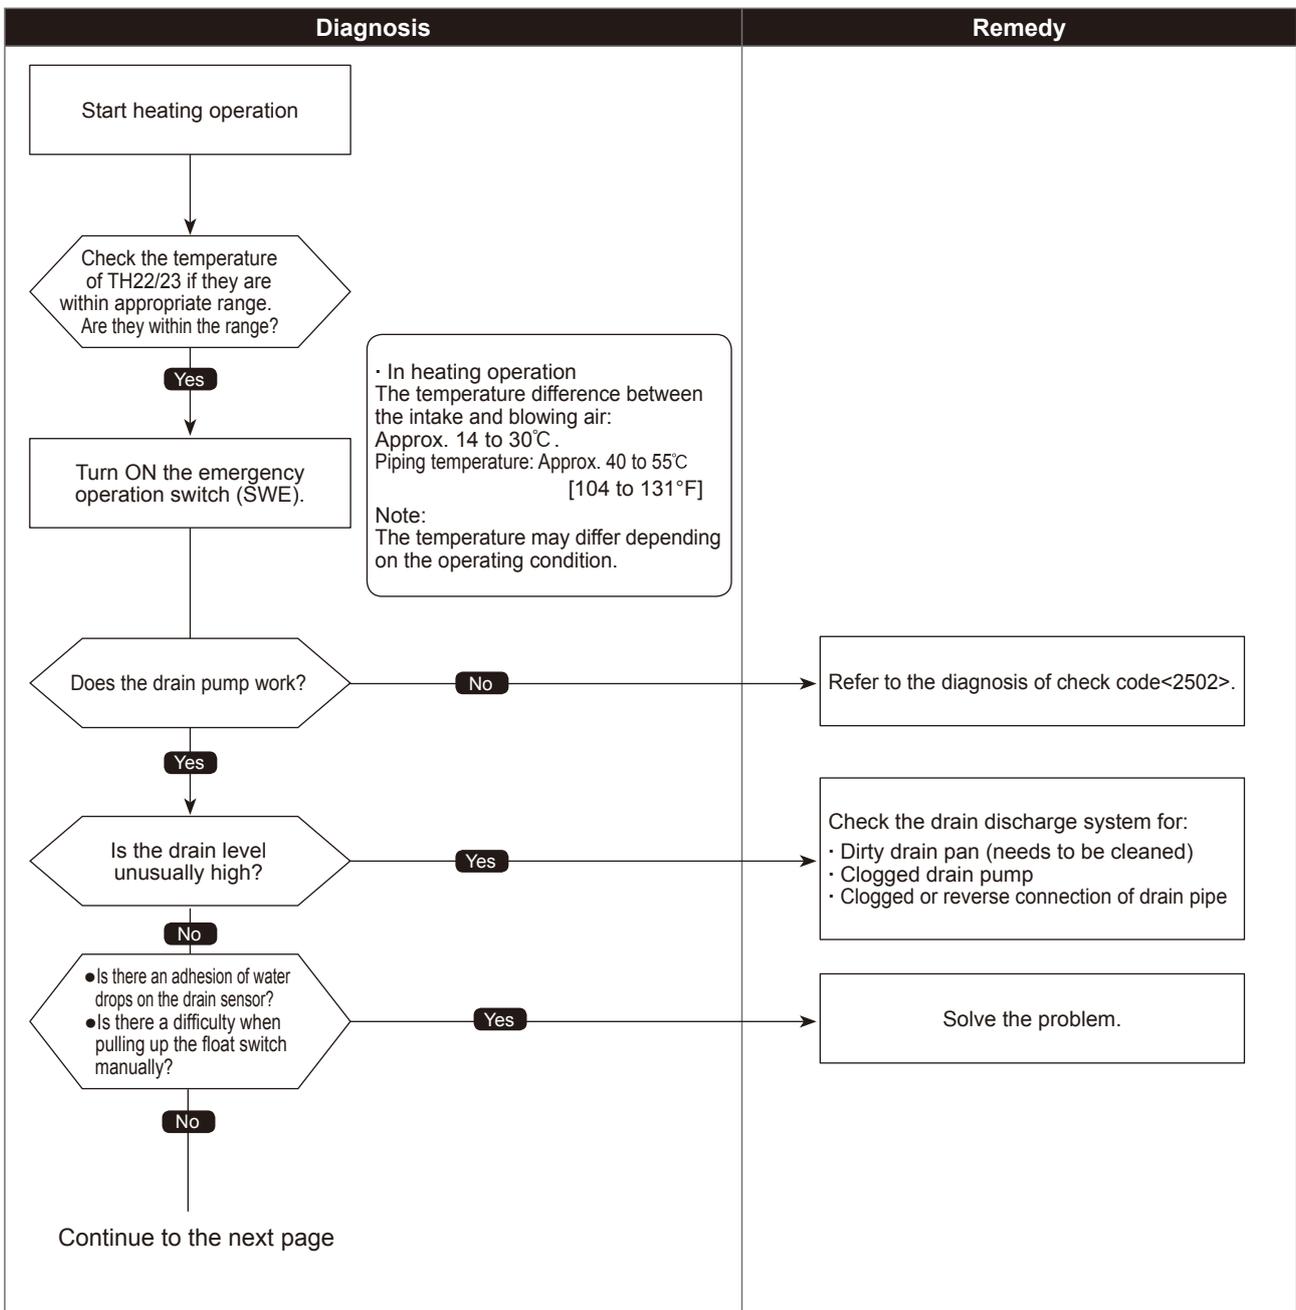

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

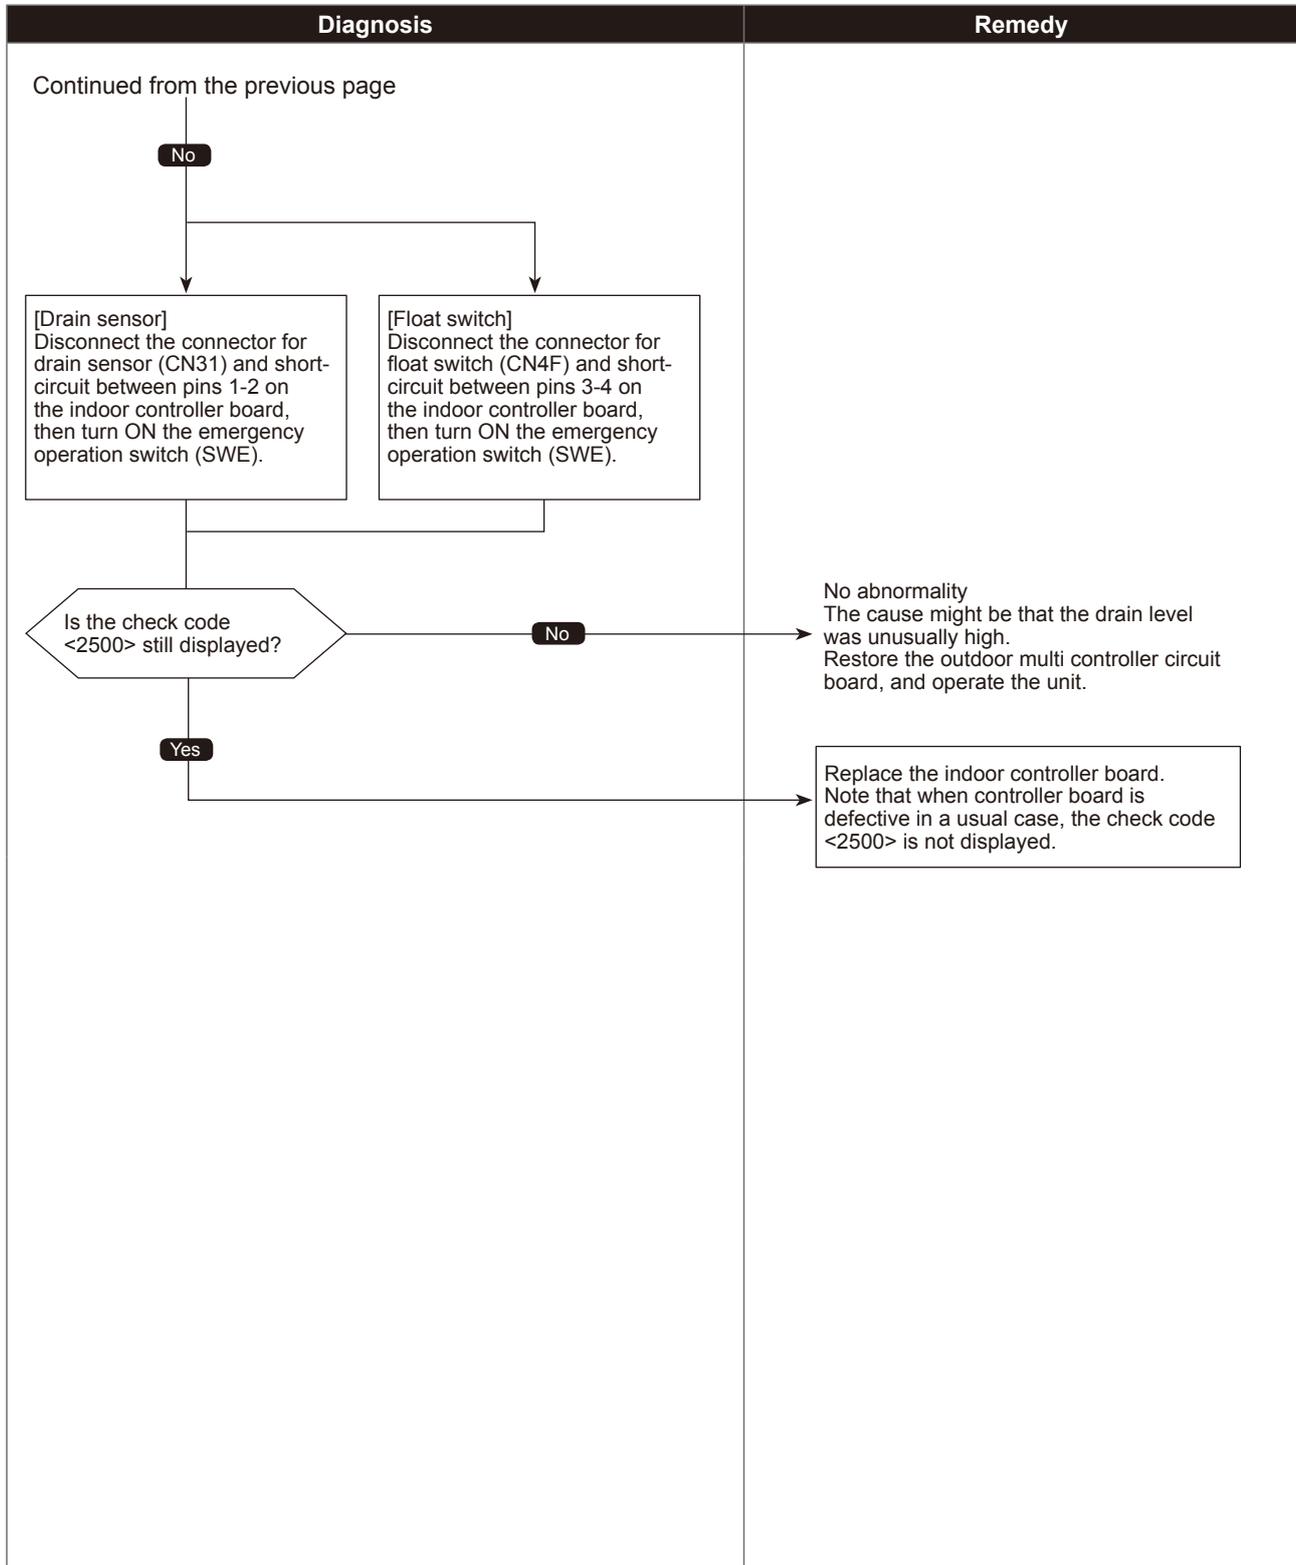

## <Drain sensor models> Drain overflow protection

Abnormal points and detection methods	Causes and check points
<p><b>Drain pump (DP)</b></p> <p>① Let drain sensor self-heated, and if temperature rises slightly, as suspensive abnormality operation stops and changes to protect mode of restarting in 3 minutes.</p> <p>② Drain pump is abnormal if the condition above is detected during suspensive abnormality. &lt;2502&gt; is displayed.</p> <p>③ Malfunction of drain pipe is constantly detected during drain pump operation.</p> <p>④ The unit enters to forced outdoor unit stop when following conditions, ㉓ and ㉔, are satisfied (while the above mentioned detection is performed).</p> <p>㉓ The drain sensor detects to be soaked in the water 10 times in a row.</p> <p>㉔ Detected that [liquid pipe temperature - room temperature] <math>\leq -10^{\circ}\text{C}</math> for 30 minutes constantly.</p> <p>Notes:</p> <ol style="list-style-type: none"> <li>When the drain sensor detects to be NOT soaked in the water, the detection record of ㉓ and ㉔ will be cleared.)</li> <li>Drain pump abnormality (above ①-③ is detected before it becomes an outdoor unit forced stop condition).</li> </ol> <p>⑤ When indoor unit detects above ④ condition, outdoor unit in the same refrigerant sytem stops. Also, indoor unit except for Fan or OFF mode unit stop. &lt;2502&gt; is displayed on stopped unit.</p> <p>⑥ Detection timing of forced outdoor unit stop Constantly detected during unit operation and stop</p> <p>⑦ Releasing of forced outdoor unit stop Reset power supply of both abnormal indoor unit and its outdoor unit in same refrigerant system. Forced outdoor unit stop cannot be released by remote controller OFF.</p> <p>Note: Above-mentioned ①-③ and ④-⑦ are detected independently.</p>	<p>① Malfunction of drain pump</p> <p>② Defective drain Clogged drain pump Clogged drain pipe</p> <p>③ Water drops on drain sensor Drops of drain trickles from lead wire Clogged filter is causing wave of drain</p> <p>④ Defective indoor controller board</p> <p>⑤ Both of above mentioned ①-④ and the indoor linear expansion valve full-closed failure (leakage) happens synchronistically</p> <p>Note: Address/Attribute displayed on the remote controller shows the indoor unit which is the cause of trouble.</p>

● **Diagnosis of defectives**


Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<pre> graph TD     Start[Start cooling operation.] --&gt; Q1{Does the drain pump work?}     Q1 -- No --&gt; Next[Continue to the next page]     Q1 -- Yes --&gt; Q2{Is the drain level unusually high?}     Q2 -- No --&gt; Q3{Is there an adhesion of water drops on the drain sensor?}     Q3 -- No --&gt; Next     Q3 -- Yes --&gt; R2[Solve the problem. · Remove water drops. · Remove foreign substance such as dusts.]     Q2 -- Yes --&gt; R1[Check the drain discharge system for: · Dirty drain pan (needs to be cleaned) · Clogged drain pump · Clogged or reverse connection of drain pipe]     </pre>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p>Check the drain discharge system for:</p> <ul style="list-style-type: none"> <li>· Dirty drain pan (needs to be cleaned)</li> <li>· Clogged drain pump</li> <li>· Clogged or reverse connection of drain pipe</li> </ul> </div> <div style="border: 1px solid black; padding: 5px;"> <p>Solve the problem.</p> <ul style="list-style-type: none"> <li>· Remove water drops.</li> <li>· Remove foreign substance such as dusts.</li> </ul> </div>

# Drain overflow protection

●Diagnosis of defectives


Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

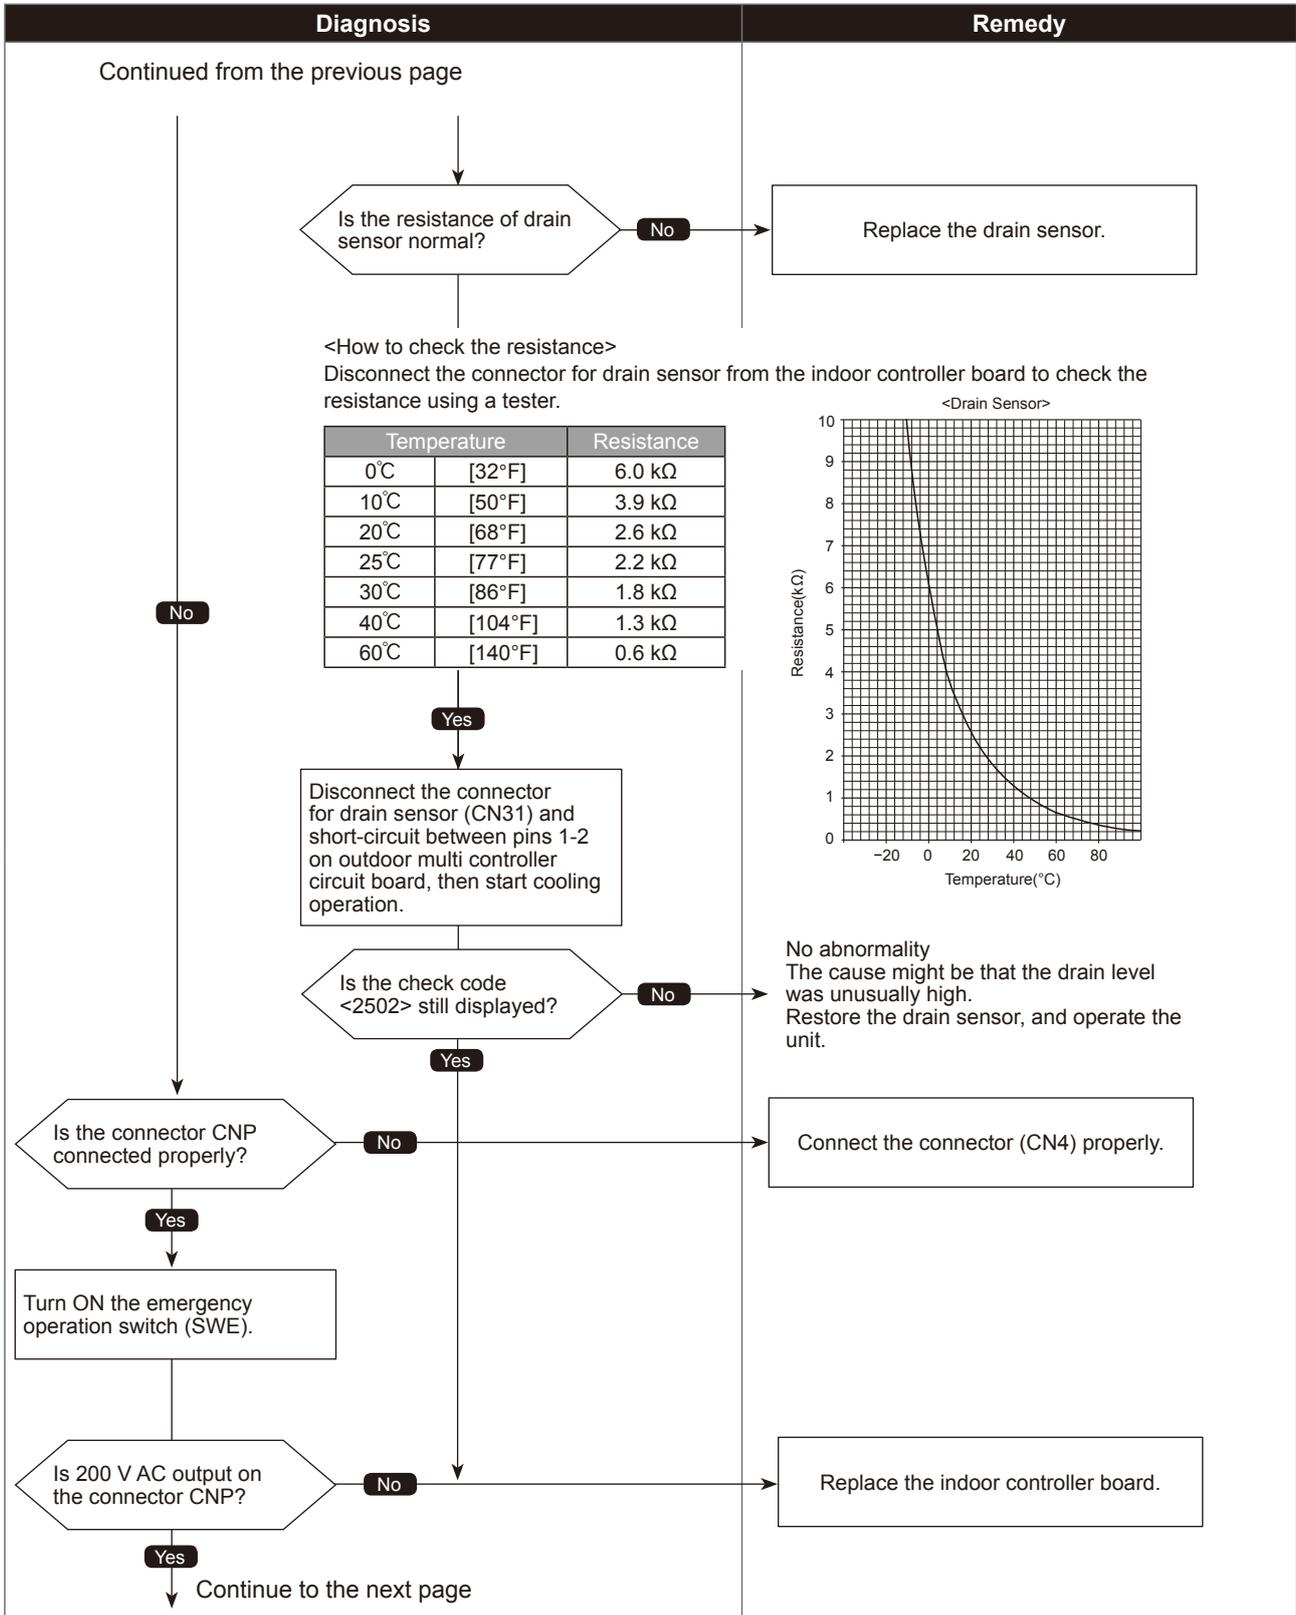

<Drain sensor models>  
 Drain overflow protection

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

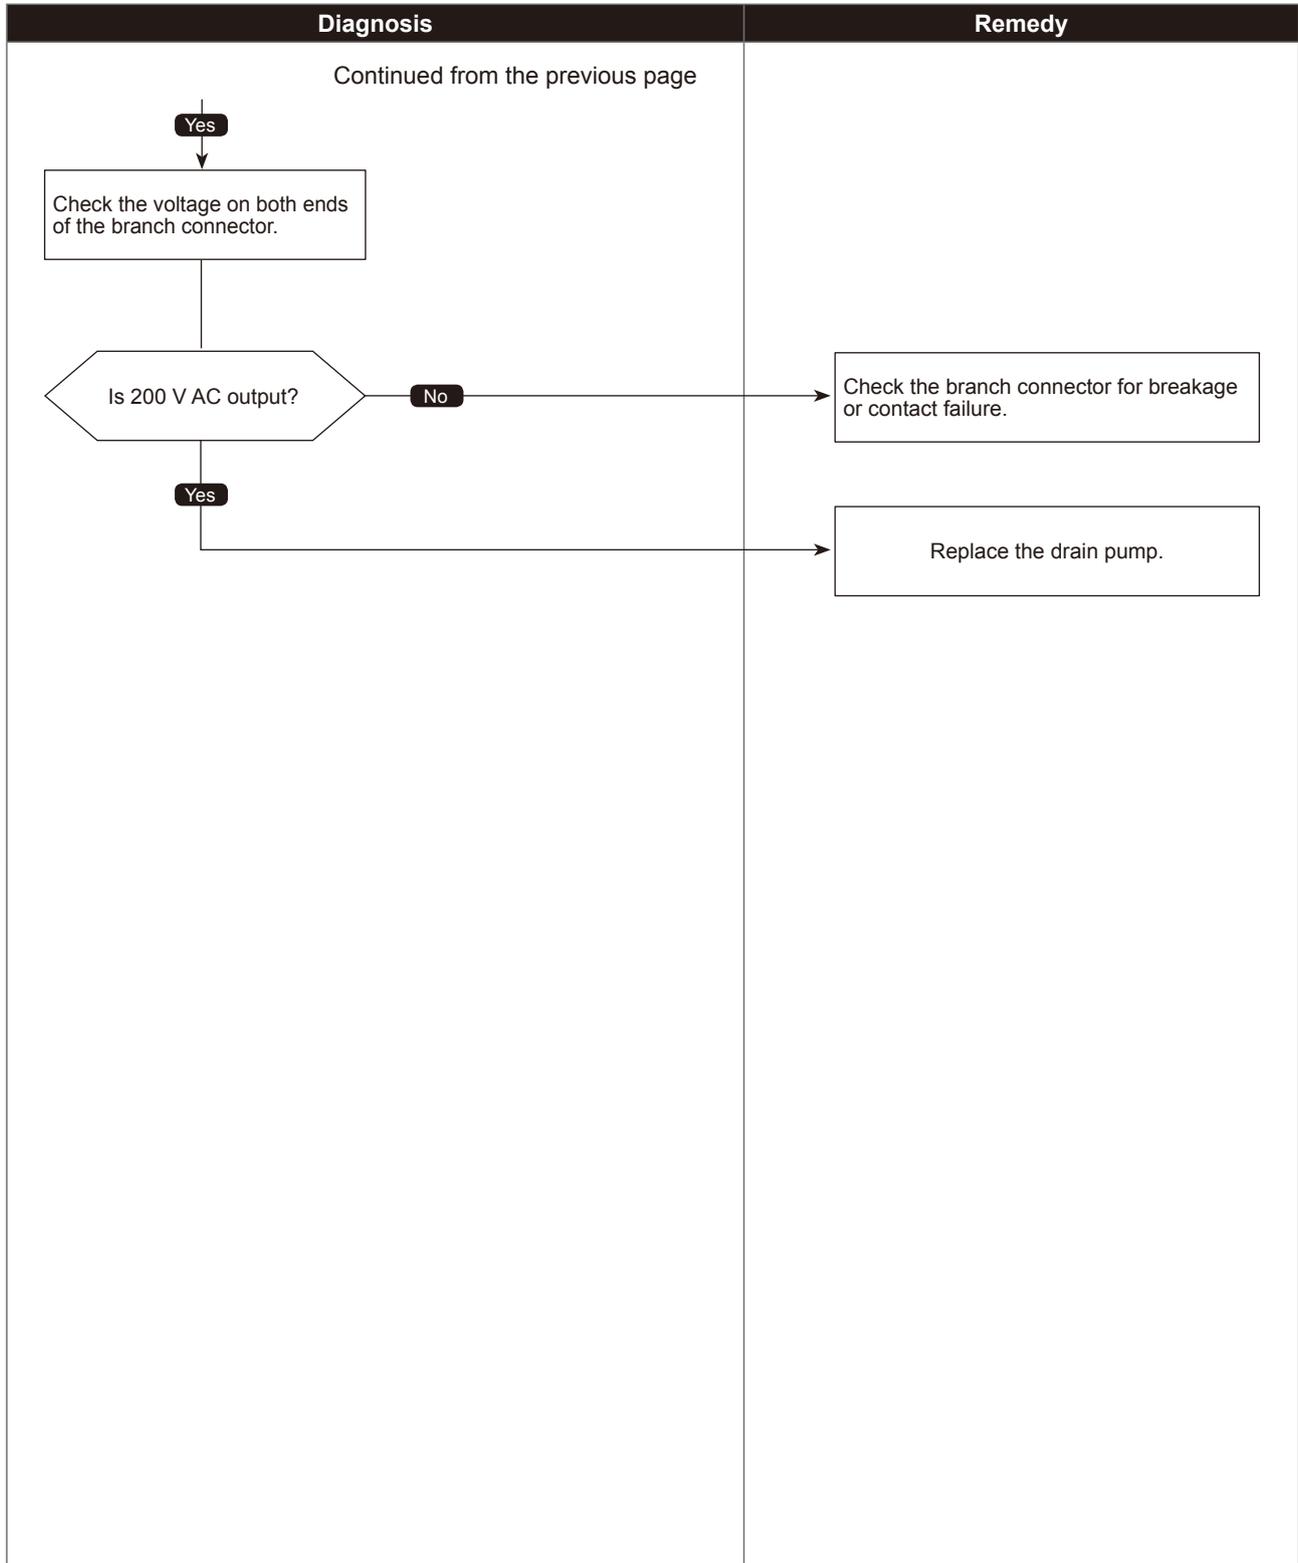

## <Float switch models> Drain overflow protection

Chart 1 of 2

Abnormal points and detection methods	Causes and check points
<p><b>Drain pump (DP)</b></p> <p>① Judge whether the sensor is in the water or in the air by turning the float switch ON/OFF. In the water: Detected that the float switch is ON for 15 seconds. In the air: Detected that the float switch is OFF for 15 seconds.</p> <p>② When the float switch remains to be turned ON for 3 minutes after detected to be in the water, the drain pump is judged to be abnormal and &lt;2502&gt; will be displayed.</p> <p>Note: It takes 3 minutes and 15 seconds to detect abnormality including the time to judge to be in the water.</p> <p>③ The unit continues to detect abnormality while turned off.</p> <p>④ When the conditions below 1, 2 and forced outdoor unit stop condition are met</p> <ol style="list-style-type: none"> <li>1. Detected that [liquid pipe temperature – room temperature] <math>\leq</math> [ -10°C ] for 30 minutes constantly.</li> <li>2. Float switch detects to be in the water for 15 minutes constantly.</li> </ol> <p>Note: Before Forced outdoor unit stop condition is met, the unit always detects ①–③ above.</p> <p>⑤ The indoor unit detecting ④ above stops due to detecting abnormality the outdoor unit in same refrigerant system compressor is inhibited to operate). The unit which stops due to detecting abnormality displays &lt;2502&gt;.</p> <p>⑥ Detection timing of forced outdoor unit stop Constantly detected during unit operation and stop</p> <p>⑦ Releasing of forced outdoor unit stop Reset power supply of both abnormal indoor unit and its outdoor unit in same refrigerant system. Forced outdoor unit stop cannot be released by remote controller OFF.</p> <p>Note: Above-mentioned ①–③ and ④–⑦ are detected independently.</p>	<p>① Malfunction of drain pump</p> <p>② Defective drain Clogged drain pump Clogged drain pipe</p> <p>③ Defective moving part of float switch Foreign matter on the moving part of float switch (ex. sludge, etc.)</p> <p>④ Defective float switch</p> <p>⑤ Defective indoor controller board Defective driving circuit of drain pump Defective input circuit of float switch</p> <p>⑥ Both of above mentioned 1 to 5 and the indoor linear expansion valve full-closed failure (leakage) happens synchronistically.</p> <p>Note: Address/Attribute displayed on the remote controller shows the indoor unit which is the cause of trouble.</p>

● **Diagnosis of defectives**


Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

Diagnosis	Remedy
<pre> graph TD     Start[Start cooling operation.] --&gt; Q1{Does the drain pump work?}     Q1 -- No --&gt; Next[Continue to the next page]     Q1 -- Yes --&gt; Q2{Is the drain level unusually high?}     Q2 -- No --&gt; Next     Q2 -- Yes --&gt; Remedy[Check the drain discharge system for: · Dirty drain pan (needs to be cleaned) · Clogged drain pump · Clogged or reverse connection of drain pipe]           </pre>	<p>Check the drain discharge system for:</p> <ul style="list-style-type: none"> <li>· Dirty drain pan (needs to be cleaned)</li> <li>· Clogged drain pump</li> <li>· Clogged or reverse connection of drain pipe</li> </ul>

## <Float switch models> Drain overflow protection

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

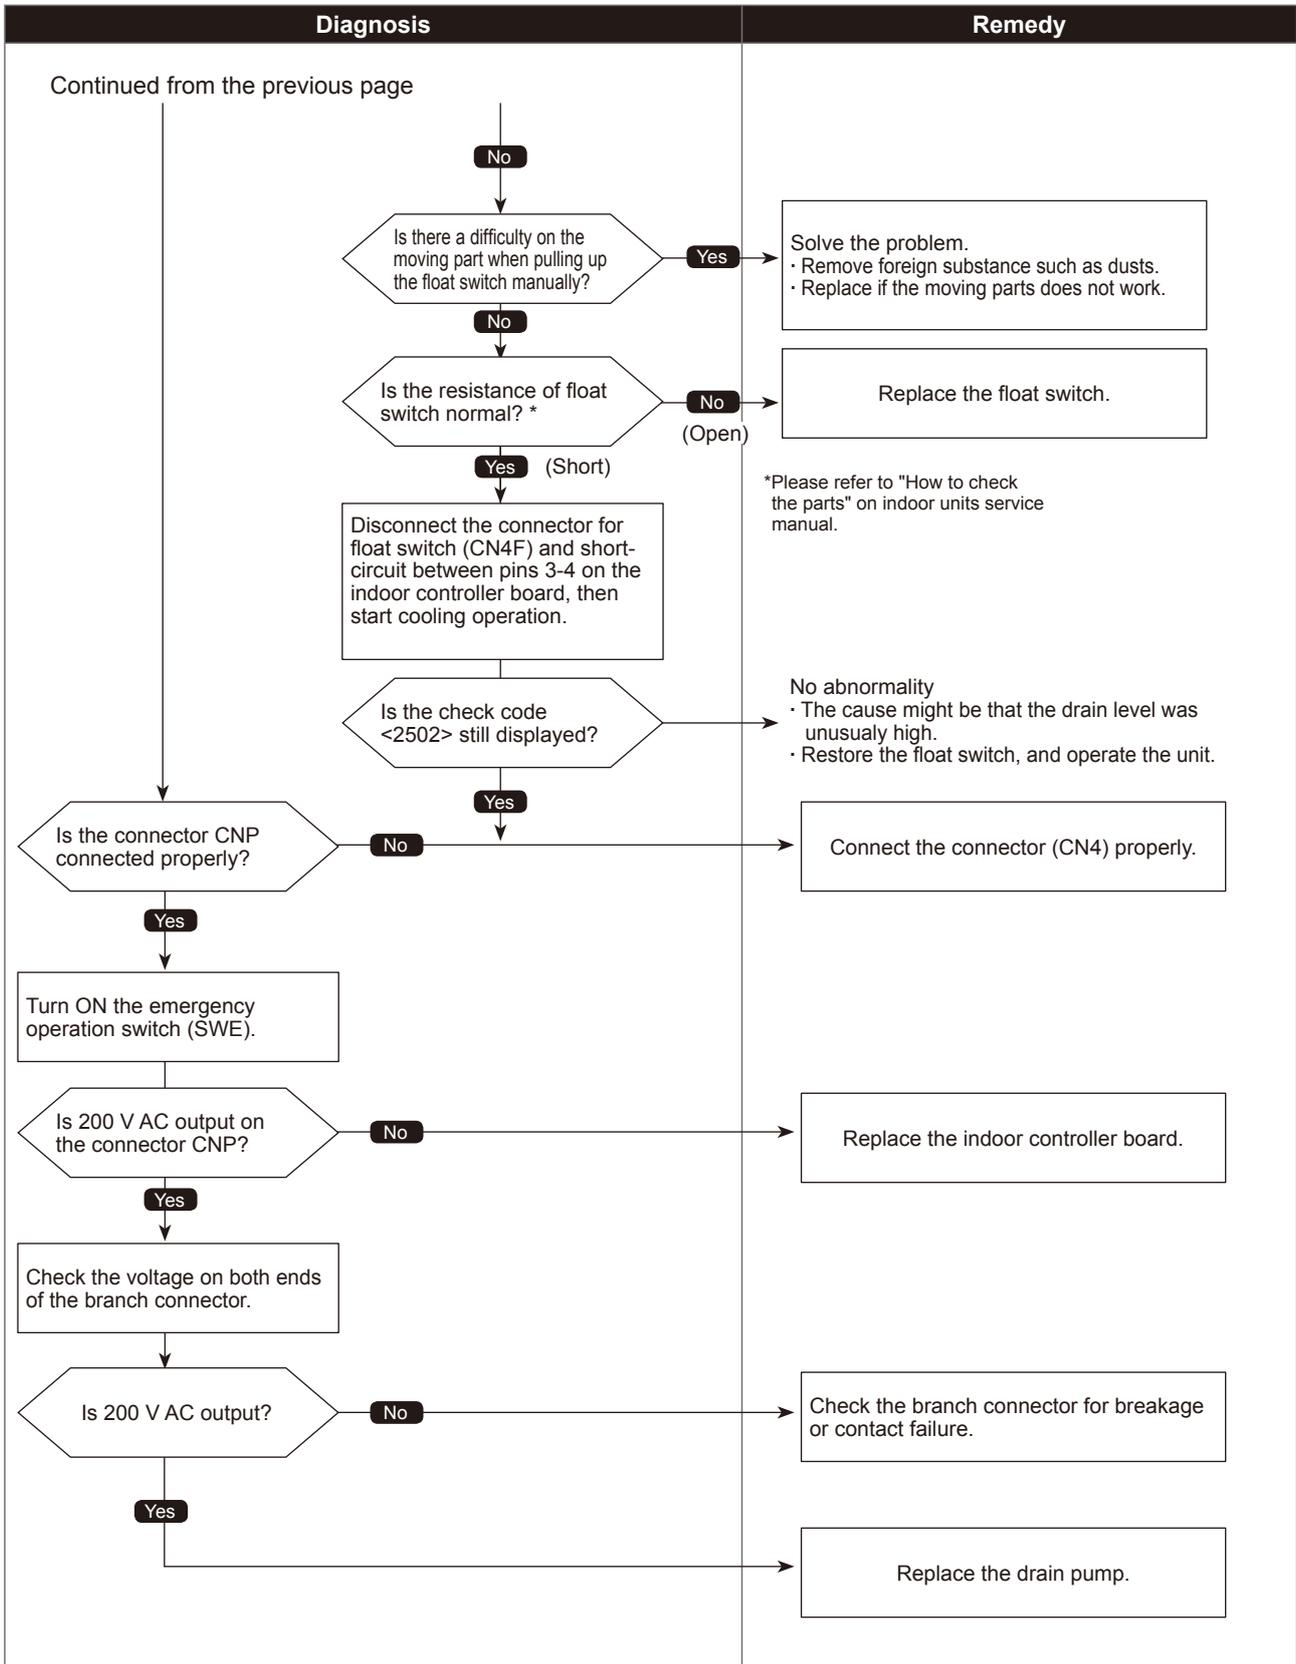

## <Drain sensor models> Drain sensor abnormality

Abnormal points and detection methods	Causes and check points
<Drain sensor models> Abnormal if drain sensor detects to be short/open .	① Contact failure of connector CN31 ② Characteristic defect of thermistor ③ Breakage or contact failure of drain sensor wiring. ④ Replace the indoor controller board.

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards


Diagnosis	Remedy																								
<p style="text-align: center;">[Drain sensor models]</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">                     Check the drain sensor connector (CN31) for disconnection or looseness.                 </div> <div style="text-align: center;"> <div style="border: 1px solid black; width: 100px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center;">                     Is it connected normally?                 </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="border: 1px solid black; padding: 2px 5px;">No</div> <div style="border: 1px solid black; padding: 2px 5px;">Yes</div> </div> </div> <div style="margin-top: 20px;"> <div style="border: 1px solid black; width: 100px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center;">                     Is the resistance of thermistor normal?                 </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> <div style="border: 1px solid black; padding: 2px 5px;">No</div> <div style="border: 1px solid black; padding: 2px 5px;">Yes</div> </div> </div>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 20px;">                     Connect it properly. Turn the power back ON, then check the operation.                 </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 20px; text-align: center;">                     Replace the drain sensor.                 </div> <div style="border: 1px solid black; padding: 5px; text-align: center;">                     Replace the indoor controller board.                 </div>																								
<p>&lt;How to check the resistance&gt;                      Disconnect the connector for drain sensor from the indoor controller board to check the resistance using a tester.</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr style="background-color: #cccccc;"> <th colspan="2">Temperature</th> <th>Resistance</th> </tr> </thead> <tbody> <tr> <td>0°C</td> <td>[32°F]</td> <td>6.0 kΩ</td> </tr> <tr> <td>10°C</td> <td>[50°F]</td> <td>3.9 kΩ</td> </tr> <tr> <td>20°C</td> <td>[68°F]</td> <td>2.6 kΩ</td> </tr> <tr> <td>25°C</td> <td>[77°F]</td> <td>2.2 kΩ</td> </tr> <tr> <td>30°C</td> <td>[86°F]</td> <td>1.8 kΩ</td> </tr> <tr> <td>40°C</td> <td>[104°F]</td> <td>1.3 kΩ</td> </tr> <tr> <td>60°C</td> <td>[140°F]</td> <td>0.6 kΩ</td> </tr> </tbody> </table> <div style="text-align: right; margin-top: 10px;"> <p style="font-size: small;">&lt;Drain Sensor&gt;</p> </div>		Temperature		Resistance	0°C	[32°F]	6.0 kΩ	10°C	[50°F]	3.9 kΩ	20°C	[68°F]	2.6 kΩ	25°C	[77°F]	2.2 kΩ	30°C	[86°F]	1.8 kΩ	40°C	[104°F]	1.3 kΩ	60°C	[140°F]	0.6 kΩ
Temperature		Resistance																							
0°C	[32°F]	6.0 kΩ																							
10°C	[50°F]	3.9 kΩ																							
20°C	[68°F]	2.6 kΩ																							
25°C	[77°F]	2.2 kΩ																							
30°C	[86°F]	1.8 kΩ																							
40°C	[104°F]	1.3 kΩ																							
60°C	[140°F]	0.6 kΩ																							

# Compressor current interruption (Locked compressor)

Abnormal points and detection methods	Causes and check points
Abnormal if overcurrent of DC bus or compressor is detected 30 seconds after the compressor starts operating.	<ul style="list-style-type: none"> <li>① Closed stop valve</li> <li>② Decrease of power supply voltage</li> <li>③ Looseness, disconnection or converse of compressor wiring connection</li> <li>④ Model selection error upon replacement of indoor controller board</li> <li>⑤ Defective compressor</li> <li>⑥ Defective outdoor power circuit board</li> </ul>


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

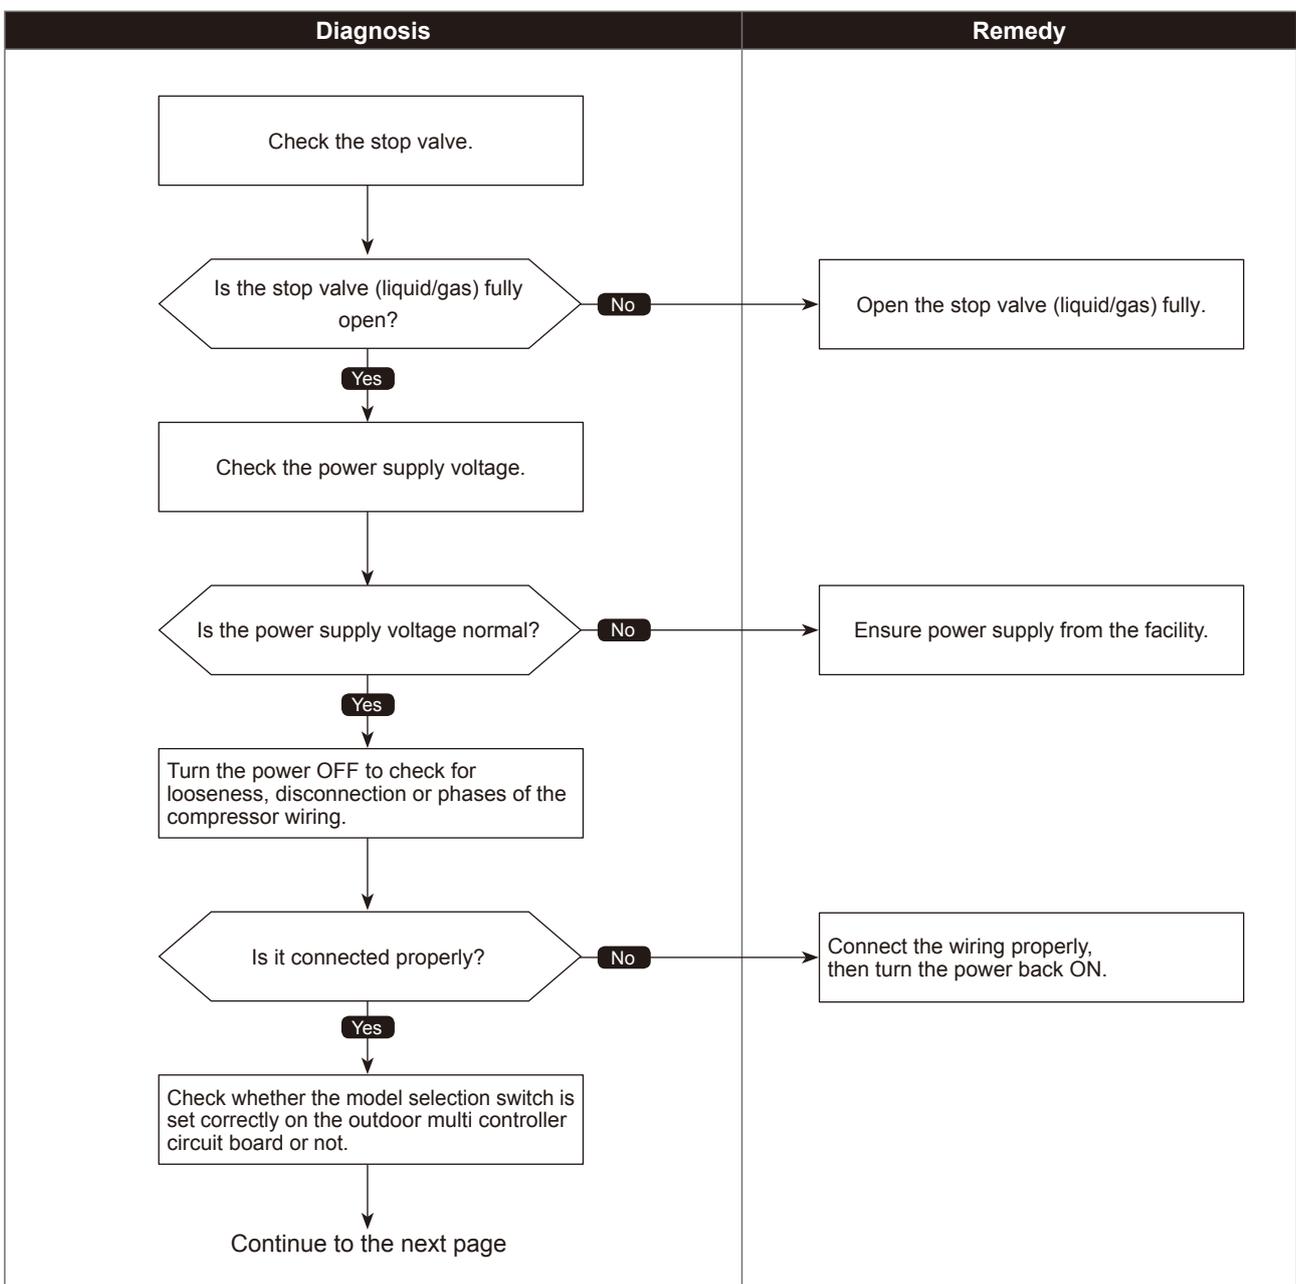

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

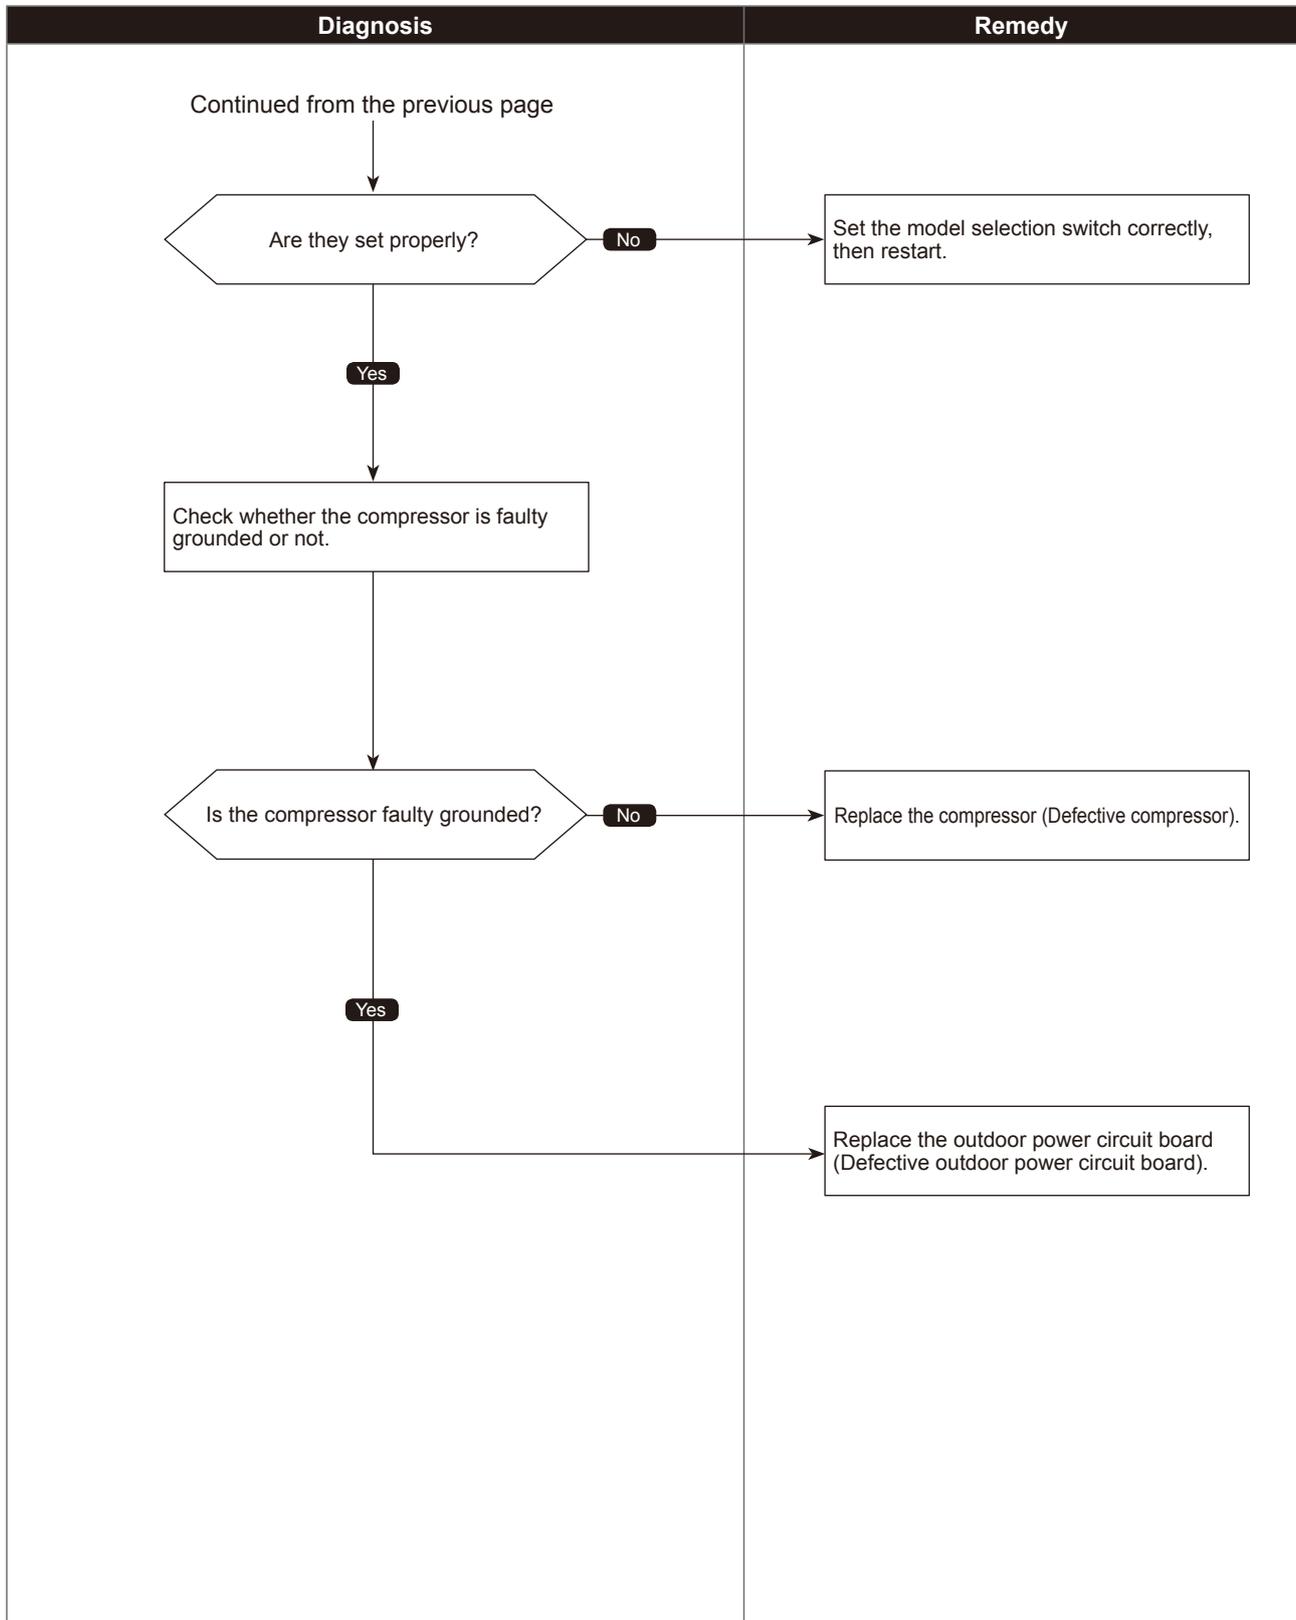


## Compressor overcurrent interruption

Abnormal points and detection methods	Causes and check points
Abnormal if overcurrent of DC or the compressor is detected within 30 seconds after the compressor starts operating.	<ul style="list-style-type: none"> <li>① Closed outdoor stop valve</li> <li>② Decrease of power supply voltage</li> <li>③ Looseness, disconnection or reverse phase of compressor wiring connection</li> <li>④ Malfunction of indoor/outdoor fan</li> <li>⑤ Short-cycle of indoor/outdoor unit</li> <li>⑥ Model selection error upon replacement of outdoor multi controller circuit board</li> <li>⑦ Malfunction of input circuit on outdoor multi controller circuit board</li> <li>⑧ Defective compressor</li> <li>⑨ Defective outdoor power circuit board</li> </ul>

●Diagnosis of defectives


Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

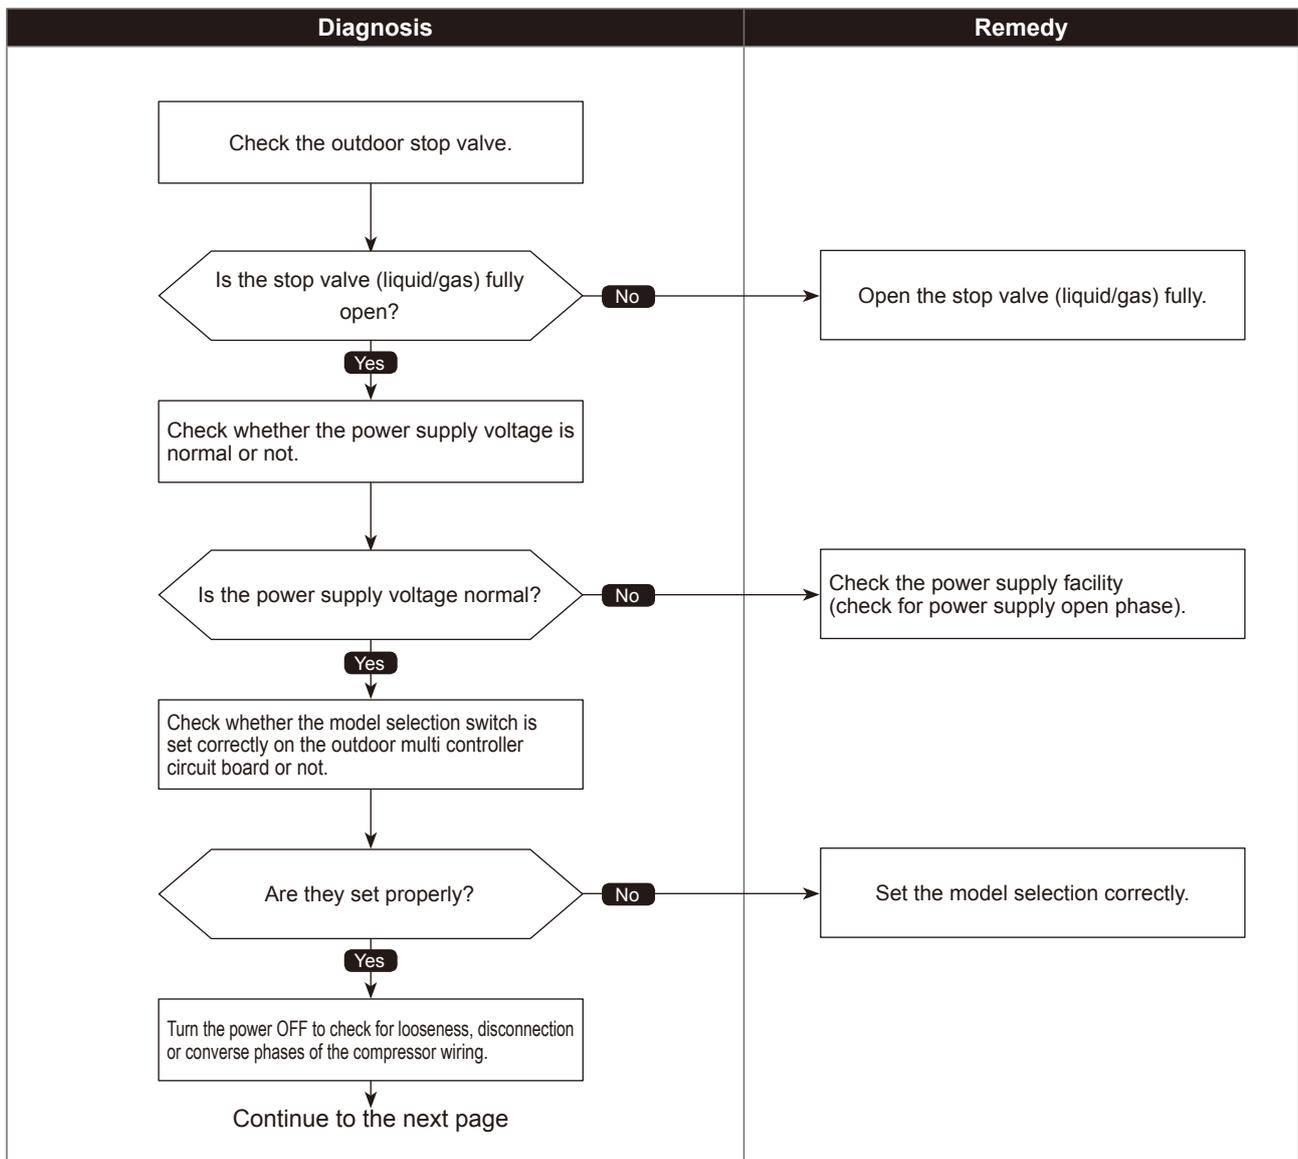

# Compressor overcurrent interruption

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

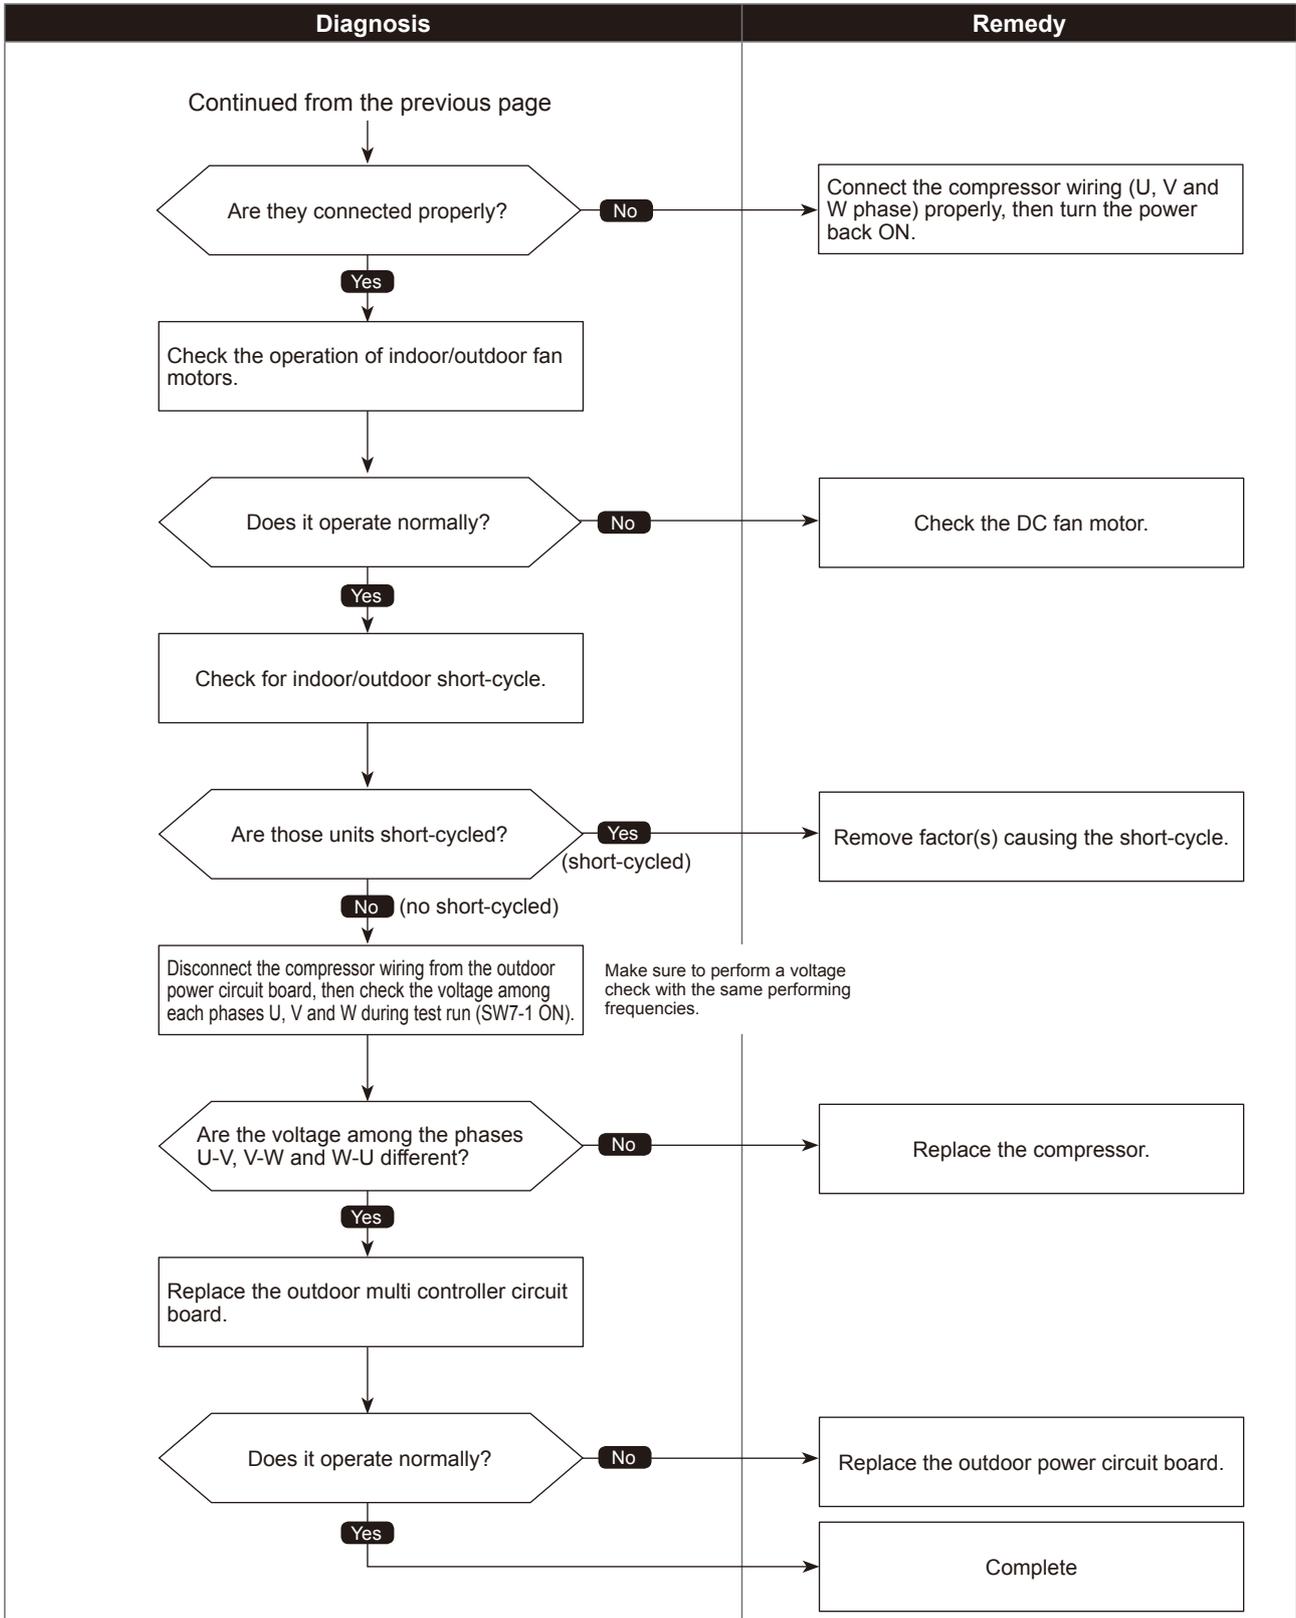


# Undervoltage/Overvoltage/PAM error/L1 open-phase/ Power synchronization signal error

Abnormal points and detection methods	Causes and check points
<p>Abnormal if any of following symptoms are detected;</p> <ul style="list-style-type: none"> <li>●Decrease of DC bus voltage to 400 V</li> <li>●Increase of DC bus voltage to 760 V</li> <li>●Decrease of primary current to 0.1A</li> </ul> <p>Note: The detection is active only when the operational frequency is 40 Hz or more, and the compressor current is 6A or more.</p>	<ol style="list-style-type: none"> <li>① Decrease/increase of power supply voltage, or T open-phase</li> <li>② Disconnection of compressor wiring</li> <li>③ Malfunction of 52C</li> <li>④ Disconnection or contact failure of CN52C</li> <li>⑤ Defective outdoor power circuit board</li> <li>⑥ Malfunction of 52C driving circuit on outdoor multi controller circuit board</li> <li>⑦ Disconnection of CN5</li> <li>⑧ Disconnection of CN2</li> <li>⑨ Malfunction of primary current detecting circuit on outdoor power circuit board</li> </ol>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

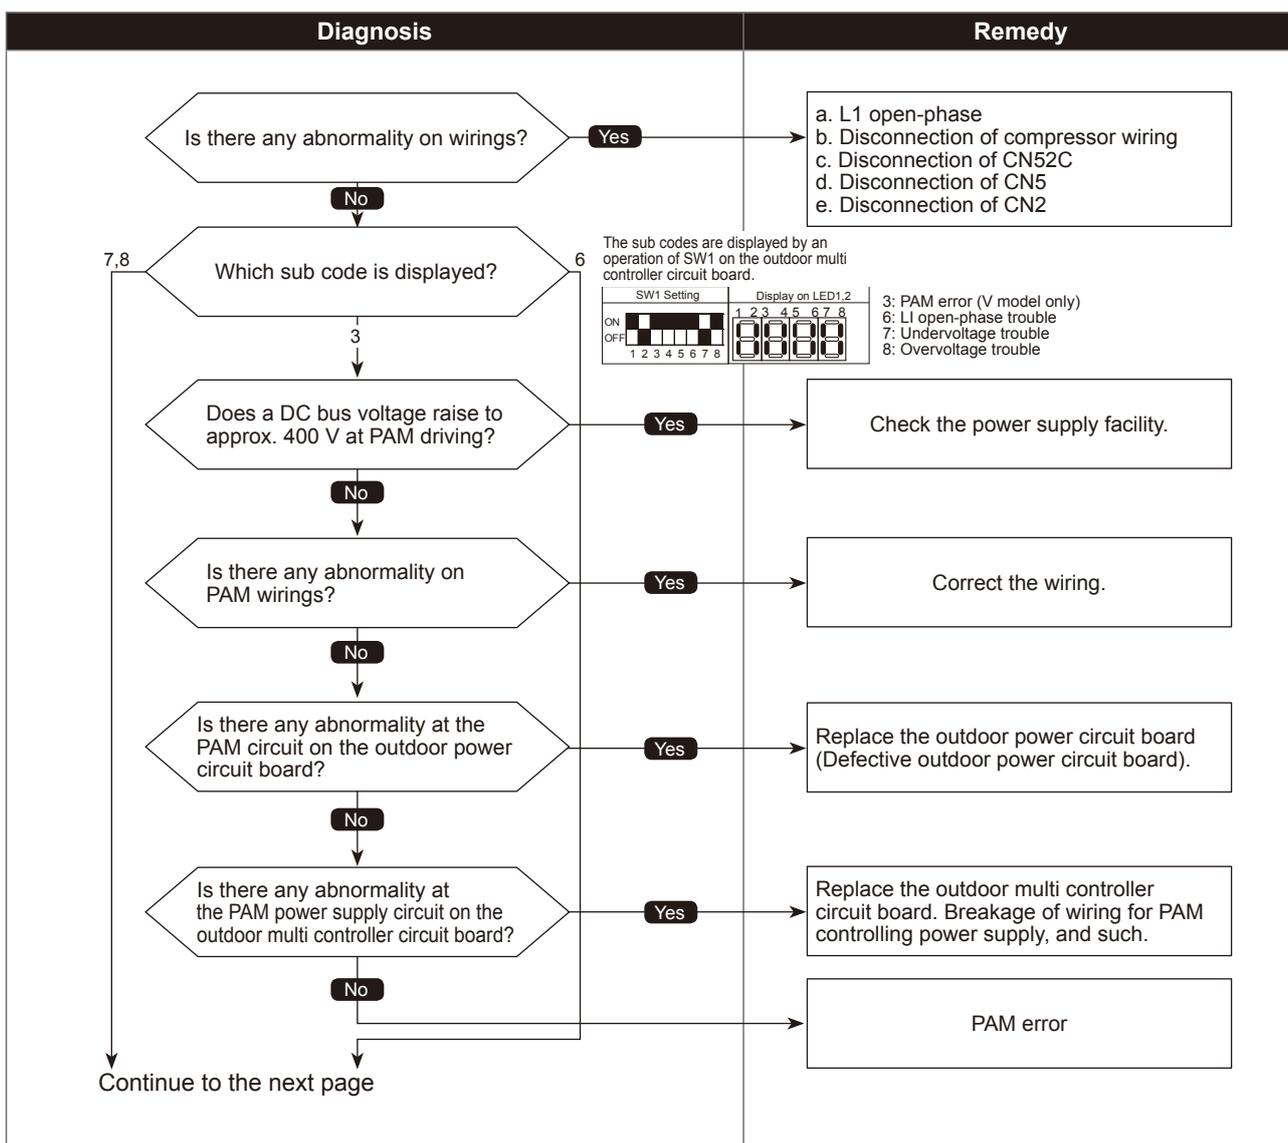


# Voltage shortage/Overvoltage/PAM error/L1 open-phase/ Power synchronization signal error

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

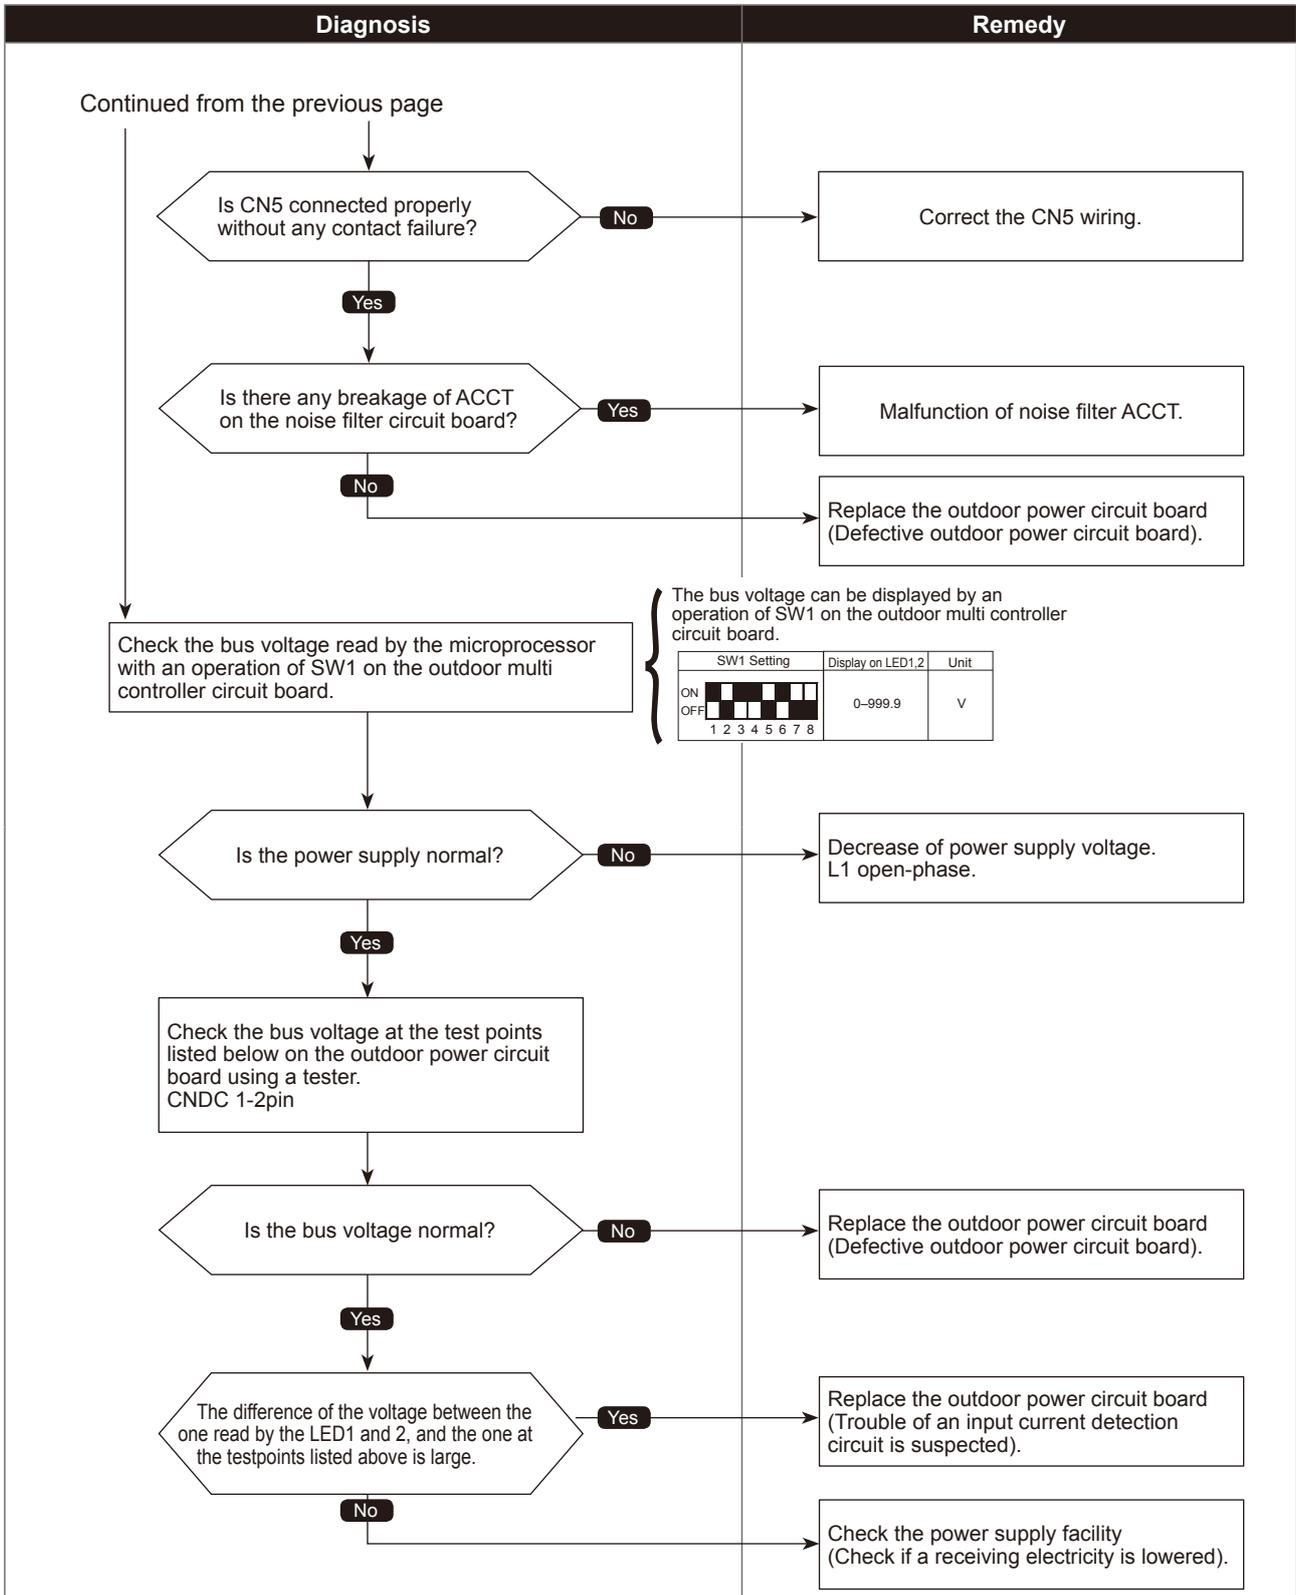


# Heat sink temperature trouble

Abnormal points and detection methods	Causes and check points
Abnormal if TH8 detects a temperature outside the specified range, 95°C [203°F] or more, during compressor operation.  TH8: Thermistor <Heat sink>	① Blocked outdoor fan ② Malfunction of outdoor fan motor ③ Blocked airflow path ④ Rise of ambient temperature ⑤ Characteristic defect of thermistor ⑥ Malfunction of input circuit on outdoor power circuit board ⑦ Malfunction of outdoor fan driving circuit

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

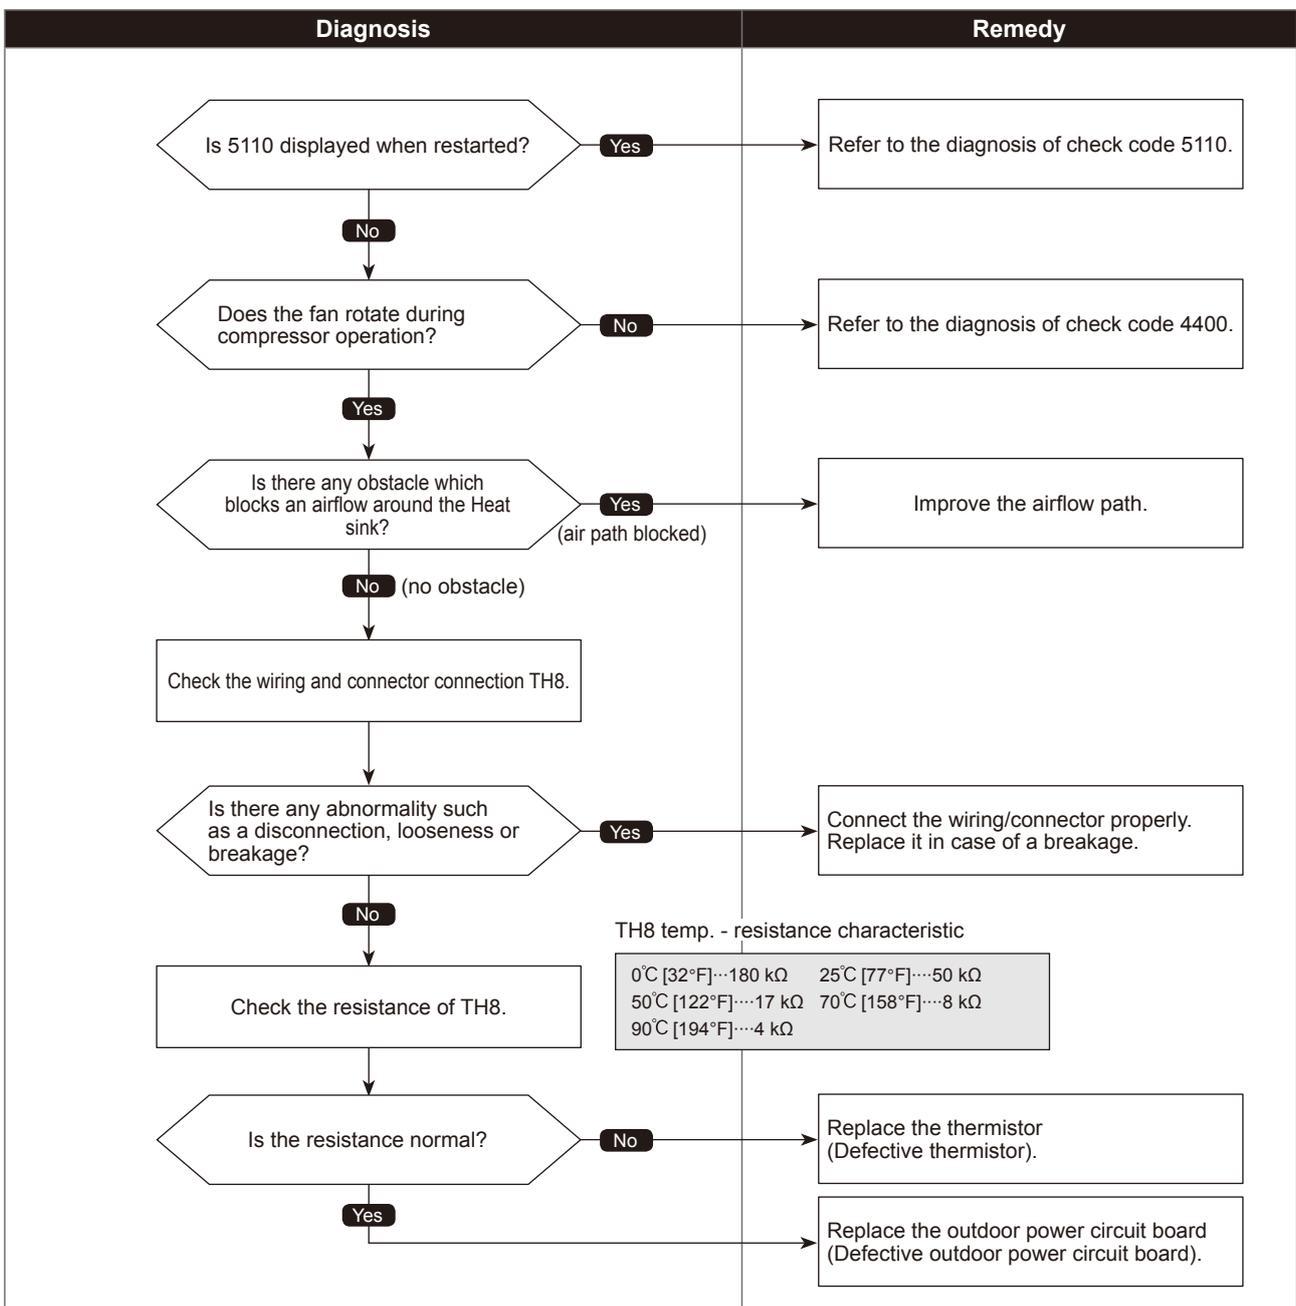

## Power module trouble

Abnormal points and detection methods	Causes and check points
Abnormal if overcurrent of DC bus or compressor is detected 30seconds after the compressor starts operating. To determine the source of abnormality, either the compressor or the power module, drive the power module forcedly.	① Closed outdoor stop valve ② Decrease of power supply voltage ③ Disconnection, looseness or conversed connection of compressor wiring ④ Defective compressor ⑤ Defective outdoor power circuit board

## ●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.


Diagnosis	Remedy
<p>Check the outdoor stop valve.</p> <p>Is the stop valve (liquid/gas) fully open?</p> <p>Yes</p> <p>Check whether the power supply voltage is normal or not.</p> <p>Yes</p> <p>Is the power supply voltage normal?</p> <p>No</p> <p>Yes</p> <p>Turn the power OFF to check for looseness, disconnection or phases of the compressor wiring.</p> <p>Are the wirings normal?</p> <p>No</p> <p>Yes</p> <p>Disconnect the wiring to check the power module.</p> <p>Does it operate normally?</p> <p>No</p> <p>Yes</p>	<p>Open the stop valve (liquid/gas) fully.</p> <p>Ensure power supply from facility.</p> <p>Connect the compressor wiring (U, V and W phase) properly, then turn the power back ON.</p> <p>Replace the outdoor power circuit board or outdoor multi controller circuit board. Defective power circuit board</p> <p>Replace the compressor (Defective compressor).</p>

## Rotational frequency of outdoor fan motor trouble

Abnormal points and detection methods	Causes and check points
Abnormal if no rotational frequency is detected, or detected a value outside the specified range during fan motor operation.	① Malfunction of fan motor ② Disconnection of CNF connector ③ Defective outdoor multi controller circuit board

## ●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

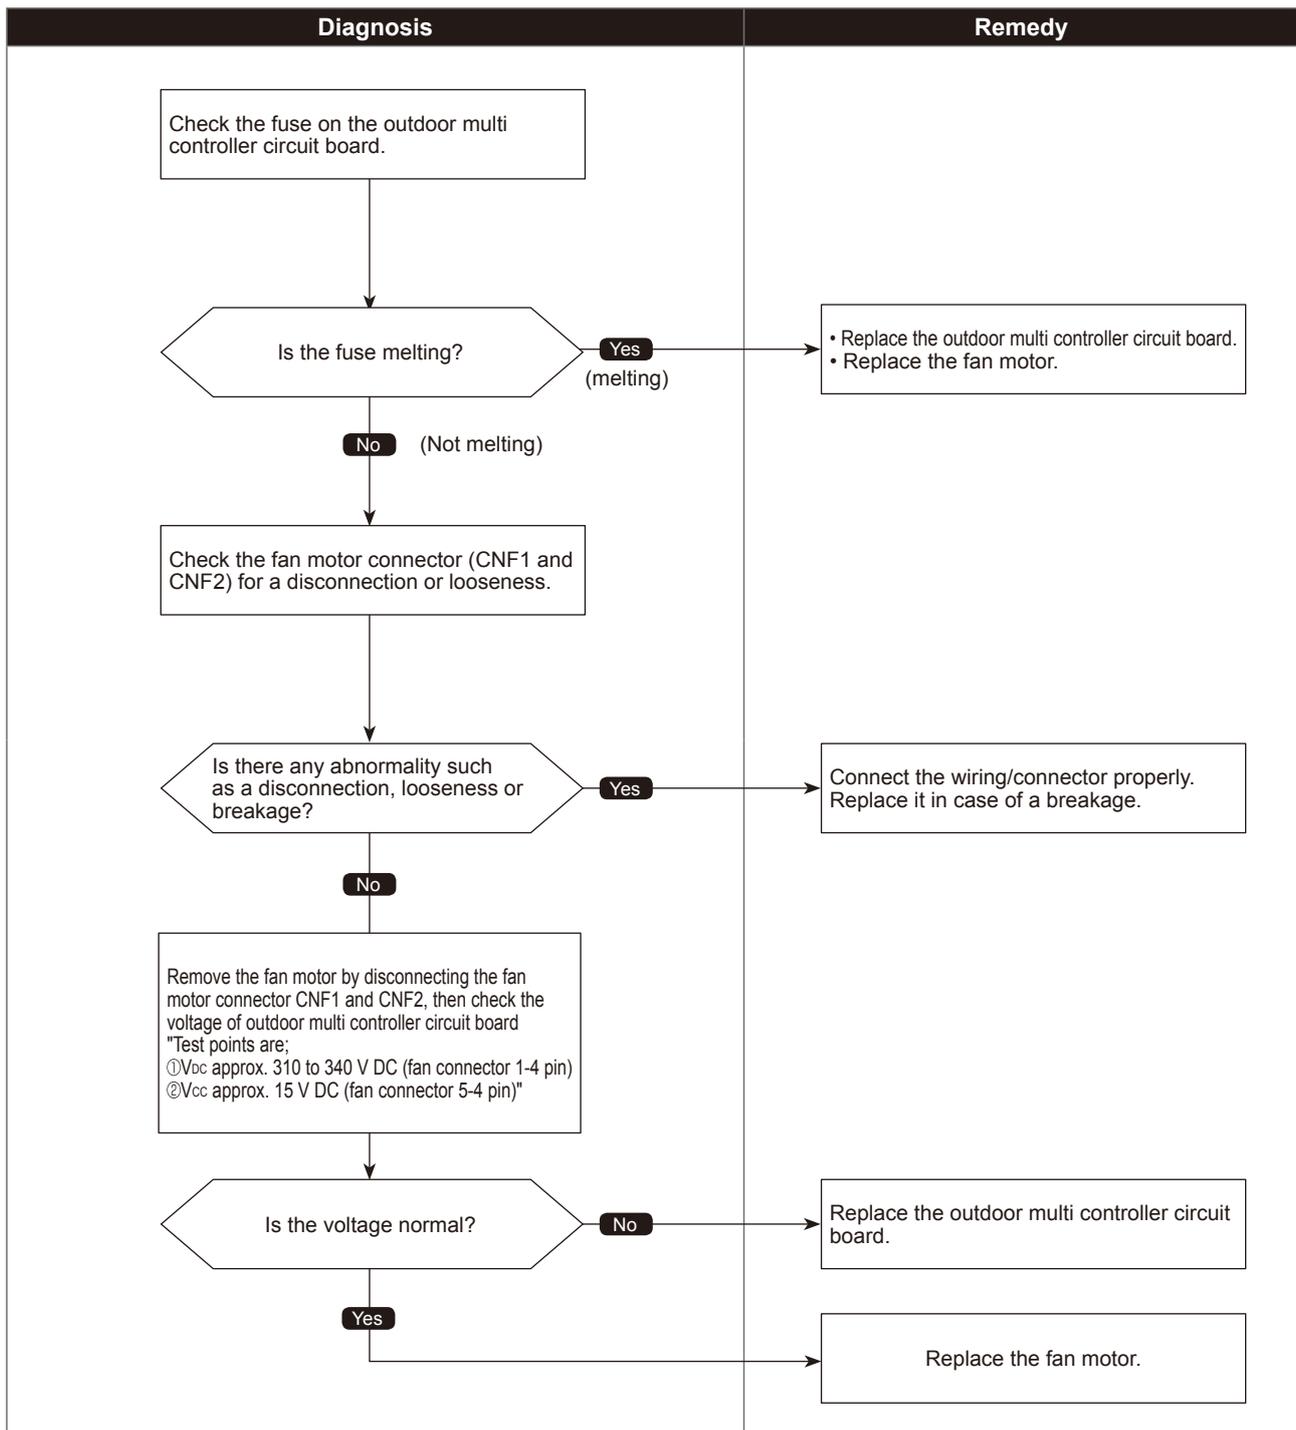

# Compressor temperature thermistor (TH4) open/short


<Detected in outdoor unit>

Abnormal points and detection methods	Causes and check points
Abnormal if TH4 detects to be open/short. (The open/short detection is disabled for 10 minutes after compressor starts, during defrosting operation, or for 10 minutes after returning from the defrosting operation.) Open: 3°C [37.4°F] or less Short: 217°C [422.6°F] or more TH4: Thermistor <Compressor>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

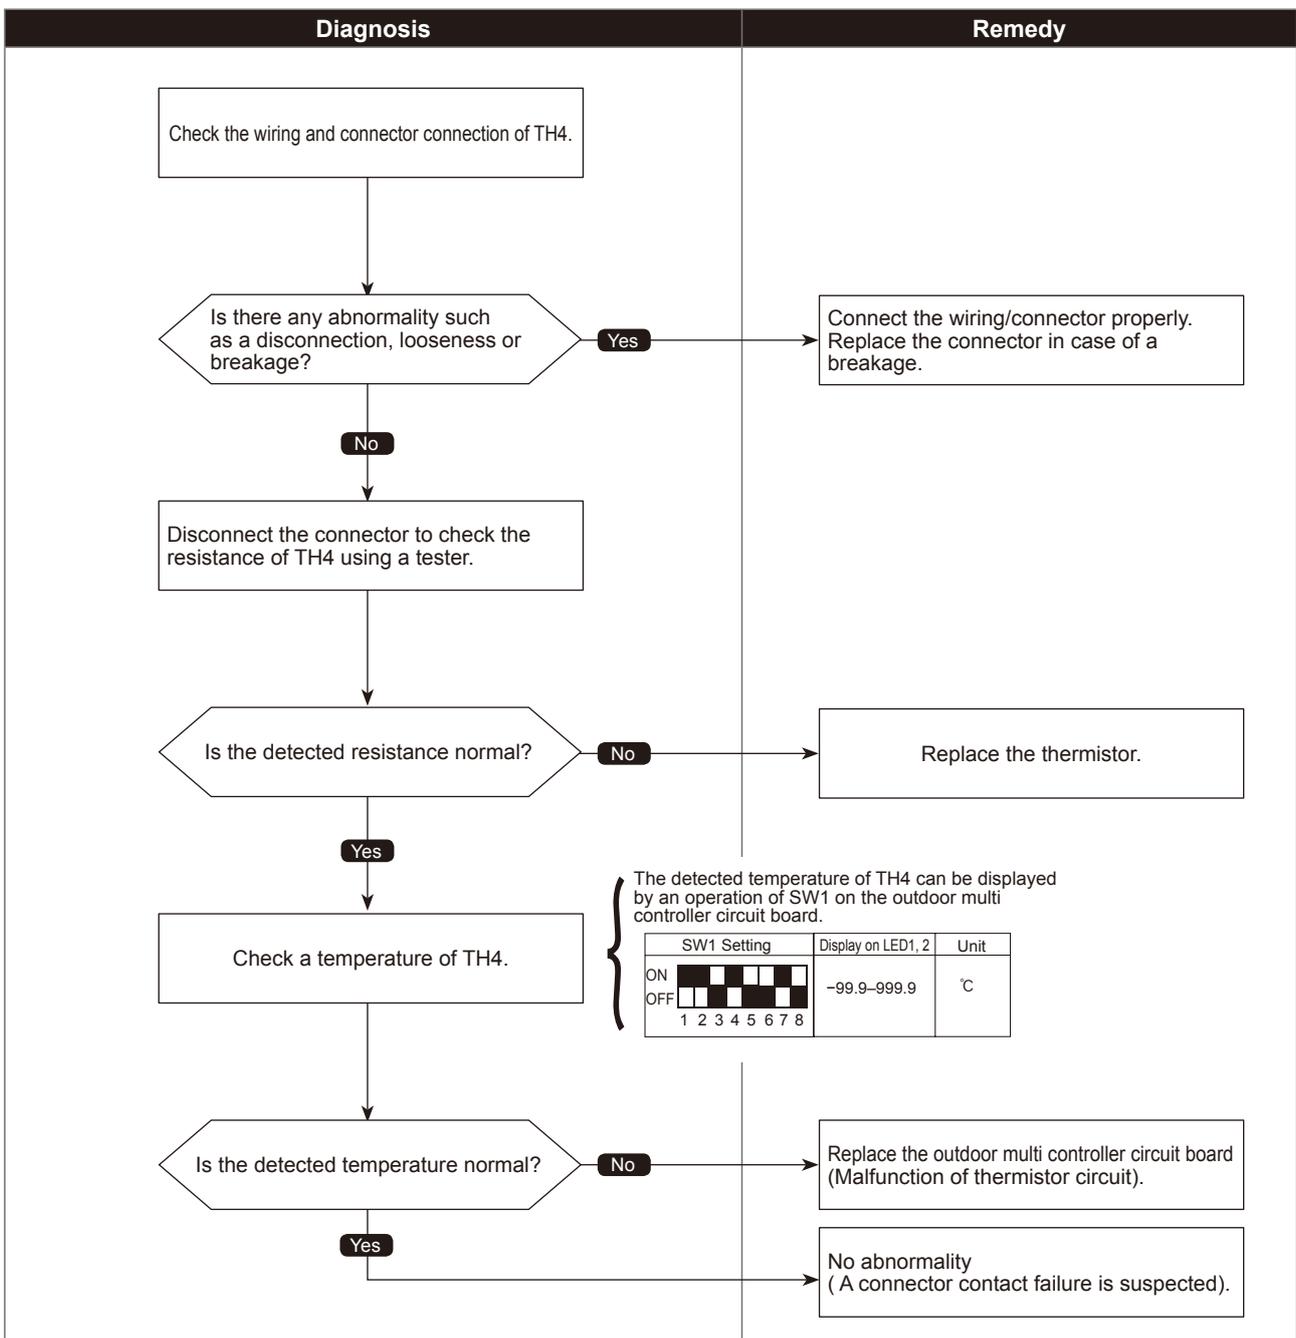

# Suction pipe temperature thermistor (TH6) open/short


<Detected in outdoor unit>

Abnormal points and detection methods	Causes and check points
Abnormal if TH6 detects to be open/short. (The open/short detection is disabled during 10 sec. to 10 min. after compressor starts, during defrosting operation, or for 10 min. after returning from the defrosting operation.) Open: -40°C [-40°F] or less Short: 90°C [194°F] or more TH6: Thermistor <Suction pipe>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

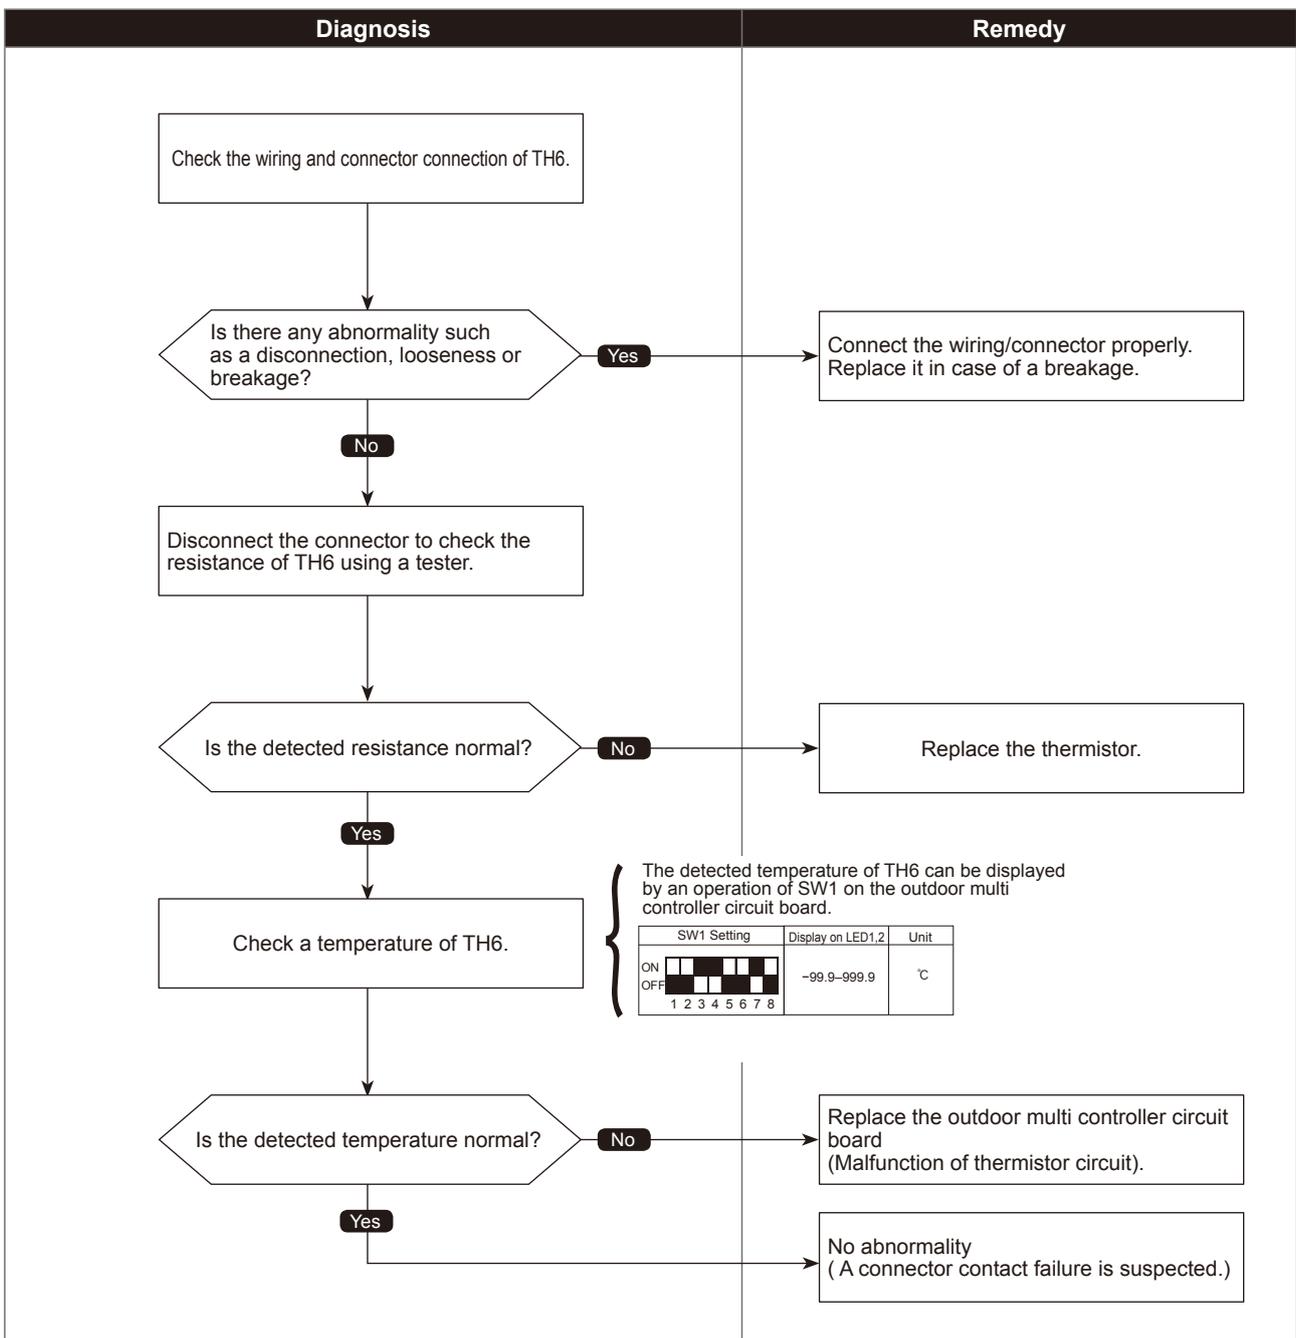

Check code

5101, 5102, 5103


## Air inlet thermistor trouble (TH21) Liquid pipe temperature thermistor trouble (TH22) Gas pipe temperature thermistor trouble (TH23)

<Detected in indoor unit>

Abnormal points and detection methods	Causes and check points
Abnormal if any of the following thermistor detected to be open/ short.  TH21: Air inlet thermistor TH22: Liquid pipe temperature thermistor TH23: Gas pipe temperature thermistor	① Contact failure of connectors ② Characteristic defect of thermistor ③ Disconnection or contact failure of thermistor ④ Defective indoor controller board

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

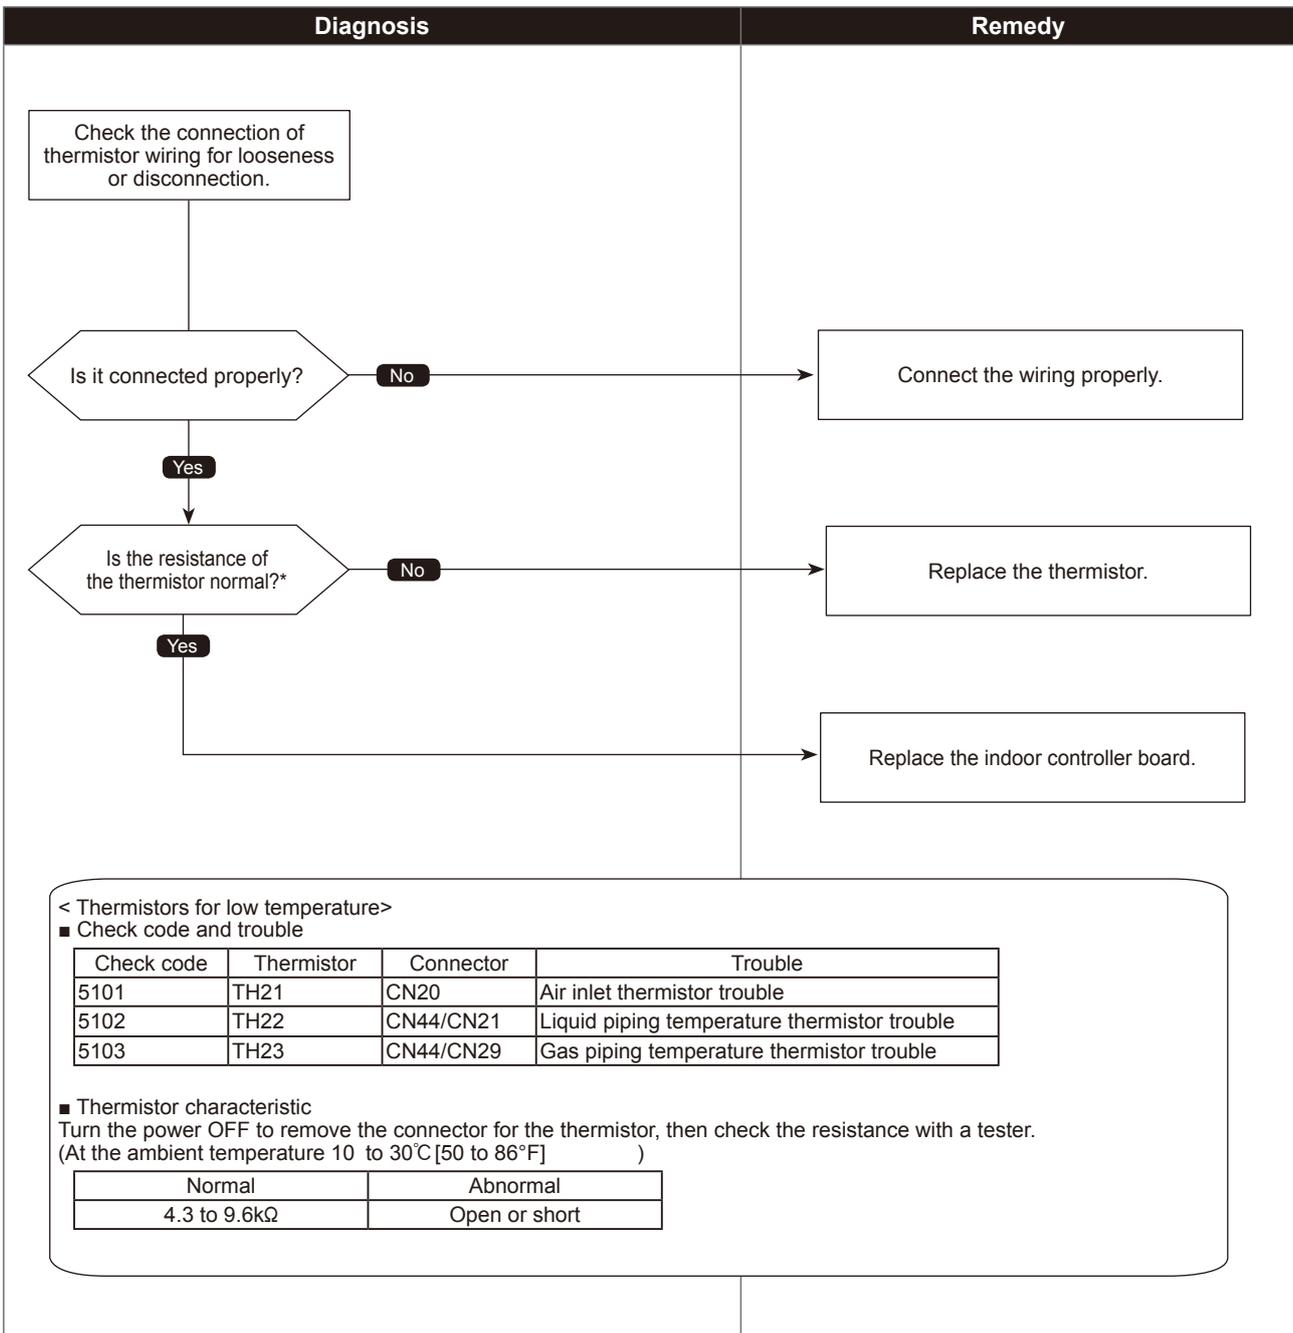

\* Symbols for thermistors and connectors may be different depending on the model. Please refer to its wiring diagram.


# Outdoor liquid pipe temperature thermistor (TH3) open/short

Abnormal points and detection methods	Causes and check points
Abnormal if TH3 detects to be open/short. (The open/short detection is disabled during 10 sec. to 10 min. after compressor starts, during defrosting operation, or for 10 min. after returning from the defrosting operation.) Open: -40°C [-40°F] or less Short: 90°C [194°F] or more      TH3: Thermistor <Outdoor liquid pipe>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

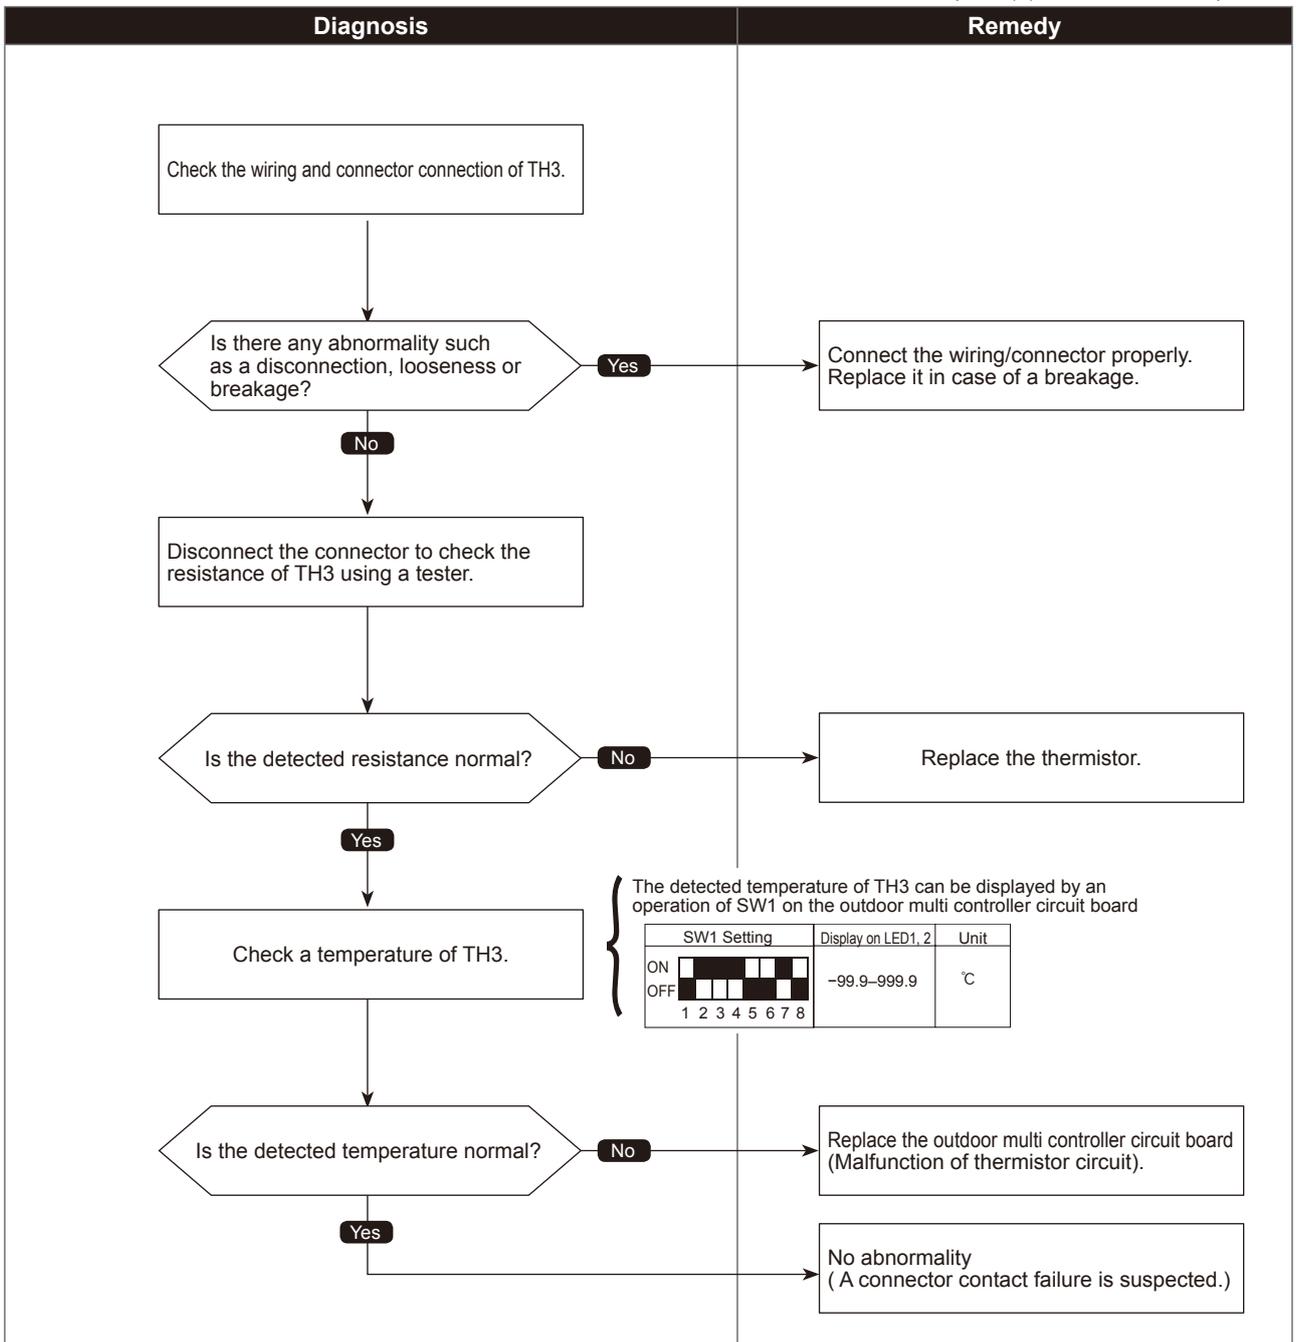


# Ambient thermistor (TH7) open/short

Abnormal points and detection methods	Causes and check points
Abnormal if TH7 detects to be open/short Open: -40°C [-40°F] or less Short: 90°C [194°F] or more TH7: Thermistor <Ambient>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

- Diagnosis of defectives  
 Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

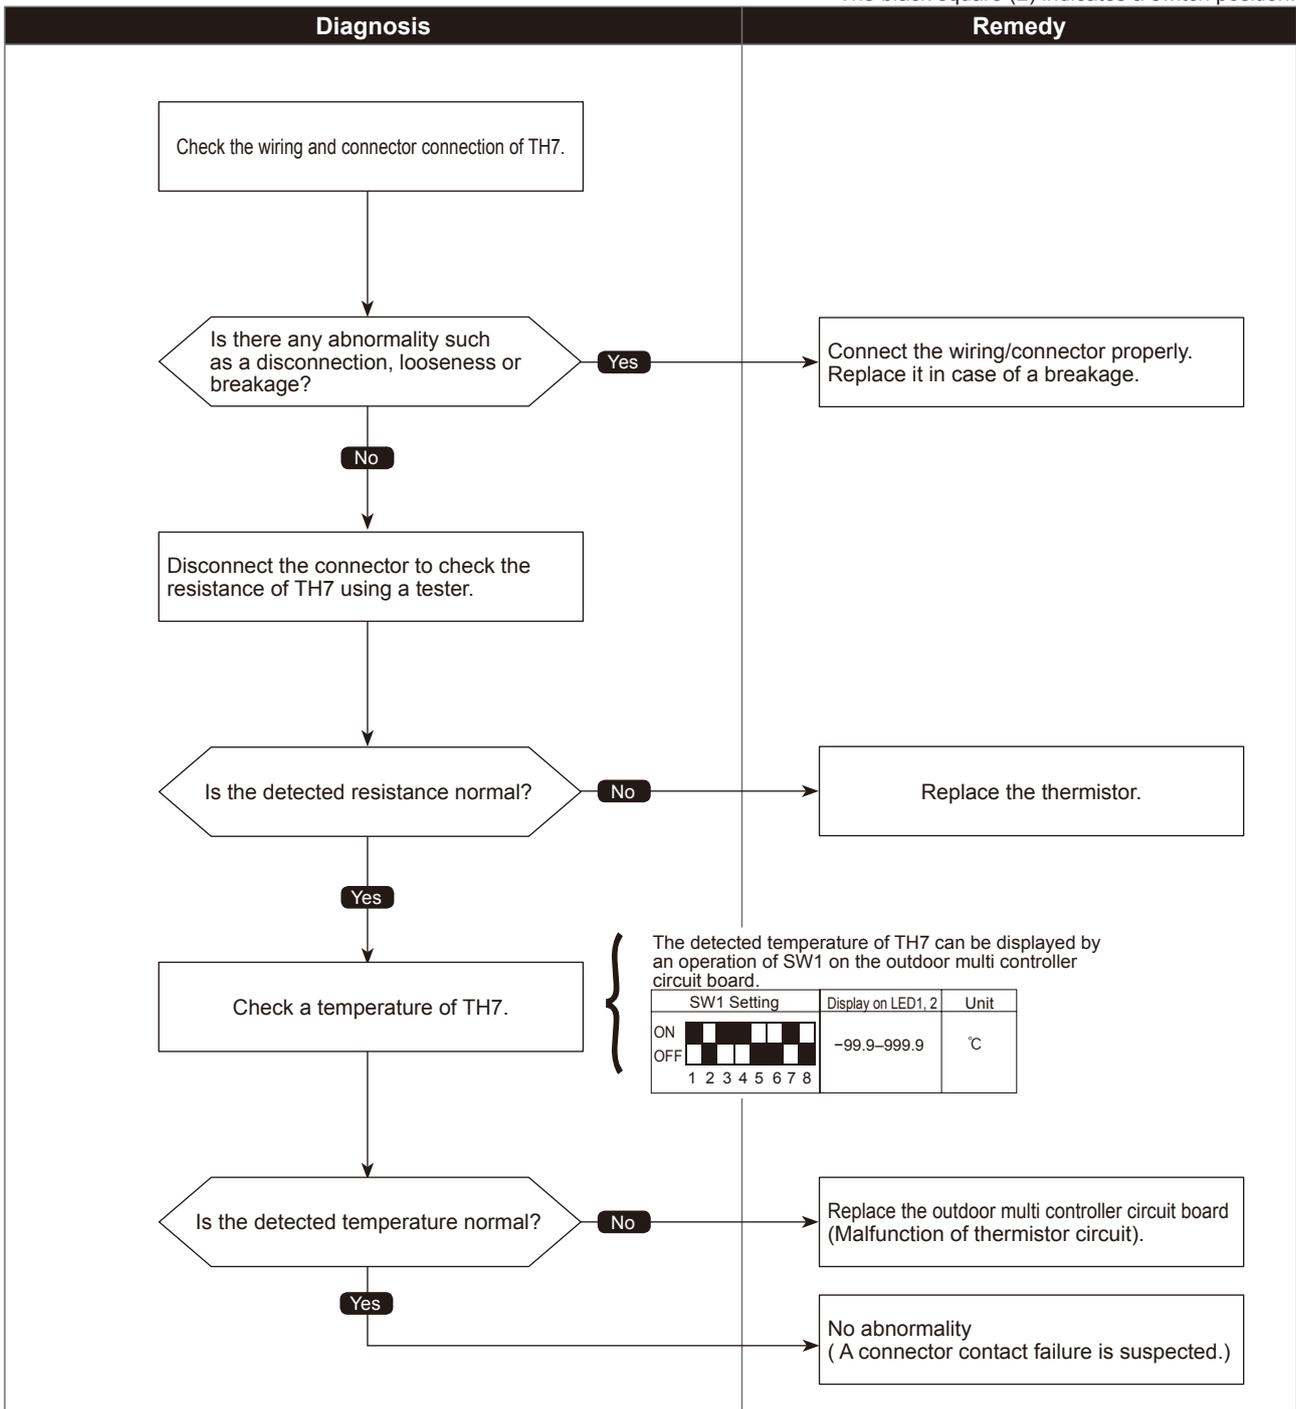


# HIC pipe temperature thermistor (TH2) open/short

Abnormal points and detection methods	Causes and check points
Abnormal if TH2 detects to be open/short. (The open/short detection is disabled during 10 sec. to 10 min. after compressor starts, during defrosting operation, or for 10 min. after returning from the defrosting operation.) Open: -40 °C [-40°F] or less Short: 90 °C [194°F] or more      TH2: Thermistor <HIC pipe>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

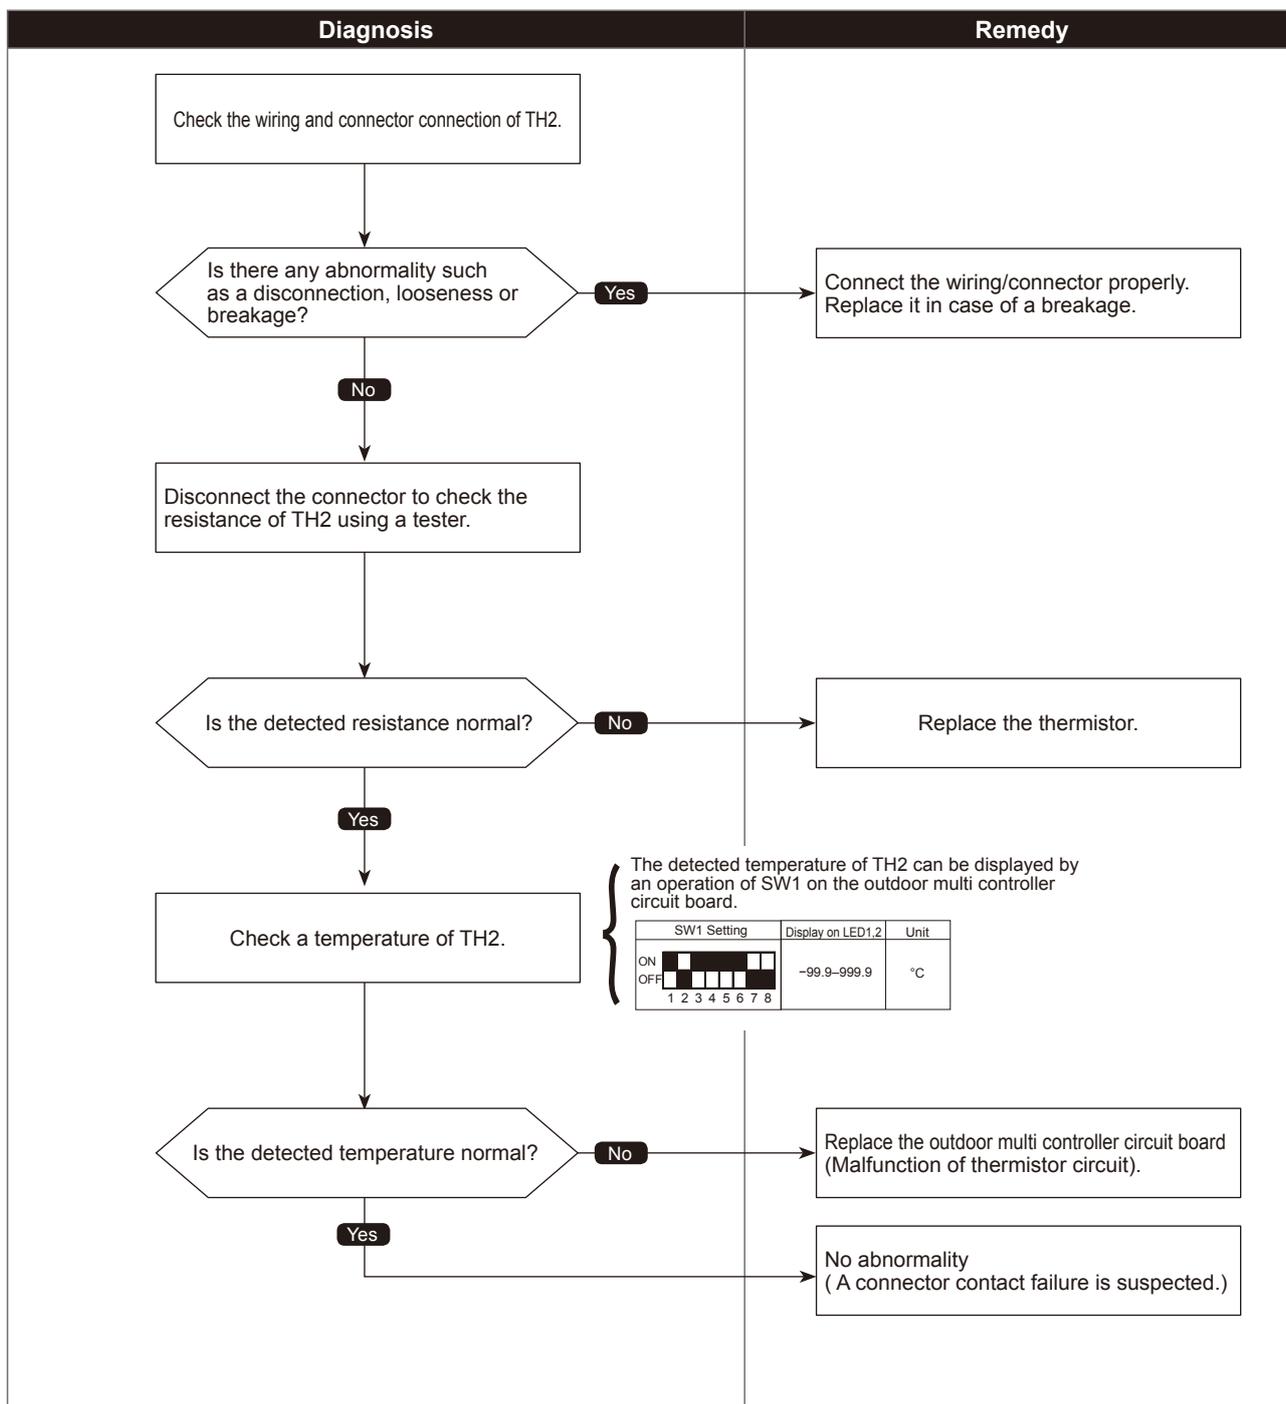


# Heat sink temperature thermistor(TH8) open/short

Abnormal points and detection methods	Causes and check points
Abnormal if TH8 detects to be open/short.  Open: -34.8°C [-36.6°F] or less Short: 102°C [215.6°F] or more  TH8: Thermistor <Heat sink>	① Disconnection or contact failure of connectors ② Characteristic defect of thermistor ③ Defective outdoor multi controller circuit board

●Diagnosis of defectives

The black square (■) indicates a switch position.

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

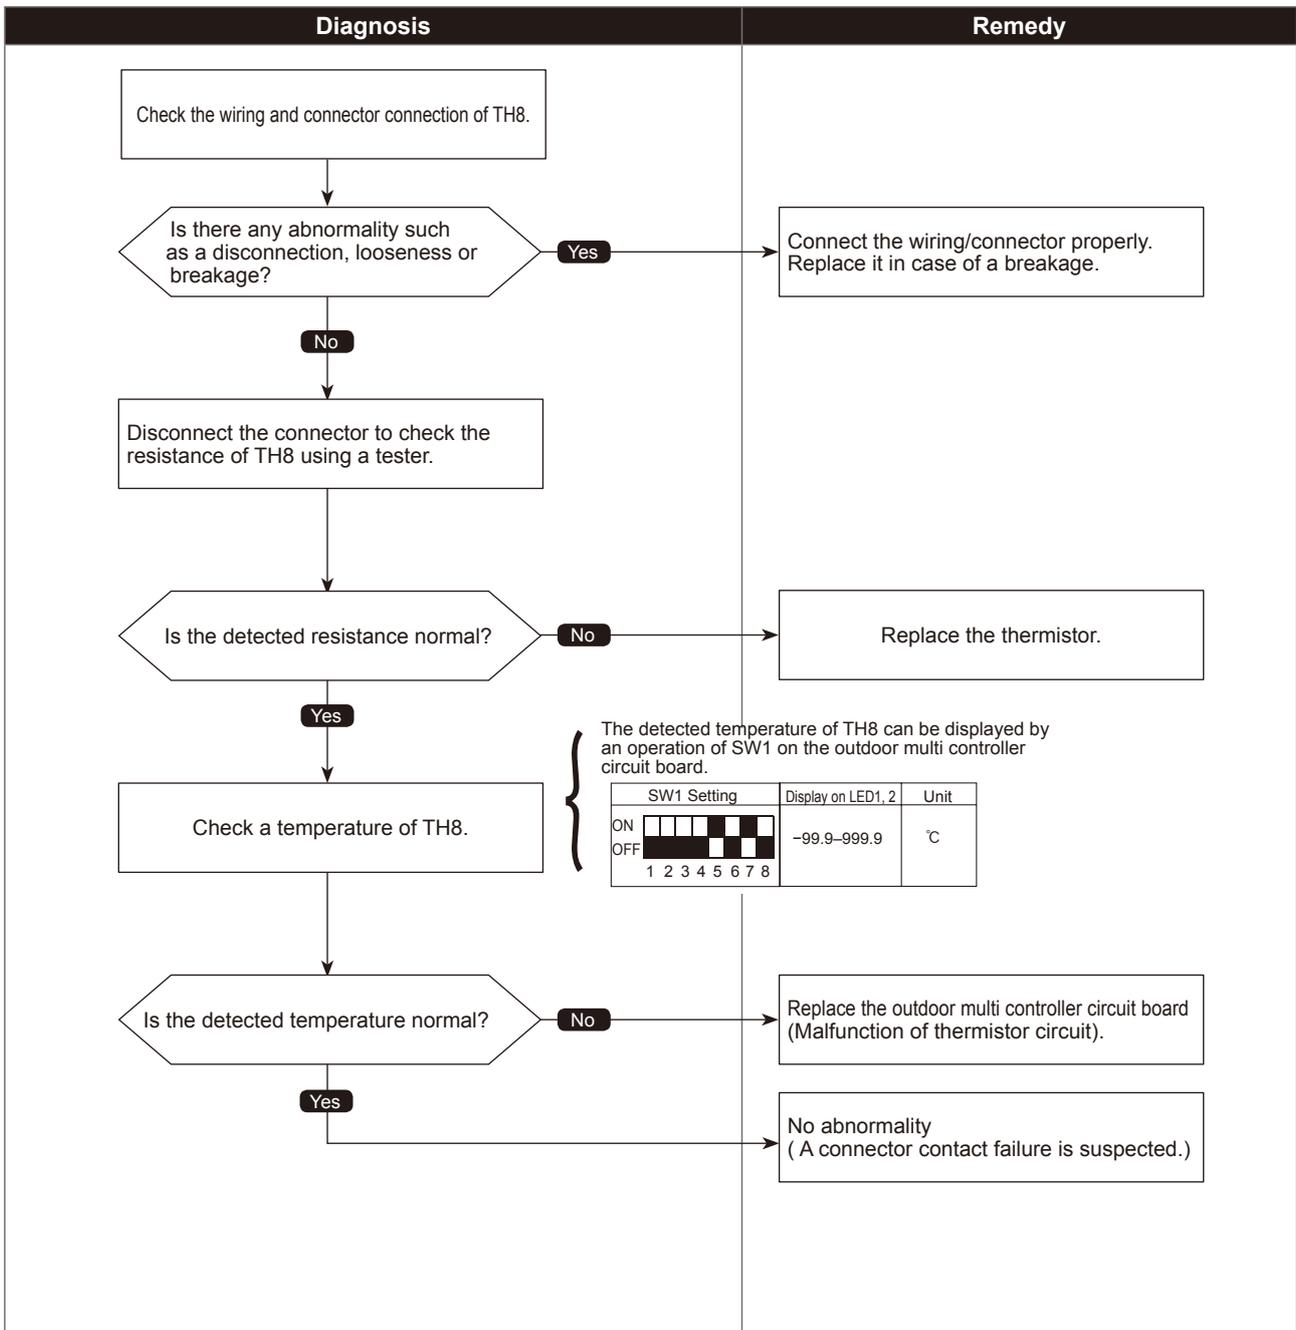


# High-pressure sensor (63HS) trouble

Abnormal points and detection methods	Causes and check points
<p>① When the detected pressure in the high-pressure sensor is 1kgf/cm<sup>2</sup> or less during operation, the compressor stops operation and enters into an anti-restart mode for 3 minutes.</p> <p>② When the detected pressure is 1kgf/cm<sup>2</sup> immediately before restarting, the compressor falls into an abnormal stop with a check code &lt;5201&gt;.</p> <p>③ For 3 minutes after compressor restarting, during defrosting operation, and for 3 minutes after returning from defrosting operation, above mentioned symptoms are not determined as abnormal.</p>	<p>① Defective high-pressure sensor</p> <p>② Decrease of internal pressure caused by gas leakage</p> <p>③ Disconnection or contact failure of connector</p> <p>④ Malfunction of input circuit on outdoor multi controller circuit board</p>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

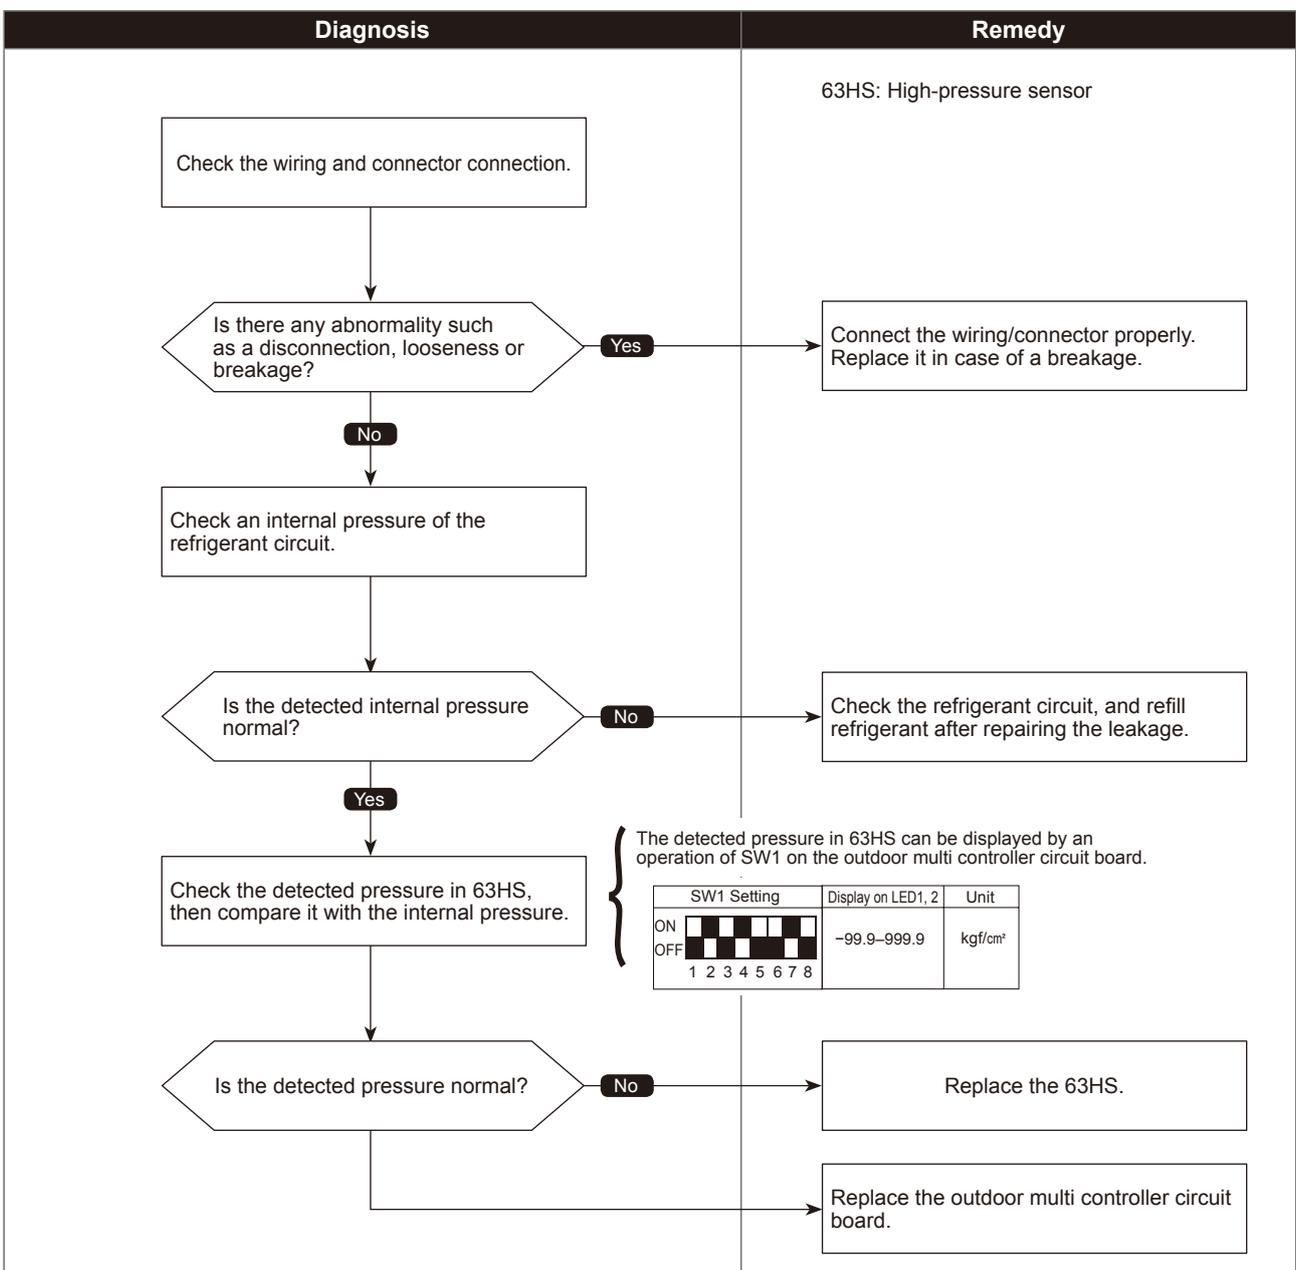


# Low-pressure sensor (63LS) trouble

Abnormal points and detection methods	Causes and check points
① When the detected pressure in the low-pressure sensor is $-2.3\text{kgf/cm}^2$ or less, or $23.1\text{kgf/cm}^2$ or more during operation, the compressor stops operation with a check code <5202>. ② For 3 minutes after compressor restarting, during defrosting operation, and for 3 minutes after returning from defrosting operation, above mentioned symptoms are not determined as abnormal.	① Defective low-pressure sensor ② Decrease of internal pressure caused by gas leakage ③ Disconnection or contact failure of connector ④ Malfunction of input circuit on outdoor multi controller circuit board

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

The black square (■) indicates a switch position.

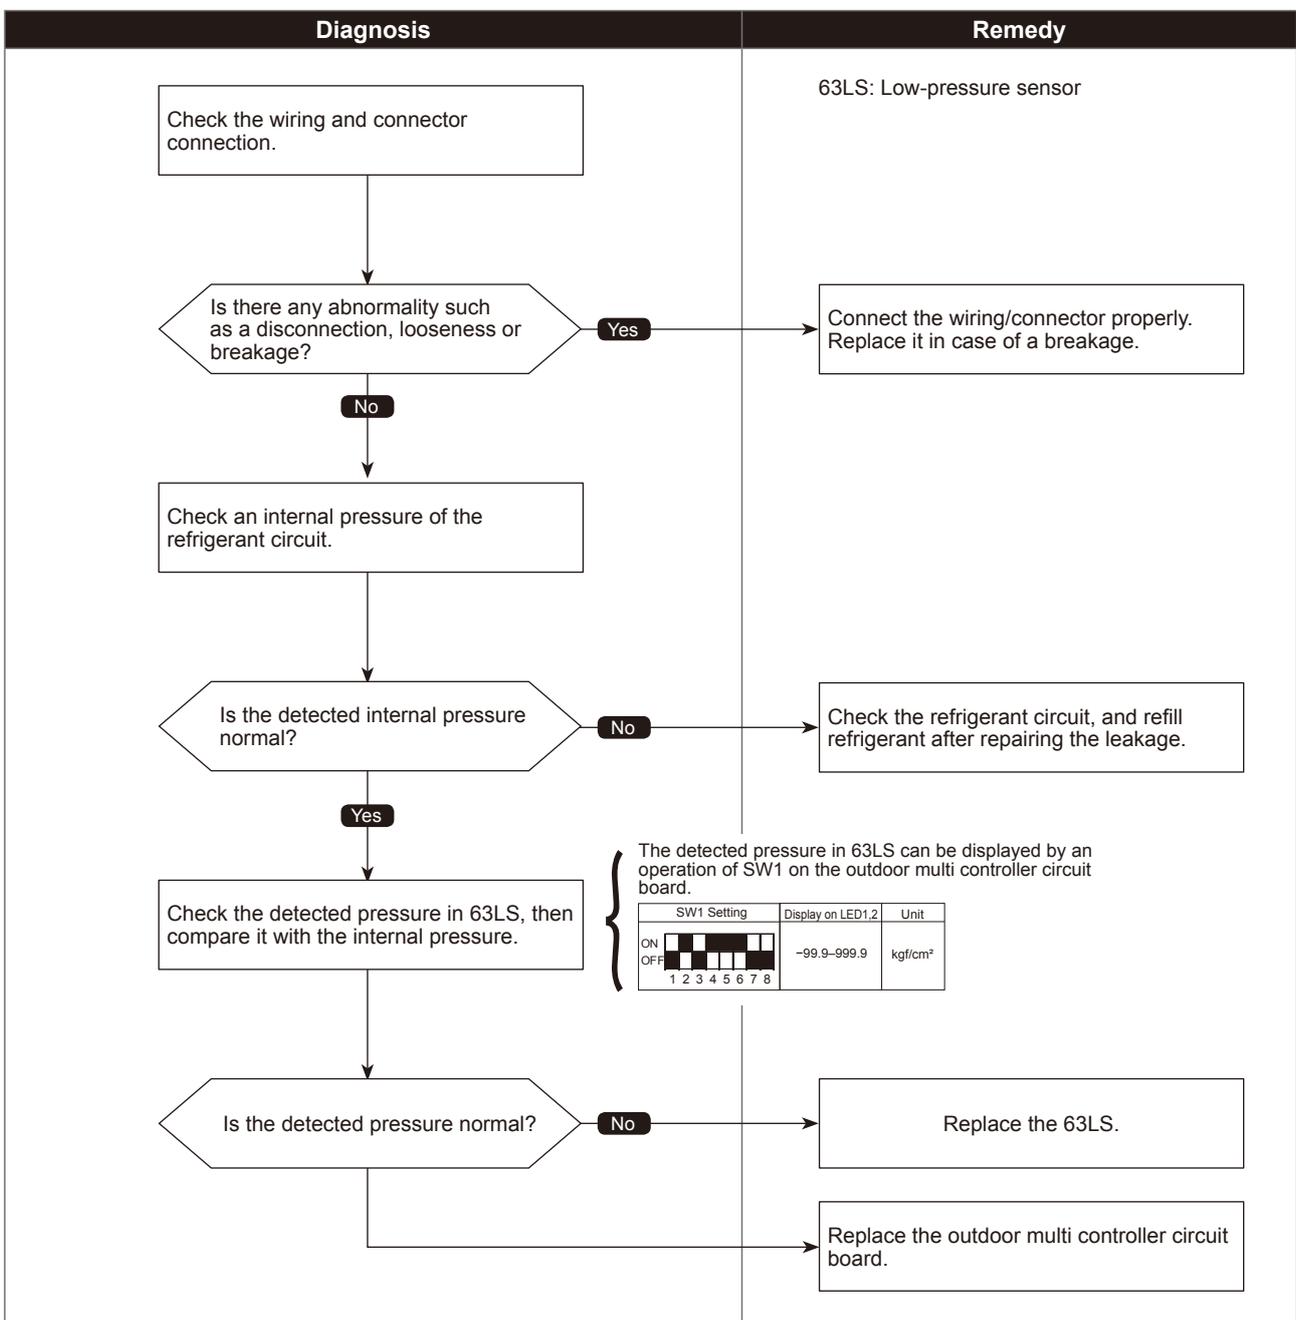

Check code

5701

## Models equipped with the float switch Contact failure of drain float switch

Abnormal points and detection methods	Causes and check points
<p>&lt;Models equipped with the float switch&gt; Abnormal if the connector on the drain float switch side CN4F is detected to be disconnected.</p>	<p>① Contact failure of connector CN4F ② Defective indoor controller board</p>

● **Diagnosis of defectives**

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

Diagnosis	Remedy
<p>&lt;Models equipped with the float switch&gt;</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">                     Disconnect and reconnect the connector for float switch on the indoor controller board side, then turn the power back ON.                 </div> <div style="margin-bottom: 10px;">                     Is the check code &lt;5701&gt; still displayed?                 </div> <div style="margin-bottom: 10px;">                     No                 </div> <div style="margin-bottom: 10px;">                     Yes                 </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">                     Check if it is short-circuited between pins 3-4 of the connector (CN4F) on the float switch side.                 </div> <div style="margin-bottom: 10px;">                     Is it short-circuited?                 </div> <div style="margin-bottom: 10px;">                     No                 </div> <div style="margin-bottom: 10px;">                     Yes                 </div>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 20px;">                     No abnormality A connector or wiring contact failure is suspected.                 </div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 20px;">                     Replace the connector for float switch.                 </div> <div style="border: 1px solid black; padding: 5px;">                     Replace the indoor controller board.                 </div>

Check code


6600

## Duplex address error

Abnormal points and detection methods	Causes and check points
Abnormal if 2 or more units with the same address are existing.	① There are 2 units or more with the same address in their controller among outdoor unit, indoor unit, Fresh Master, Lossnay or remote controller ② Noise interference on indoor/outdoor connectors

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

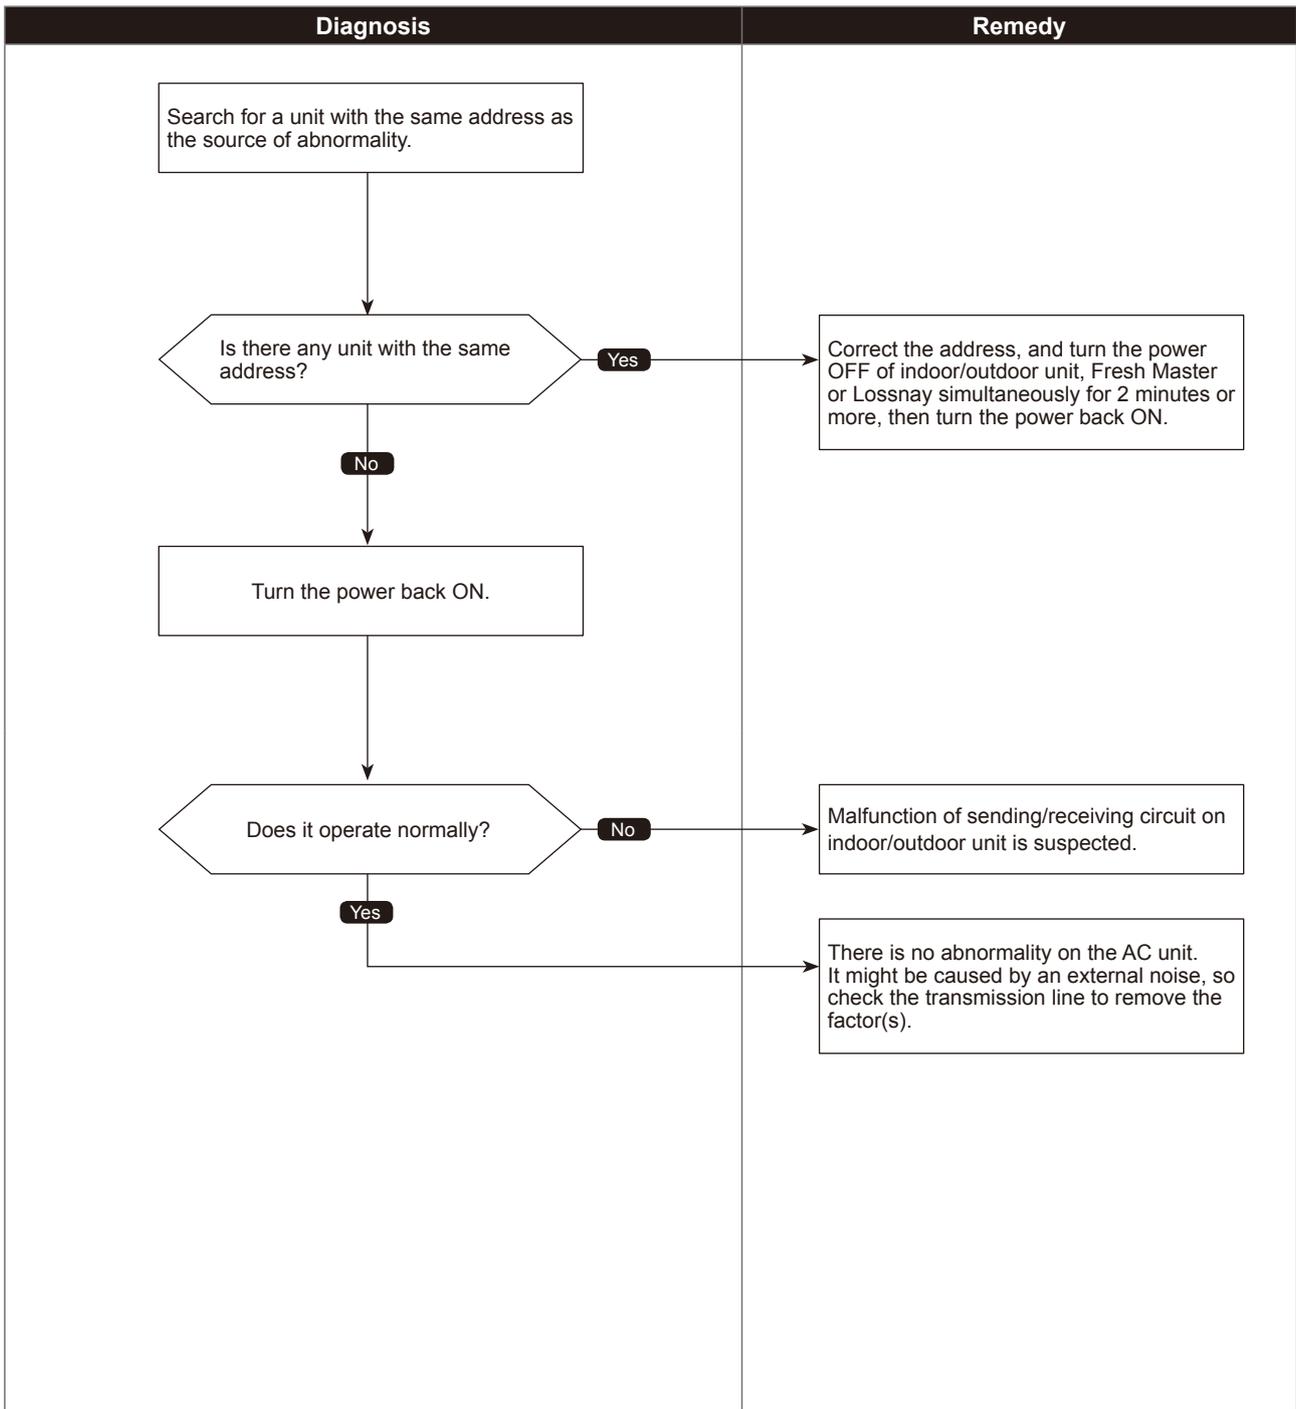

Check code

6602

## Transmission processor H/W error

Abnormal points and detection methods	Causes and check points
Abnormal if the transmission line shows "1" although the transmission processor transmitted "0".	<ul style="list-style-type: none"> <li>① A transmitting data collision occurred because of a wiring work or polarity change has performed while the power is ON on either of the indoor/outdoor unit, Fresh Master or Lossnay</li> <li>② Malfunction of transmitting circuit on transmission processor</li> <li>③ Noise interference on indoor/outdoor connectors</li> </ul>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.


Diagnosis	Remedy
<pre> graph TD     Q1{{A wiring work was performed while the power OFF}}     Q1 -- No --&gt; R1[If the wiring work was performed while the power ON, turn the power OFF of indoor/outdoor unit, Fresh Master or Lossnay simultaneously for 2 minutes or more, then turn the power back ON.]     Q1 -- Yes --&gt; P1[Turn the power back ON.]     P1 --&gt; Q2{{Does it operate normally?}}     Q2 -- No --&gt; R2[Replace the indoor/outdoor controller board.]     Q2 -- Yes --&gt; R3[There is no abnormality on the AC unit. It might be caused by an external noise, so check the transmission line to remove the factor(s).]         </pre>	<div data-bbox="965 779 1391 918" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p>If the wiring work was performed while the power ON, turn the power OFF of indoor/outdoor unit, Fresh Master or Lossnay simultaneously for 2 minutes or more, then turn the power back ON.</p> </div> <div data-bbox="965 1249 1391 1344" style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p>Replace the indoor/outdoor controller board.</p> </div> <div data-bbox="965 1384 1391 1523" style="border: 1px solid black; padding: 5px;"> <p>There is no abnormality on the AC unit. It might be caused by an external noise, so check the transmission line to remove the factor(s).</p> </div>

## Transmission bus BUSY error

Abnormal points and detection methods	Causes and check points
<p>① Over error by collision Abnormal if no-transmission status caused by a transmitting data collision is consecutive for 8 to 10 minutes.</p> <p>② Abnormal if a status, that data is not allowed on the transmission line because of noise and such, is consecutive for 8 to 10 minutes</p>	<p>① The transmission processor is unable to transmit due to a short-cycle voltage such as noise is mixed on the transmission line.</p> <p>② The transmission processor is unable to transmit due to an increase of transmission data amount caused by a miswiring of the terminal block (transmission line) (TB3) and the terminal block (centralized control line) (TB7) on the outdoor unit.</p> <p>③ The share on transmission line becomes high due to a mixed transmission caused by a malfunction of repeater on the outdoor unit, which is a function to connect/disconnect transmission from/to control system and centralized control system.</p>

## ●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

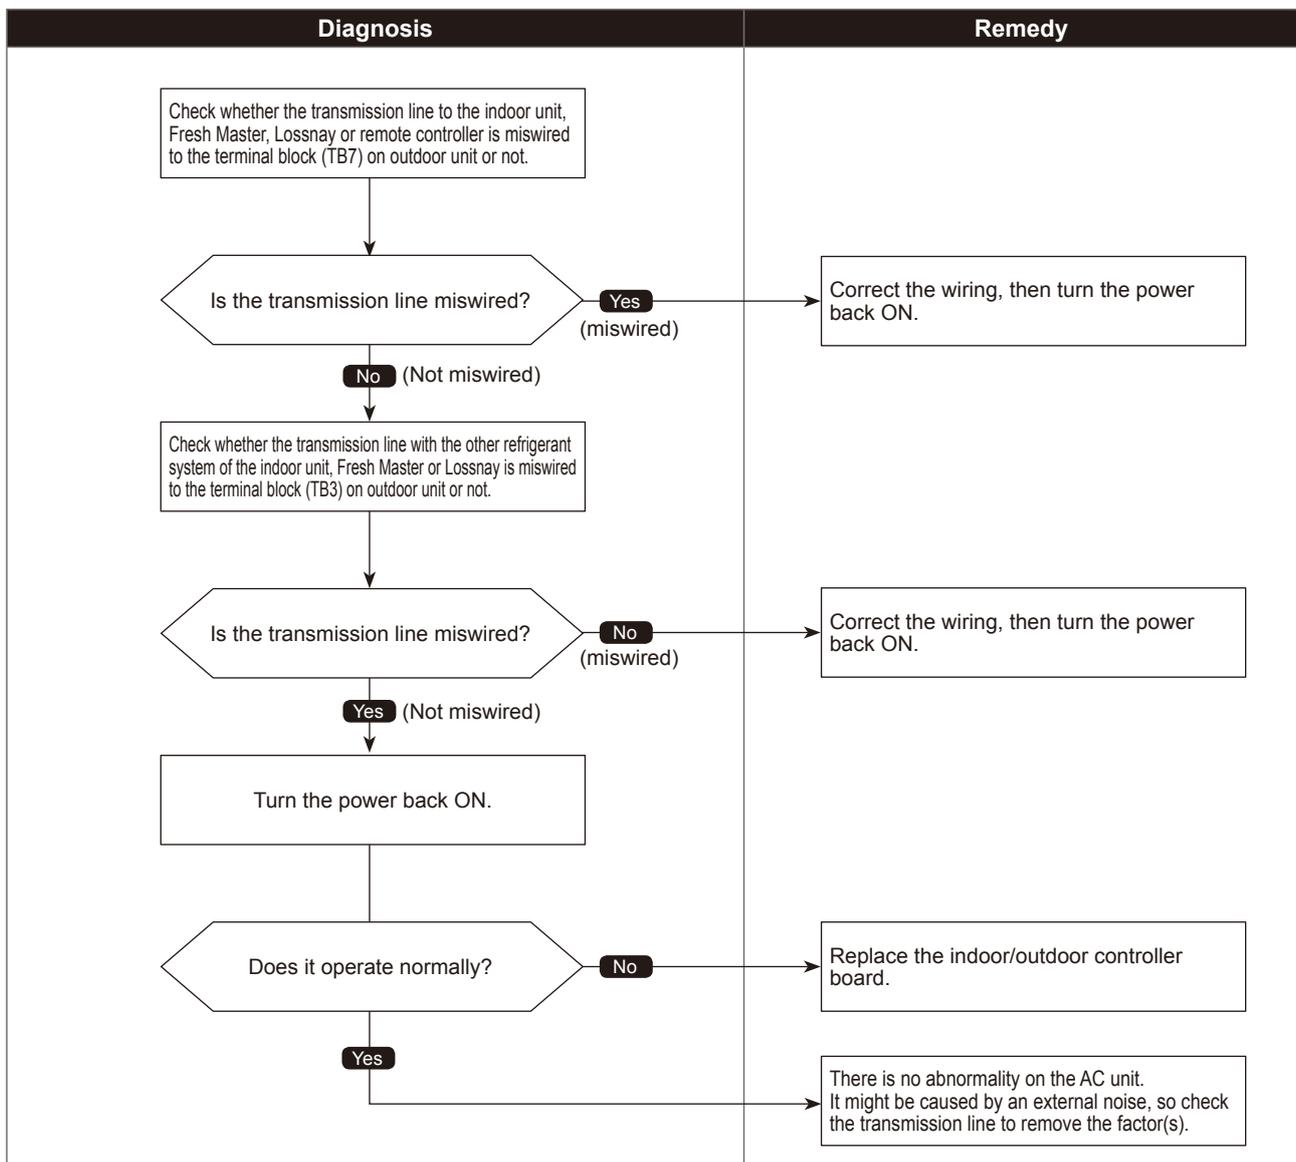

## Signal communication error with transmission processor

Abnormal points and detection methods	Causes and check points
① Abnormal if the data of unit/transmission processor were not normally transmitted. ② Abnormal if the address transmission from the unit processor was not normally transmitted.	① Accidental disturbance such as noise or lightning surge ② Hardware malfunction of transmission processor

● Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<p>Turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, then turn the power back ON.</p> <p>Does it operate normally?</p> <p>Yes</p> <p>No</p>	<p>Replace the controller (Defect of error source controller).</p> <p>There is no abnormality on the AC unit. It might be caused by an external noise, so check the transmission line to remove the factor(s).</p>

## No ACK error


Abnormal points and detection methods	Causes and check points
<p>① Represents a common error detection An abnormality detected by the sending side controller when receiving no ACK from the receiving side, though signal was once sent. The sending side searches the error in 30 seconds interval for 6 times continuously.</p>	<p>① The previous address unit does not exist since the address switch was changed while in electric continuity status. ② Decline of transmission voltage/signal caused by tolerance over on transmission line ·At the furthest end: 200 m ·On remote controller line: (12 m) ③ Decline of transmission voltage/ signal due to unmatched transmission line types ·Types for shield line: CVVS, CPEVS ·Line diameter: 1.25 mm<sup>2</sup> or more ④ Decline of transmission voltage/ signal due to excessive number of connected units ⑤ Malfunction due to accidental disturbance such as noise or lightning surge ⑥ Defect of error source controller</p>
<p>② The cause of displayed address and attribute is on the outdoor unit side An abnormality detected by the indoor unit if receiving no ACK when transmitting signal from the indoor unit to the outdoor unit.</p>	<p>① Contact failure of indoor/outdoor unit transmission line. ② Disconnection of transmission connector (CN2M) on indoor unit. ③ Malfunction of sending/receiving circuit on indoor/outdoor unit.</p>
<p>③ The cause of displayed address and attribute is on the indoor unit side An abnormality detected by the remote controller if receiving no ACK when sending data from the remote controller to the indoor unit.</p>	<p>① While operating with multi refrigerant system indoor units, an abnormality is detected when the indoor unit transmit signal to the remote controller during the other refrigerant-system outdoor unit is turned OFF, or within 2 minutes after it turned back ON. ② Contact failure of indoor unit or remote controller transmission line ③ Disconnection of transmission connector (CN2M) on indoor unit ④ Malfunction of sending/receiving circuit on indoor unit or remote controller</p>
<p>④ The cause of the displayed address and attribute is on the remote controller side An abnormality detected by the indoor unit if receiving no ACK when transmitting signal from the indoor unit to the remote controller.</p>	<p>① While operating with multi refrigerant system indoor units, an abnormality is detected when the indoor unit transmit signal to the remote controller during the other refrigerant-system outdoor unit is turned OFF, or within 2 minutes after it turned back ON. ② Contact failure of indoor unit or remote controller transmission line ③ Disconnection of transmission connector (CN2M) on indoor unit ④ Malfunction of sending/receiving circuit on indoor unit or remote controller</p>

## No ACK error

Abnormal points and detection methods	Causes and check points
<p>⑤ The cause of displayed address and attribute is on the Fresh Master side An abnormality detected by the indoor unit if receiving no ACK when transmitting signal from the indoor unit to the Fresh Master.</p>	<p>① While the indoor unit is operating with multi refrigerant system Fresh Master, an abnormality is detected when the indoor unit transmits signal to the remote controller while the outdoor unit with the same refrigerant system as the Fresh Master is turned OFF, or within 2 minutes after it turned back ON.</p> <p>② Contact failure of indoor unit or Fresh Master transmission line</p> <p>③ Disconnection of transmission connector (CN2M) on indoor unit or Fresh Master</p> <p>④ Malfunction of sending/receiving circuit on indoor unit or Fresh Master</p>
<p>⑥ The cause of displayed address and attribute is on Lossnay side An abnormality detected by the indoor unit if receiving no ACK when the indoor unit transmit signal to the Lossnay.</p>	<p>① An abnormality is detected when the indoor unit transmits signal to Lossnay while the Lossnay is turned OFF.</p> <p>② While the indoor unit is operating with the other refrigerant Lossnay, an abnormality is detected when the indoor unit transmits signal to the Lossnay while the outdoor unit with the same refrigerant system as the Lossnay is turned OFF, or within 2 minutes after it turned back ON.</p> <p>③ Contact failure of indoor unit or Lossnay transmission line</p> <p>④ Disconnection of transmission connector (CN2M) on indoor unit</p> <p>⑤ Malfunction of sending/receiving circuit on indoor unit or Lossnay</p>
<p>⑦ The controller of displayed address and attribute is not recognized</p>	<p>① The previous address unit does not exist since the address switch was changed while in electric continuity status.</p> <p>② An abnormality detected at transmitting from the indoor unit since the Fresh Master/Lossnay address are changed after synchronized setting of Fresh Master/Lossnay by the remote controller.</p>


●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

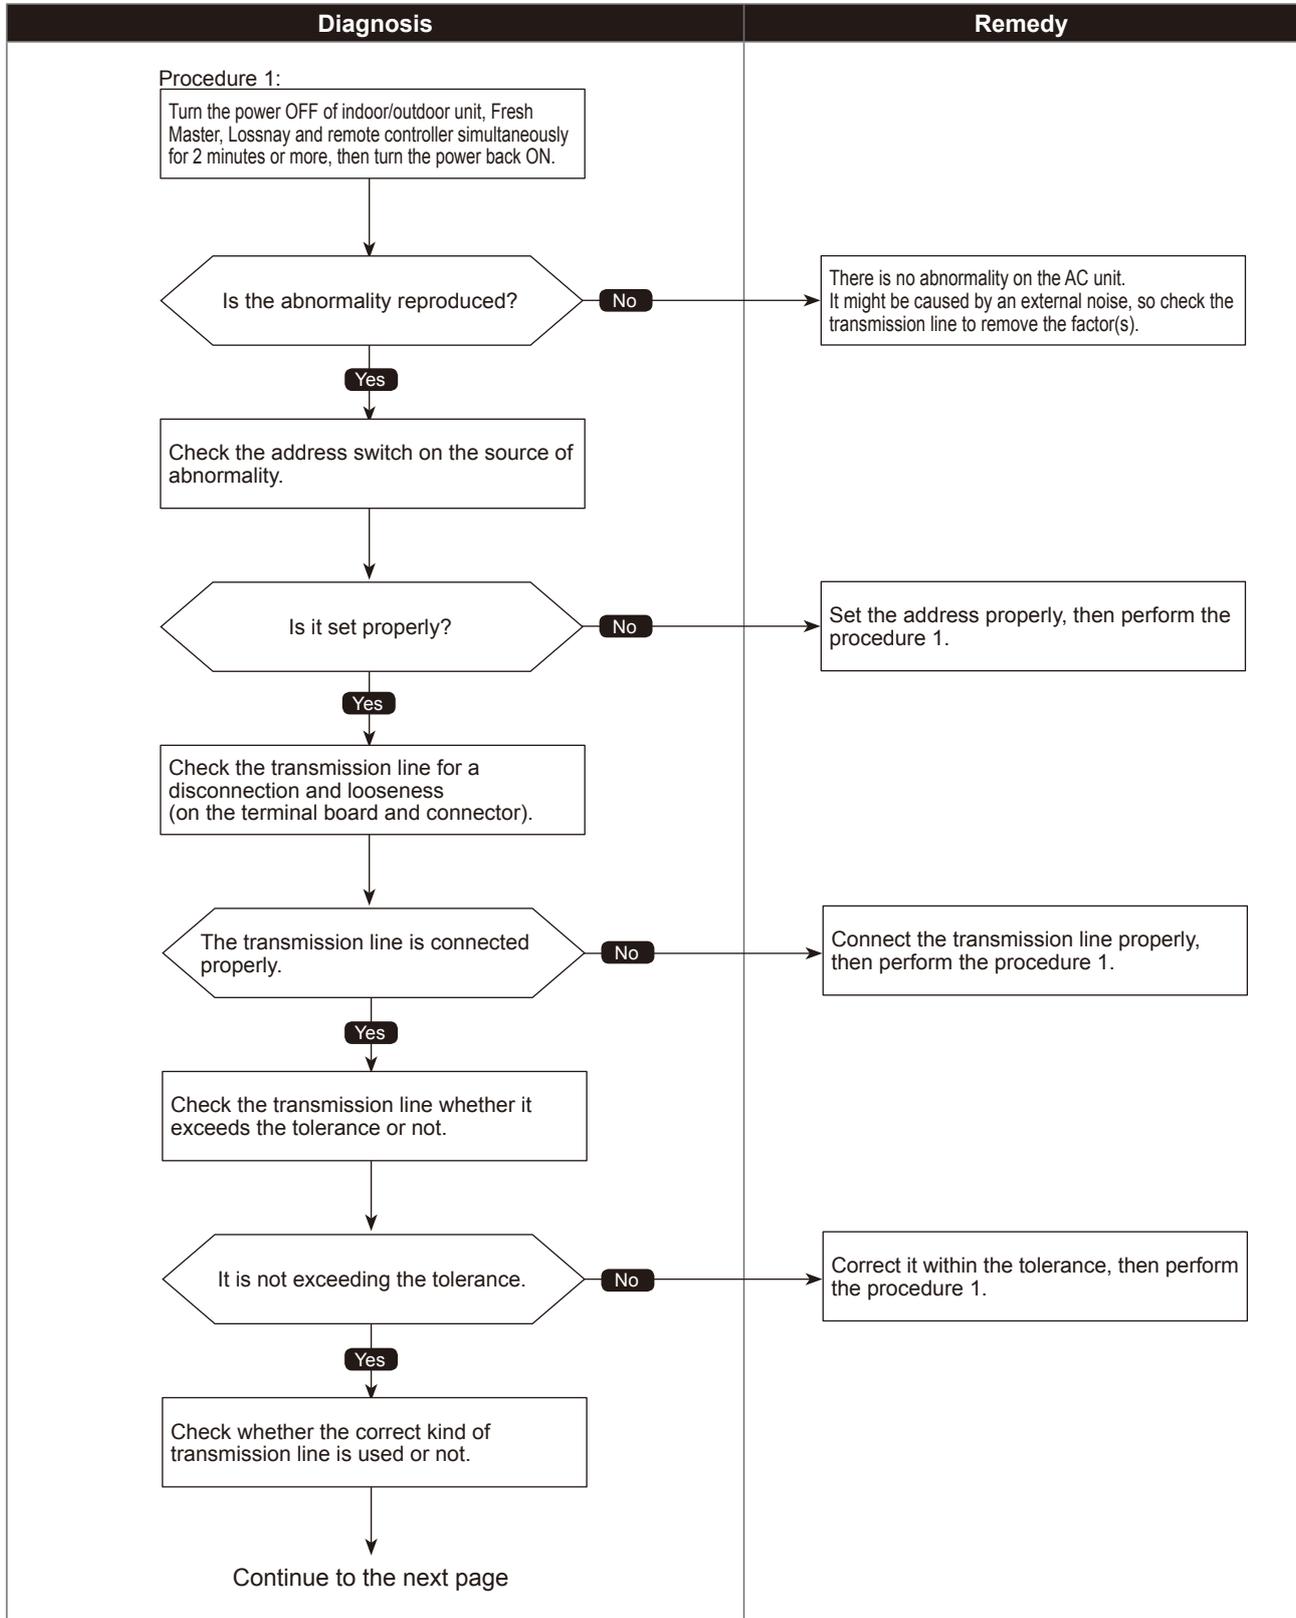

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

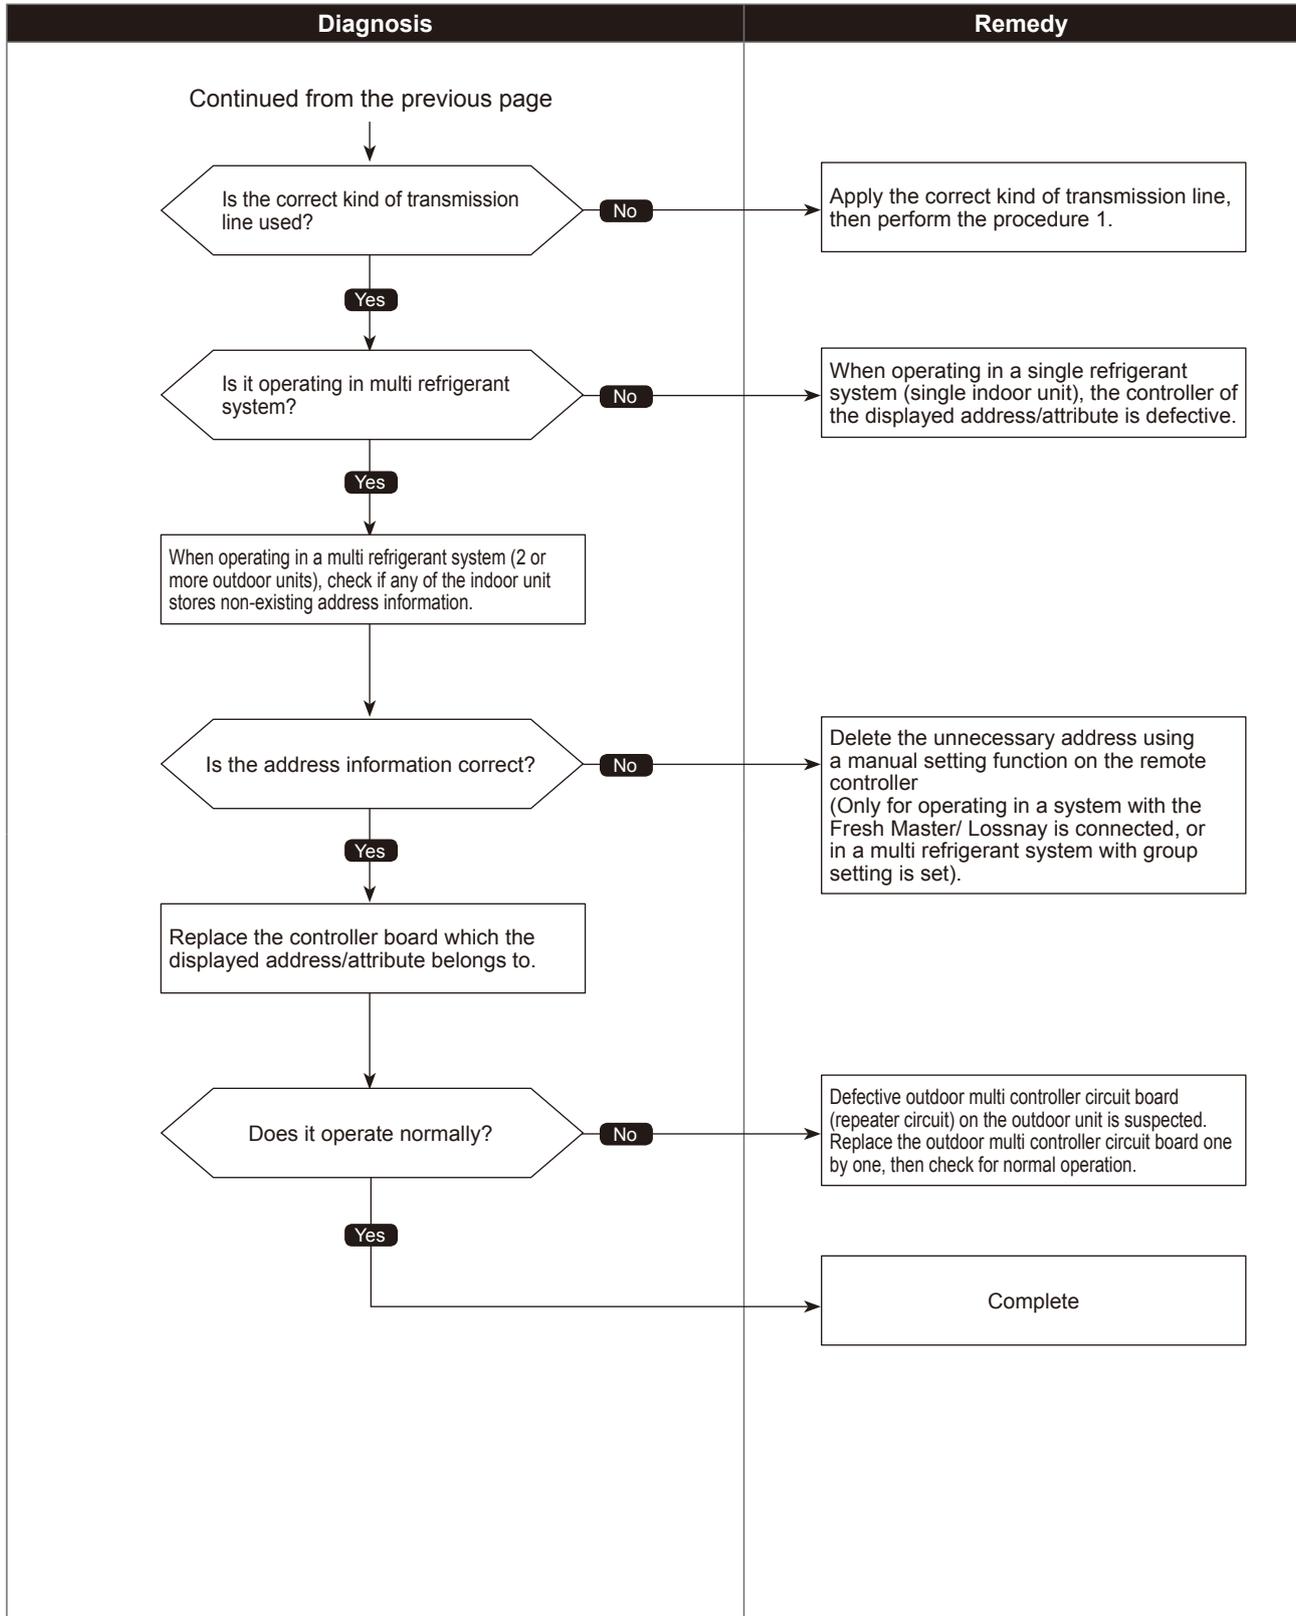


# No response frame error

Abnormal points and detection methods	Causes and check points
Abnormal if receiving no response command while already received ACK. The sending side searches the error in 30 seconds interval for 6 times continuously.	<ul style="list-style-type: none"> <li>① Continuous failure of transmission due to noise etc</li> <li>② Decline of transmission voltage/signal caused by tolerance over on transmission line                             <ul style="list-style-type: none"> <li>·At the furthest end: 200 m</li> <li>·On remote controller line: (12 m)</li> </ul> </li> <li>③ Decline of transmission voltage/ signal due to unmatched transmission line types                             <ul style="list-style-type: none"> <li>·Types for shield line: CVVS, CPEVS</li> <li>·Line diameter: 1.25 mm<sup>2</sup> or more</li> </ul> </li> <li>④ Accidental malfunction of error source controller</li> </ul>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

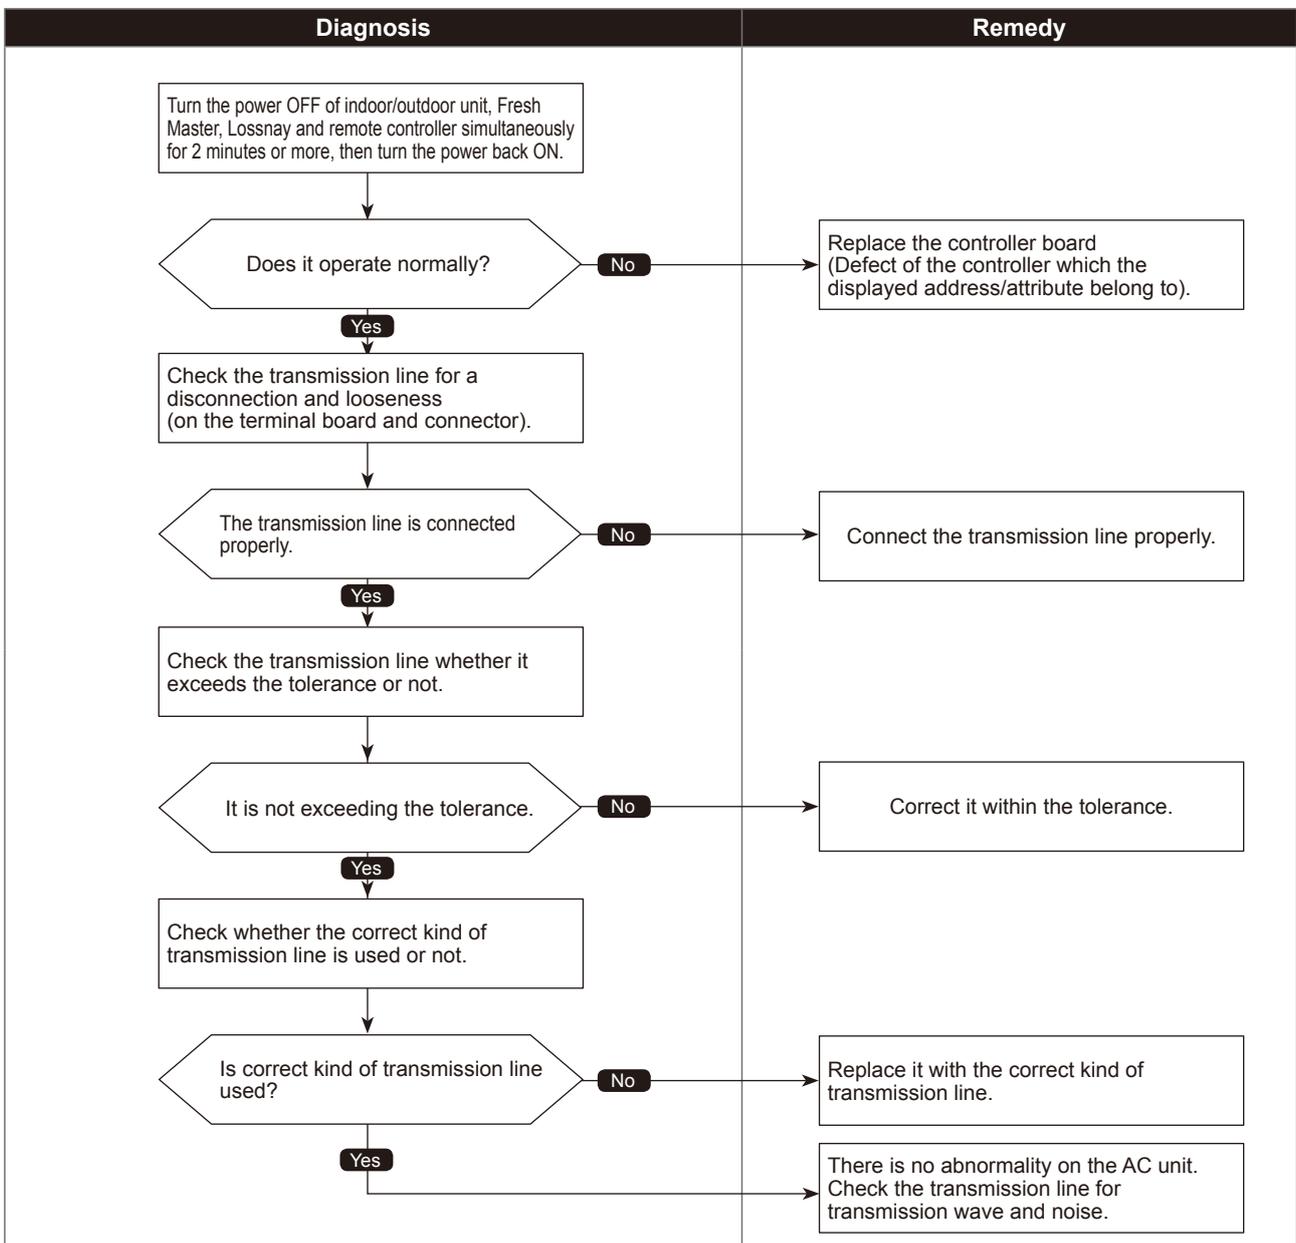


# MA communication receive error

Abnormal points and detection methods	Causes and check points
<p>Detected in remote controller or indoor unit:</p> <ul style="list-style-type: none"> <li>① When the main or sub remote controller cannot receive signal from indoor unit which has the "0" address.</li> <li>② When the sub remote controller cannot receive signal.</li> <li>③ When the indoor controller board cannot receive signal from remote controller or another indoor unit.</li> <li>④ When the indoor controller board cannot receive signal.</li> </ul>	<ul style="list-style-type: none"> <li>① Contact failure of remote controller wirings</li> <li>② Irregular Wiring (A wiring length, number of connecting remote controllers or indoor units, or a wiring thickness does not meet the conditions specified in the chapter "Electrical Work" in the indoor unit Installation Manual.)</li> <li>③ Malfunction of the remote controller sending/receiving circuit on indoor unit with the LED2 is blinking.</li> <li>④ Malfunction of the remote controller sending/receiving circuit</li> <li>⑤ Remote controller transmitting error caused by noise interference</li> </ul>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

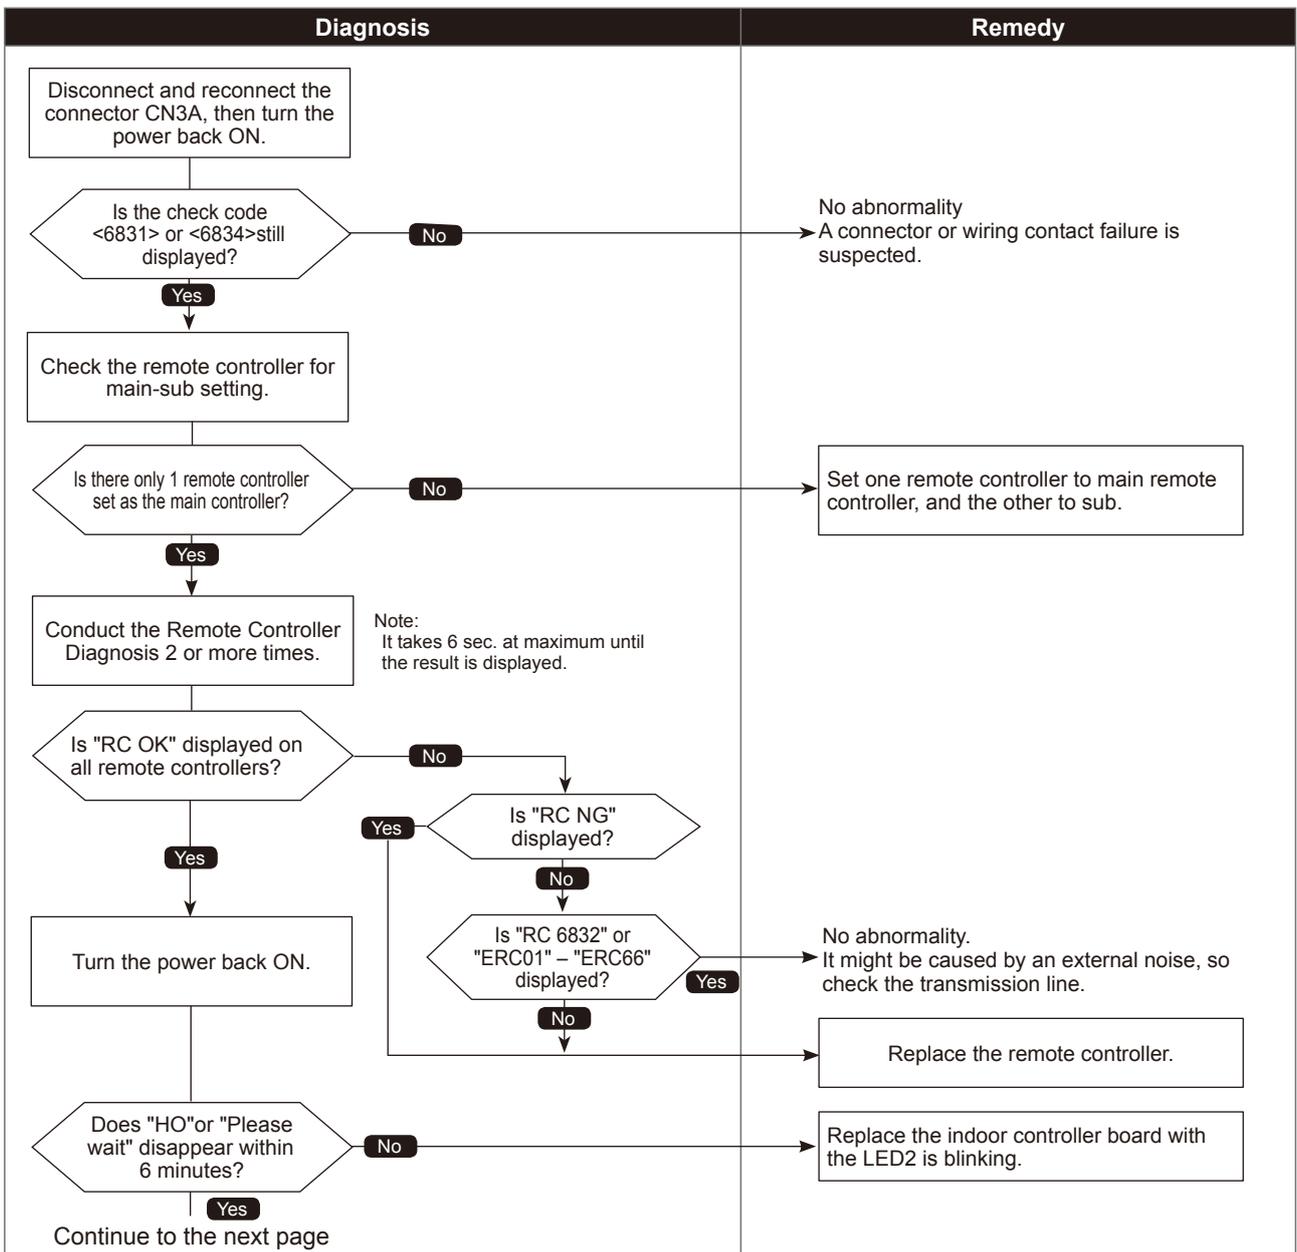

# MA communication receive error

•Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards


Diagnosis	Remedy
<p>Continued from the previous page</p> <pre> graph TD     Start[Continued from the previous page] --&gt; Step1[Refer to the chapter "Electrical Work".]     Step1 --&gt; Decision{Is the wiring connected properly, meeting the condition?}     Decision -- No --&gt; Remedy1[Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.]     Decision -- Yes --&gt; Remedy2[No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).]                     </pre>	<div data-bbox="970 801 1391 887" style="border: 1px solid black; padding: 5px;"> <p>Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.</p> </div> <p>No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).</p>

# MA communication send error

Abnormal points and detection methods	Causes and check points
Detected in remote controller or indoor unit.	<ul style="list-style-type: none"> <li>① There are 2 remote controllers set as main.</li> <li>② Malfunction of remote controller sending/receiving circuit</li> <li>③ Malfunction of sending/receiving circuit on indoor controller board</li> <li>④ Remote controller transmitting error caused by noise interference</li> </ul>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

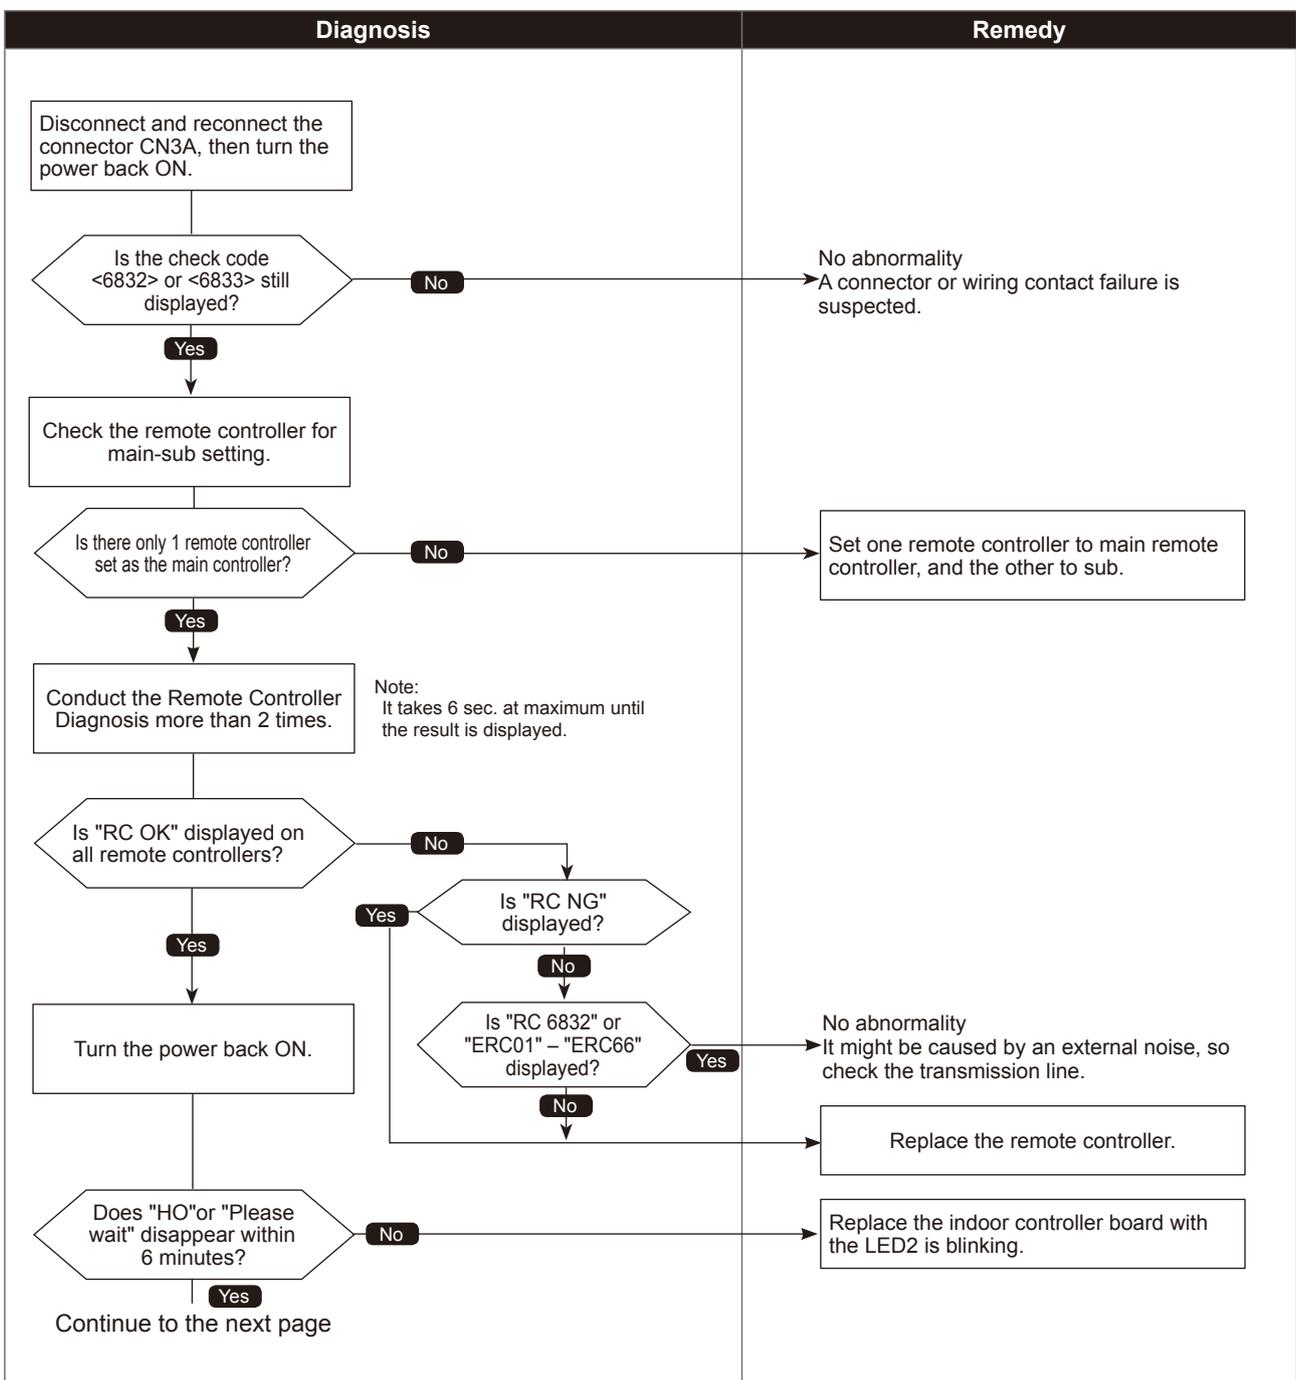

## MA communication send error

## ●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards

Diagnosis	Remedy
<p>Continued from the previous page</p> <pre> graph TD     Start[Continued from the previous page] --&gt; Refer[Refer to the chapter "Electrical Work".]     Refer --&gt; Decision{Is the wiring connected properly, meeting the condition?}     Decision -- No --&gt; Remedy1[Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.]     Decision -- Yes --&gt; Remedy2[No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).]           </pre>	<p>Connect the wiring properly as specified in the chapter "Electrical Work" in the indoor unit Installation Manual.</p> <p>No abnormality It might be caused by an external noise, so check the transmission line to remove the factor(s).</p>

Check code


7100

# Total capacity error

Abnormal points and detection methods	Causes and check points
<p>When the total of the number on connected indoor unit model names exceeds the specified capacity level (130% of the number on the outdoor unit model name), a check code &lt;7100&gt; is displayed.</p>	<p>① The total of number on connected indoor unit model names exceeds the specified capacity level                      ·P200 model: up to code 62</p> <p>② The model name code of the outdoor unit is registered wrongly.</p>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

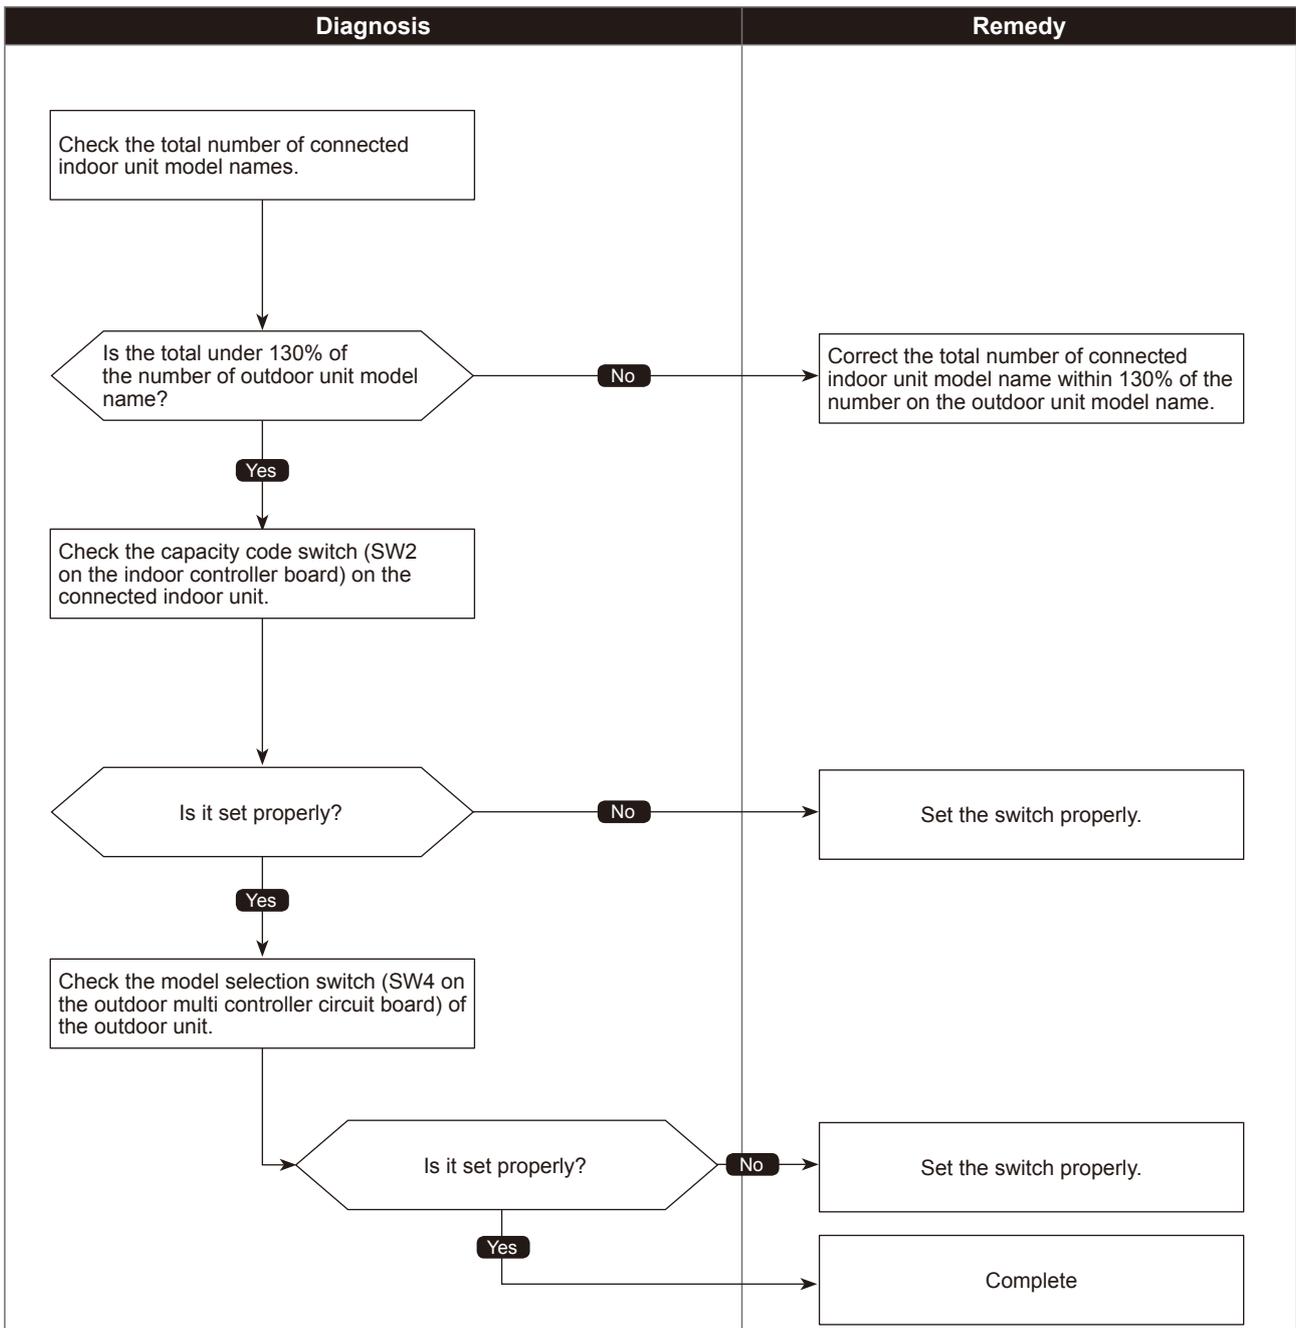

Check code

7101

## Capacity code error

Abnormal points and detection methods	Causes and check points
When a connected indoor unit is incompatible, a check code <7101> is displayed.	The model name of connected indoor unit (model code) is read as incompatible. The connectable indoor units are: ·P200 model: P15 to P250 model (code 3 to 50)

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Diagnosis	Remedy
<p>Check the model selection switch (SW4 on the indoor controller board) of the connected indoor unit.</p> <p>Is it set properly?</p> <p>No</p> <p>Yes</p>	<p>Set the switch properly.</p> <p>The model code of the connected indoor unit can be displayed by an operation of SW1 on the outdoor unit.</p>

Check code


7102

## Connecting excessive number of units

Abnormal points and detection methods	Causes and check points
<p>When the connected AC unit exceeds the limit, a check code &lt;7102&gt; is displayed.</p>	<p>Connecting more AC units than the limit Abnormal if connecting status does not comply with the following limit;</p> <ul style="list-style-type: none"> <li>① Connectable up to 12 indoor units</li> <li>② Connect at least 1 indoor unit (Abnormal if connected none)</li> <li>③ Connectable only 1 ventilation unit</li> </ul>

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

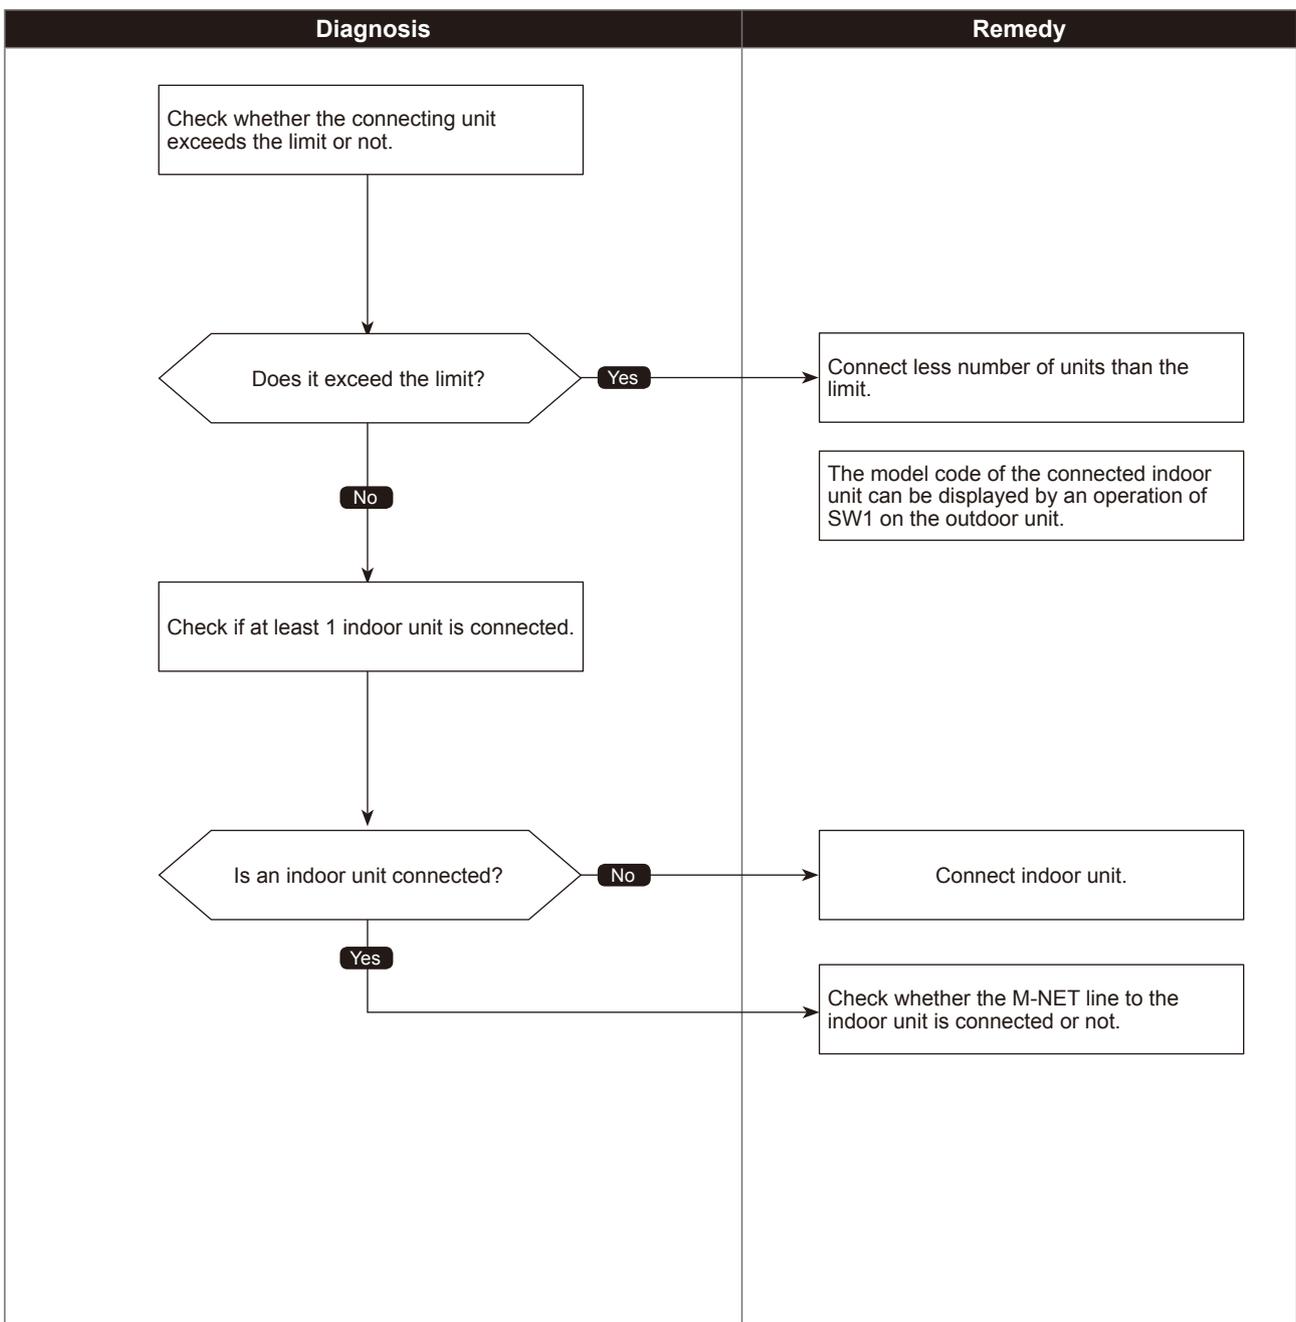

Check code

7105

## Address setting error

Abnormal points and detection methods	Causes and check points
The address setting of outdoor unit is wrong.	Wrongly set address of indoor unit The outdoor unit is not set in 000, or in the range of 51 to 100.

●Diagnosis of defectives

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.


Diagnosis	Remedy
<pre>graph TD; A[Check whether the outdoor unit address is set in 000, or in the range of 51 to 100.] --&gt; B{Is the address setting correct?}; B -- Yes --&gt; C[Replace the outdoor multi controller circuit board.]; B -- No --&gt; D[Set the address properly, then turn the power OFF of indoor/outdoor unit, Fresh Master, Lossnay and remote controller simultaneously for 2 minutes or more, and turn the power back ON.];</pre>	

## 8-2. REMOTE CONTROLLER DIAGNOSIS

### · For M-NET remote controller system


If the air conditioner cannot be operated from the remote controller, diagnose the remote controller as explained below.

- ① First, check that the power-on indicator is lit.  
If the correct voltage (12 V DC) is not supplied to the remote controller, the indicator will not light.  
If this occurs, check the remote controller's wiring and the indoor unit.

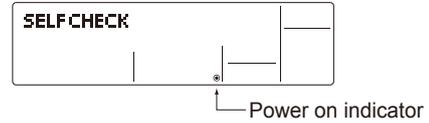

- ② Switch to the remote controller self-diagnosis mode.  
Press the **CHECK** button for 5 seconds or more. The display content will change as shown below.

Press the **FILTER** button to start self-diagnosis.



- ③ Remote controller self-diagnosis result

[When the remote controller is functioning correctly]



Check for other possible causes, as there is no problem with the remote controller.

[When the remote controller malfunctions]

(Error display 1) "NG" flashes. → The remote controller's transmitting-receiving circuit is defective.




The remote controller must be replaced with a new one.

[Where the remote controller is not defective, but cannot be operated.]  
(Error display 2) [E3], [6833] or [6832] flashes. → Transmission is not possible.





There might be noise or interference on the transmission path, or the indoor unit or other remote controllers are defective. Check the transmission path and other controllers.

(Error display 3) "ERC" and the number of data errors are displayed.  
→ Data error has occurred.



The number of data errors is the difference between the number of bits sent from the remote controller and the number actually transmitted through the transmission path. If such a problem is occurring, the transmitted data is affected by noise, etc. Check the transmission path.

**When the number of data errors is "02":**

Transmission data from remote controller   
Transmission data on transmission path 


- ④ To cancel remote controller diagnosis

Press the **CHECK** button for 5 seconds or more. Remote controller diagnosis will be cancelled, "PLEASE WAIT" and operation lamp will flash.  
After approximately 30 seconds, the state in effect before the diagnosis will be restored.

· For MA remote controller system

① Select "Service" from the Main menu, and press the  button.


Select "Remote controller check" with the **F1** or **F2** button, and press the  button.

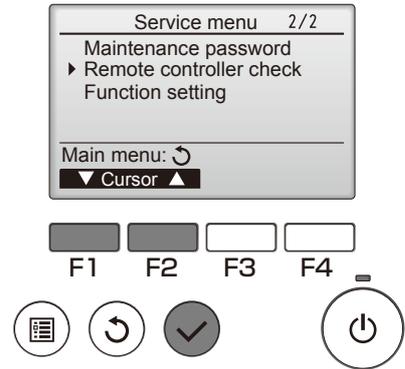

② Select "Remote controller check" from the Service menu, and press the  button to start the remote controller check and see the check results.

To cancel the remote controller check and exit the Remote controller check menu screen, press the  or the  button.


The remote controller will not reboot itself.

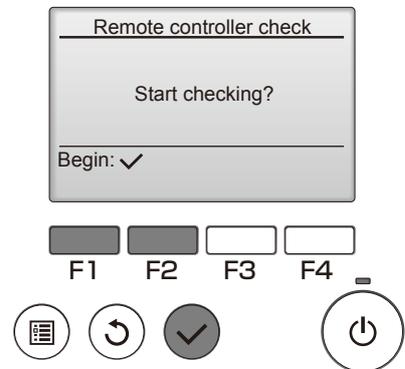

- ③
- OK:** No problems are found with the remote controller. Check other parts for problems.
  - E3, 6832:** There is noise on the transmission line, or the indoor unit or another remote controller is faulty. Check the transmission line and the other remote controllers.
  - NG (ALLO, ALL1):** Send-receive circuit fault. Remote controller needs replacing.
  - ERC:** The number of data errors is the discrepancy between the number of bits in the data transmitted from the remote controller and that of the data that was actually transmitted over the transmission line. If data errors are found, check the transmission line for external noise interference.


If the  button is pressed after the remote controller check results are displayed, remote controller check will end, and the remote controller will automatically reboot itself.

Remote controller check results screen

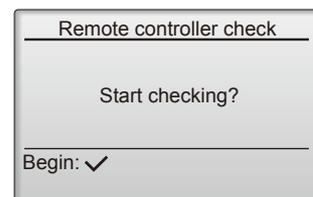

Check the remote controller display and see if anything is displayed (including lines). Nothing will appear on the remote controller display if the correct voltage (8.5–12 V DC) is not supplied to the remote controller. If this is the case, check the remote controller wiring and indoor units.

## 8-3. REMOTE CONTROLLER TROUBLE

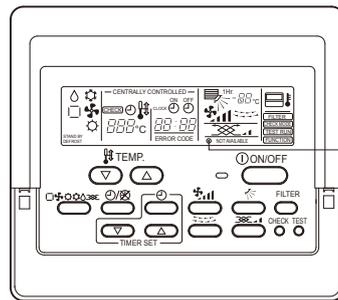

“●” Indicator: appears when current is carried.

(M-NET Remote controller)

### (1) For M-NET remote controller systems

Symptom or inspection code	Cause	Inspection method and solution
Though the content of operation is displayed on the remote controller, some indoor units do not operate.	<ul style="list-style-type: none"> <li>The power supply of the indoor unit is not on.</li> <li>The address of the indoor units in same group or the remote controller is not set correctly.</li> <li>The group setting between outdoor units is not registered to the remote controller.</li> <li>The fuse on the indoor unit controller board is blown.</li> </ul>	<ul style="list-style-type: none"> <li>Check the part where the abnormality occurs.                             <ol style="list-style-type: none"> <li>The entire system</li> <li>In the entire refrigerant system</li> <li>In same group only</li> <li>1 indoor unit only</li> </ol> </li> </ul>
Though the indoor unit operates, the display of the remote controller goes out soon.	<ul style="list-style-type: none"> <li>The power supply of the indoor unit is not on.</li> <li>The fuse on the indoor unit controller board is blown.</li> </ul>	<p>&lt;In case of the entire system or in the entire refrigerant system&gt;</p> <ul style="list-style-type: none"> <li>Check the self-diagnosis LED of the outdoor unit.</li> <li>Check the items shown in the left that are related to the outdoor unit.</li> </ul> <p>&lt;In case of in same group only or 1 indoor unit only&gt;</p> <ul style="list-style-type: none"> <li>Check the items shown in the left that are related to the indoor unit.</li> </ul>
“●” is not displayed on the remote controller. (M-NET remote controller is not fed.)	<ul style="list-style-type: none"> <li>The power supply of the outdoor unit is not on.</li> <li>The connector of transmission outdoor power board is not connected.</li> <li>The number of connected indoor unit in the refrigeration system is over the limit or the number of connected remote controller is over the limit.</li> <li>M-NET remote controller is connected to MA remote controller cable.</li> <li>The transmission line of the indoor/outdoor unit is shorted or down.</li> <li>M-NET remote controller cable is shorted or down.</li> <li>Transmission outdoor power board failure.</li> </ul>	
"HO" keeps being displayed or it is displayed periodically. ("HO" is usually displayed about 3 minutes after the power supply of the outdoor unit is on.)	<ul style="list-style-type: none"> <li>The power supply for the feeding expansion unit for the transmission line is not on.</li> <li>The address of the outdoor unit remains "00".</li> <li>The address of the indoor unit or the remote controller is not set correctly.</li> <li>MA remote controller is connected to the transmission line of the indoor/outdoor unit.</li> </ul>	
The remote controller does not operate though “●” is displayed.	<ul style="list-style-type: none"> <li>The transmission line of the indoor/outdoor unit is connected to TB15.</li> <li>The transmission line of the indoor/outdoor unit is shorted, down or badly contacted.</li> </ul>	

### (2) For MA remote controller systems




Symptom or inspection code	Cause	Inspection method and solution
Though the content of operation is displayed on the remote controller, some indoor units do not operate.	<ul style="list-style-type: none"> <li>The power supply of the indoor unit is not on.</li> <li>Wiring between indoor units in same group is not finished.</li> <li>The indoor unit and Slim model are connected to same group.</li> <li>The fuse on the indoor unit controller board is blown.</li> </ul>	<ul style="list-style-type: none"> <li>Check the part where the abnormality occurs.                             <ol style="list-style-type: none"> <li>The entire system</li> <li>In the entire refrigerant system</li> <li>In same group only</li> <li>1 indoor unit only</li> </ol> </li> </ul>
Though the indoor unit operates, the display of the remote controller goes out soon.	<ul style="list-style-type: none"> <li>The power supply of the indoor unit (Master) is not on.</li> <li>In case of connecting the system controller, the setting of the system controller does not correspond to that of MA remote controller.</li> <li>The fuse on the indoor unit (Master) controller board is blown.</li> </ul>	<p>&lt;In case of the entire system or in the entire refrigerant system&gt;</p> <ul style="list-style-type: none"> <li>Check the self-diagnosis LED of the outdoor unit.</li> <li>Check the items shown in the left that are related to the outdoor unit.</li> </ul> <p>&lt;In case of in same group only or 1 indoor unit only&gt;</p> <ul style="list-style-type: none"> <li>Check the items shown in the left that are related to the indoor unit.</li> </ul>
“●” is not displayed on the remote controller. (MA remote controller is not fed.)	<ul style="list-style-type: none"> <li>The remote controller is not fed until the power supply of both indoor unit and outdoor unit is on and the start-up of both units is finished normally.</li> <li>The power supply of the indoor unit is not on.</li> <li>The power supply of the outdoor unit is not on.</li> <li>The number of connected remote controller is over the limit (Maximum: 2 units) or the number of connected indoor unit that is over the limit (Maximum: 16 units).</li> <li>The address of the indoor unit is "00" and the address for the outdoor unit is the one other than "00".</li> <li>The transmission line of the indoor/outdoor unit is connected to TB15.</li> <li>MA remote controller is connected to the transmission line of the indoor/outdoor unit.</li> <li>The remote controller cable is shorted or down.</li> <li>The power supply cable or the transmission line is shorted or down.</li> <li>The fuse on the indoor unit controller board is blown.</li> </ul>	
"PLEASE WAIT" keeps being displayed or it is displayed periodically. ("PLEASE WAIT" is usually displayed about 3 minutes after the power supply of the outdoor unit is on.)	<ul style="list-style-type: none"> <li>The power supply of the outdoor unit is not on.</li> <li>The power supply of the feeding expansion unit for the transmission line is not on.</li> <li>The setting of MA remote controller is not main remote controller, but sub-remote controller.</li> <li>MA remote controller is connected to the transmission line of the indoor/outdoor unit.</li> </ul>	
The remote controller does not operate though “●” is displayed.	<ul style="list-style-type: none"> <li>The power supply of the indoor unit (Master) is not on.</li> <li>The transmission line of the indoor/outdoor unit is connected to TB15.</li> <li>The transmission line of the indoor/outdoor unit is shorted, down or badly contacted.</li> <li>The fuse on the indoor unit controller board is blown.</li> </ul>	

#### 8-4. THE FOLLOWING SYMPTOM DO NOT REPRESENT TROUBLE (EMERGENCY)

Symptom	Display of remote controller	CAUSE
Even the cooling (heating) operation selection button is pressed, the indoor unit cannot be operated.	"Cooling (Heating)" blinks	The indoor unit can not cool (Heat) if other indoor units are heating (Cooling).
The auto vane runs freely.	Normal display	Because of the control operation of auto vane, it may change over to horizontal blow automatically from the downward blow in cooling in cause the downward blow operation has been continued for 1 hour. At defrosting in heating, hot adjusting and thermostat OFF, it automatically changes over to horizontal blow.
Fan setting changes during heating.	Normal display	Ultra-low speed operation is commenced at thermostat OFF. Light air automatically change over to set value by time or piping temperature at thermostat ON.
Fan stops during heating operation.	"Defrost ❄"	The fan is to stop during defrosting.
Fan does not stop while operation has been stopped.	Light out	Fan is to run for 1 minute after stopping to exhaust residual heat (only in heating).
No setting of fan while start SW has been turned on.	STAND BY ❄	Ultra-low speed operation for 5 minutes after SW ON or until piping temperature becomes 35°C. There low speed operate for 2 minutes, and then set notch is commenced. (Hot adjust control)
Indoor unit remote controller shows "HO" or "PLEASE WAIT" indicator for about 2 minutes when turning ON power supply.	"HO" blinks "PLEASE WAIT" blinks	System is being driven. Operate remote controller again after "HO" or "PLEASE WAIT" disappears.
Drain pump does not stop while unit has been stopped.	Light out	After a stop of cooling operation, unit continues to operate drain pump for 3 minutes and then stops it.
Drain pump continues to operate while unit has been stopped.	—	Unit continues to operate drain pump if drainage is generated, even during a stop.

# 8-5. INTERNAL SWITCH FUNCTION TABLE PUMY-P200YKM PUMY-P200YKM-BS

The black square (■) indicates a switch position.


Switch	Step	Function	Operation in Each Switch Setting		Remarks	Purpose	Additional Information
			ON	OFF			
SWU1 unit digit SWU2 tens digit	Rotary switch	 SWU1 (unit digit) SWU2 (tens digit)	When to Set	Before turning the power ON	<Initial settings> 		
	1-8	 ON OFF 1 2 3 4 5 6 7 8	Can be set either during operation or not.	Can be set either during operation or not.	<Initial settings> 	Turn ON when the centralized controller is connected to the outdoor unit.	SWZ-1 must be turned ON if a central controller is connected to the system. An example of this would be a TC-24, EB50A, AG150, AE50 or AE200. If SWZ-1 is not turned ON, while using a central controller, in rare circumstances problems may be encountered such as indoor units not responding to group commands. Therefore, turning SWZ-1 ON is recommended if a central controller is used.
SW2 Function Switch	1	Selects operating system startup	With centralized controller	Without centralized controller	<Initial settings> 	When relocating units or connecting additional units.	
	2	Connection information Clear Switch	Clear	Do not clear	ON OFF 1 2 3 4 5 6	To delete an error history.	
	3	Abnormal data clear switch input	Clear abnormal data	Normal		To facilitate outdoor unit the pumping down operation. Frequency = Fixed to 65 Hz Indoor-electronic expansion valve = Fully open Outdoor fan step = Fixed to 10	Please refer to a section referring to the pumping down on outdoor units Installation Manuals. It might not be possible to collect all the refrigerant if the amount is excessive.
	4	Pump down	Run adjustment mode	Normal		Enables the indoor unit with the minimum address to select AUTO mode, and switches the operation mode of the other indoor units to the same mode.	Cannot be set when the centralized control is ON.
	5	Auto change over from remote controller (IC with the minimum address)	Enable	Disable			About the Silent mode/Demand control setting, refer to "8-6. OUTDOOR UNIT INPUT/OUTPUT CONNECTOR".
	6	Switching the Silent/ Demand mode	Demand control	Silent mode			
SW3 Trial operation	1	ON/OFF from outdoor unit	ON	OFF	<Initial settings> 		
	2	Mode setting	Heating	Cooling			
SW4/ SW8 Model Switch	1-6	MODEL SELECTION 1: ON 0: OFF	 MODEL SW4 SW8 PUMY-P200YKM ON OFF 1 2 3 4 5 6 1 2 3 4		<Initial settings> Set for each capacity.		
	1					To set the LEV opening at start-up higher than usual. (+150 pulses) To improve the operation with the LEV almost clogged.	The refrigerant flow noise at start-up become louder.
SW5 Function switch	2	Change the indoor unit's LEV opening at start-up	Enable	Normal	<Initial settings> Set for each capacity.	Turn ON when an auxiliary heater is connected. (It transmits a connection permission signal of the auxiliary heater to the connected indoor unit.)	Turn ON only when the auxiliary heater is connected and operated.
	3					To set the LEV opening higher than usual during defrosting operation. (Only Q <sub>1</sub> ≤ 10 is valid, + 300 pulses) To avoid the discharge temperature increase and provide efficient defrosting operation.	The refrigerant flow noise during the defrosting operation become louder.
	4	Auxiliary heater	Enable	Disable	<Initial settings>	To decrease the target sub cool value. To reduce the discharge temperature decrease due to refrigerant liquid accumulation in the units.	A refrigerant flow noise might be generated if the sub cool value is too small.
	5	Change the indoor unit's LEV opening at defrost	Enable	Normal			
	6	Switching the target sub cool (Heating mode)	Enable	Normal			

Continue to the next page



## 8-6. OUTDOOR UNIT INPUT/OUTPUT CONNECTOR


### • State (CN51)

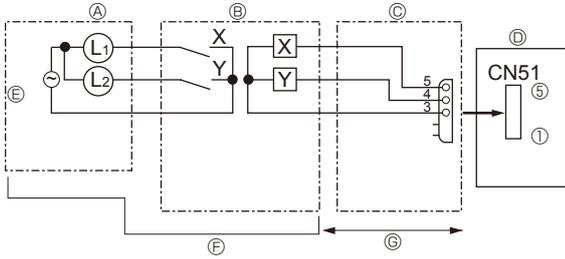

- Ⓐ Distant control board
- Ⓑ Relay circuit
- Ⓒ External output adapter (PAC-SA88HA-E)
- Ⓓ Outdoor unit control board
- Ⓔ Lamp power supply
- Ⓕ Procure locally
- Ⓖ Max. 10m

L1: Error display lamp  
 L2: Compressor operation lamp  
 X, Y: Relay (Coil standard of 0.9W or less for 12 V DC)  
 X, Y: Relay (1 mA DC)


### • Auto change over (CN3N)

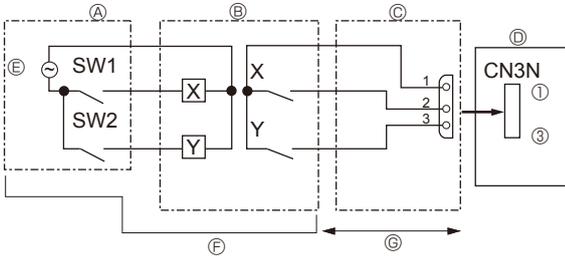

- Ⓐ Remote control panel
- Ⓑ Relay circuit
- Ⓒ External input adapter (PAC-SC36NA-E)
- Ⓓ Outdoor unit control board
- Ⓔ Relay power supply
- Ⓕ Procure locally
- Ⓖ Max. 10m

	ON	OFF
SW1	Heating	Cooling
SW2	Validity of SW1	Invalidity of SW1

### • Silent Mode / Demand Control (CN3D)

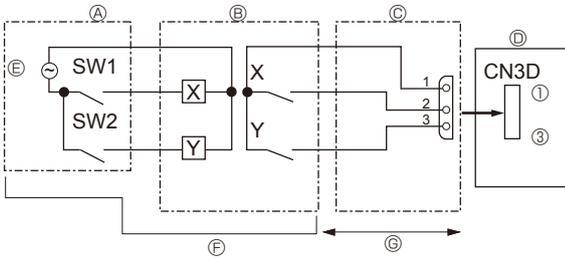

- Ⓐ Remote control panel
- Ⓑ Relay circuit
- Ⓒ External input adapter (PAC-SC36NA-E)
- Ⓓ Outdoor unit control board
- Ⓔ Relay power supply
- Ⓕ Procure locally
- Ⓖ Max. 10m




The silent mode and the demand control are selected by switching the DIP switch 2-6 on outdoor controller board. It is possible to set it to the following power consumption (compared with ratings) by setting SW1, 2.

	Outdoor controller board DIP SW2-6	SW1	SW2	Function
Silent mode	OFF	ON	—	Silent mode operation
Demand control	ON	OFF	OFF	100% (Normal)
		ON	OFF	75%
		ON	ON	50%
		OFF	ON	0% (Stop)

## 8-7. HOW TO CHECK THE PARTS

PUMY-P200YKM

PUMY-P200YKM-BS

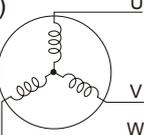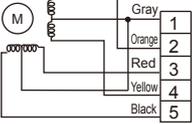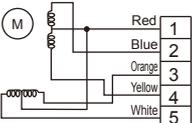Parts name	Check points																
Thermistor (TH2) <HIC Pipe> Thermistor (TH3) <Outdoor liquid pipe> Thermistor (TH4) <Compressor> Thermistor (TH6) <Suction pipe> Thermistor (TH7) <Ambient> Thermistor (TH8) <Heat sink>	Disconnect the connector then measure the resistance with a tester. (At the ambient temperature 10 to 30 °C) <table border="1" style="margin-top: 10px;"> <thead> <tr> <th></th> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>TH4</td> <td>160 kΩ to 410 kΩ</td> <td rowspan="4">Open or short</td> </tr> <tr> <td>TH2</td> <td rowspan="3">4.3 kΩ to 9.6 kΩ</td> </tr> <tr> <td>TH3</td> </tr> <tr> <td>TH6</td> </tr> <tr> <td>TH7</td> <td></td> <td></td> </tr> <tr> <td>TH8*</td> <td>39 kΩ to 105 kΩ</td> <td></td> </tr> </tbody> </table> <p style="margin-top: 10px;">* TH8 is internal thermistor of power module.</p>		Normal	Abnormal	TH4	160 kΩ to 410 kΩ	Open or short	TH2	4.3 kΩ to 9.6 kΩ	TH3	TH6	TH7			TH8*	39 kΩ to 105 kΩ	
	Normal	Abnormal															
TH4	160 kΩ to 410 kΩ	Open or short															
TH2	4.3 kΩ to 9.6 kΩ																
TH3																	
TH6																	
TH7																	
TH8*	39 kΩ to 105 kΩ																
Fan motor (MF1, MF2)	Refer to the next page.																
Solenoid valve coil <4-way valve> (21S4)	Measure the resistance between the terminals with a tester. (At the ambient temperature 20 °C) <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>1725 ± 172.5 Ω</td> <td>Open or short</td> </tr> </tbody> </table>	Normal	Abnormal	1725 ± 172.5 Ω	Open or short												
Normal	Abnormal																
1725 ± 172.5 Ω	Open or short																
Motor for compressor (MC) 	Measure the resistance between the terminals with a tester. (Winding temperature 20 °C) <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>0.306 Ω</td> <td>Open or short</td> </tr> </tbody> </table>	Normal	Abnormal	0.306 Ω	Open or short												
Normal	Abnormal																
0.306 Ω	Open or short																
Solenoid valve coil <Bypass valve> (SV1)	Measure the resistance between the terminals with a tester. (At the ambient temperature 20 °C) <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>1182.5 ± 83 Ω</td> <td>Open or short</td> </tr> </tbody> </table>	Normal	Abnormal	1182.5 ± 83 Ω	Open or short												
Normal	Abnormal																
1182.5 ± 83 Ω	Open or short																
Linear expansion Valve (LEV A) 	<table border="1" style="margin-top: 10px;"> <thead> <tr> <th colspan="4">Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>Gray - Black</td> <td>Gray - Red</td> <td>Gray - Yellow</td> <td>Gray - Orange</td> <td rowspan="2">Open or short</td> </tr> <tr> <td colspan="4" style="text-align: center;">46 ± 3 Ω</td> </tr> </tbody> </table>	Normal				Abnormal	Gray - Black	Gray - Red	Gray - Yellow	Gray - Orange	Open or short	46 ± 3 Ω					
Normal				Abnormal													
Gray - Black	Gray - Red	Gray - Yellow	Gray - Orange	Open or short													
46 ± 3 Ω																	
Linear expansion Valve (LEV B) 	<table border="1" style="margin-top: 10px;"> <thead> <tr> <th colspan="4">Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>Red - White</td> <td>Red - Orange</td> <td>Red - Yellow</td> <td>Red - Blue</td> <td rowspan="2">Open or short</td> </tr> <tr> <td colspan="4" style="text-align: center;">46 ± 4 Ω</td> </tr> </tbody> </table>	Normal				Abnormal	Red - White	Red - Orange	Red - Yellow	Red - Blue	Open or short	46 ± 4 Ω					
Normal				Abnormal													
Red - White	Red - Orange	Red - Yellow	Red - Blue	Open or short													
46 ± 4 Ω																	


## Check method of DC fan motor (fan motor/outdoor multi controller circuit board)

### ① Notes

- High voltage is applied to the connector (CNF1, 2) for the fan motor. Pay attention to the service.
- Do not pull out the connector (CNF1, 2) for the motor with the power supply on.  
(It causes trouble of the outdoor controller circuit board and fan motor.)

### ② Self check

Symptom : The outdoor fan cannot rotate.

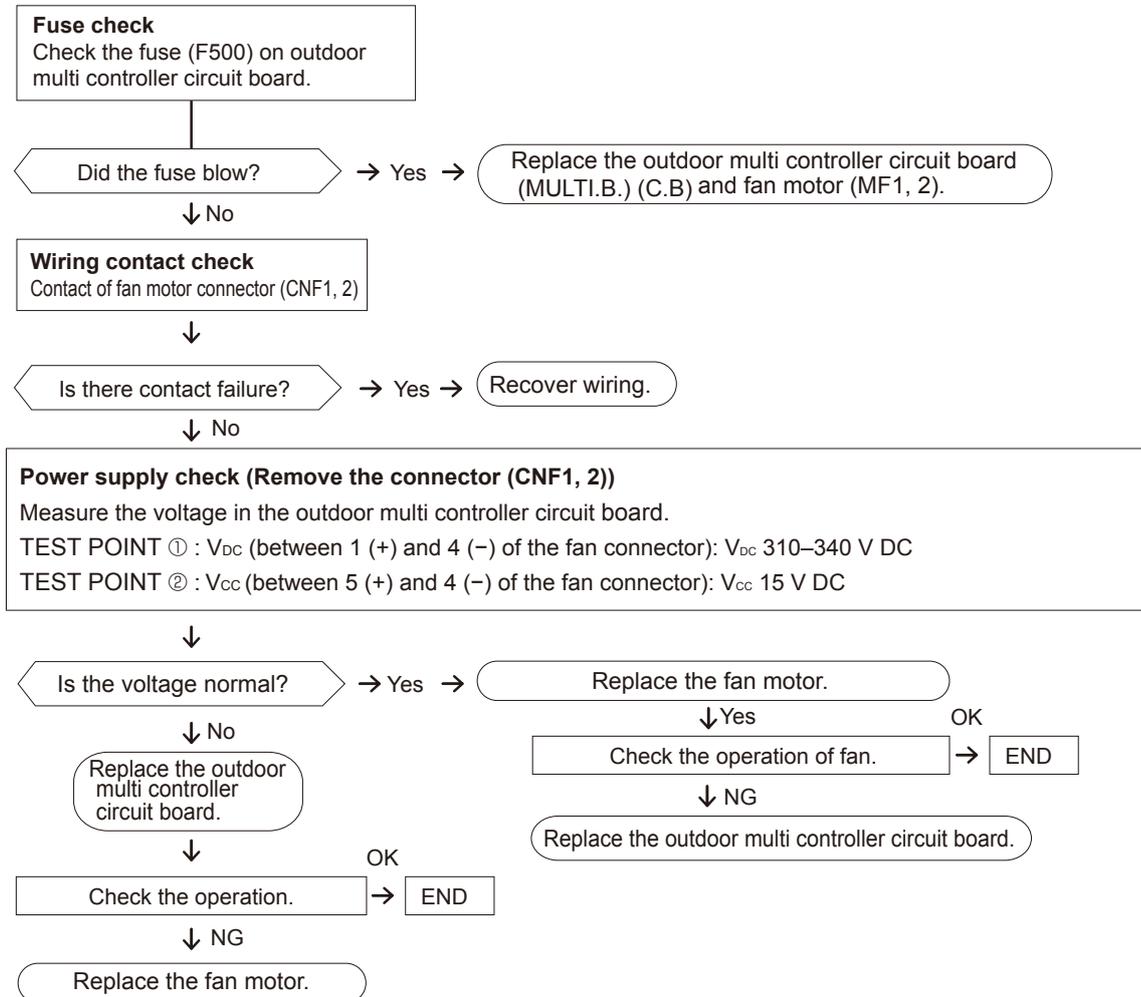

## 8-8. HOW TO CHECK THE COMPONENTS

<Thermistor feature chart>

### Low temperature thermistors

- Thermistor <HIC pipe> (TH2)
- Thermistor <Outdoor liquid pipe> (TH3)
- Thermistor <Suction pipe> (TH6)
- Thermistor <Ambient> (TH7)

Thermistor R0 = 15 kΩ ± 3 %  
B constant = 3480 ± 2 %

$$R_t = 15 \exp\left\{3480 \left( \frac{1}{273+t} - \frac{1}{273} \right)\right\}$$

0°C	15 kΩ	30°C	4.3 kΩ
10°C	9.6 kΩ	40°C	3.0 kΩ
20°C	6.3 kΩ		
25°C	5.2 kΩ		

### Medium temperature thermistor

- Thermistor <Heat sink> (TH8)

Thermistor R50 = 17 kΩ ± 2 %  
B constant = 4170 ± 3 %

$$R_t = 17 \exp\left\{4170 \left( \frac{1}{273+t} - \frac{1}{323} \right)\right\}$$

0°C	180 kΩ
25°C	50 kΩ
50°C	17 kΩ
70°C	8 kΩ
90°C	4 kΩ




### High temperature thermistor

- Thermistor <Compressor> (TH4)


Thermistor R120 = 7.465 kΩ ± 2 %  
B constant = 4057 ± 2 %

$$R_t = 7.465 \exp\left\{4057 \left( \frac{1}{273+t} - \frac{1}{393} \right)\right\}$$


20°C	250 kΩ	70°C	34 kΩ
30°C	160 kΩ	80°C	24 kΩ
40°C	104 kΩ	90°C	17.5 kΩ
50°C	70 kΩ	100°C	13.0 kΩ
60°C	48 kΩ	110°C	9.8 kΩ

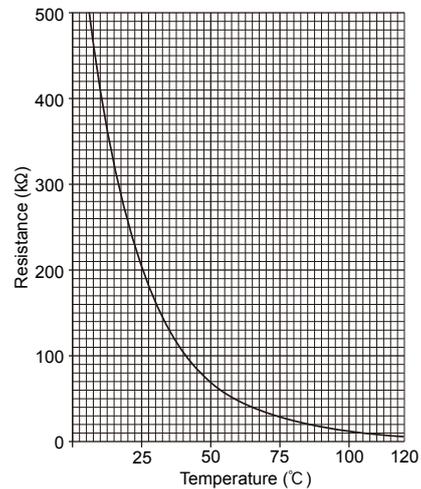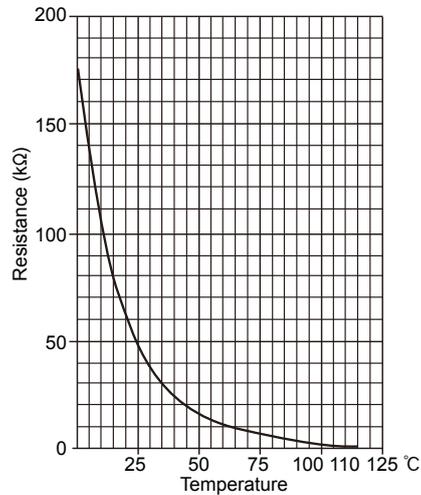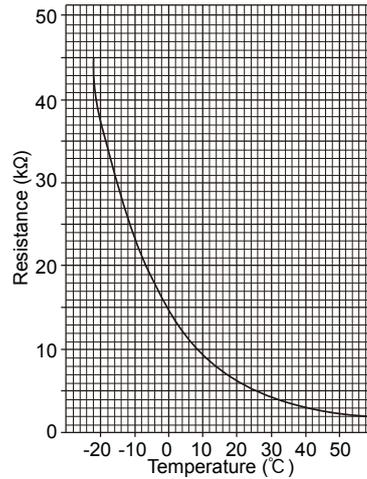

<HIGH PRESSURE SENSOR>

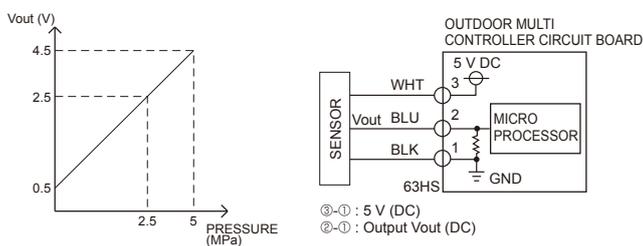

<LOW PRESSURE SENSOR>

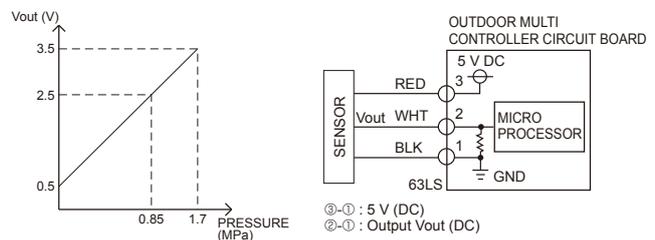


# 8-9. TEST POINT DIAGRAM

Outdoor multi controller circuit board

PUMY-P200YKM

PUMY-P200YKM-BS

**<CAUTION> TEST POINT ① is high voltage.**

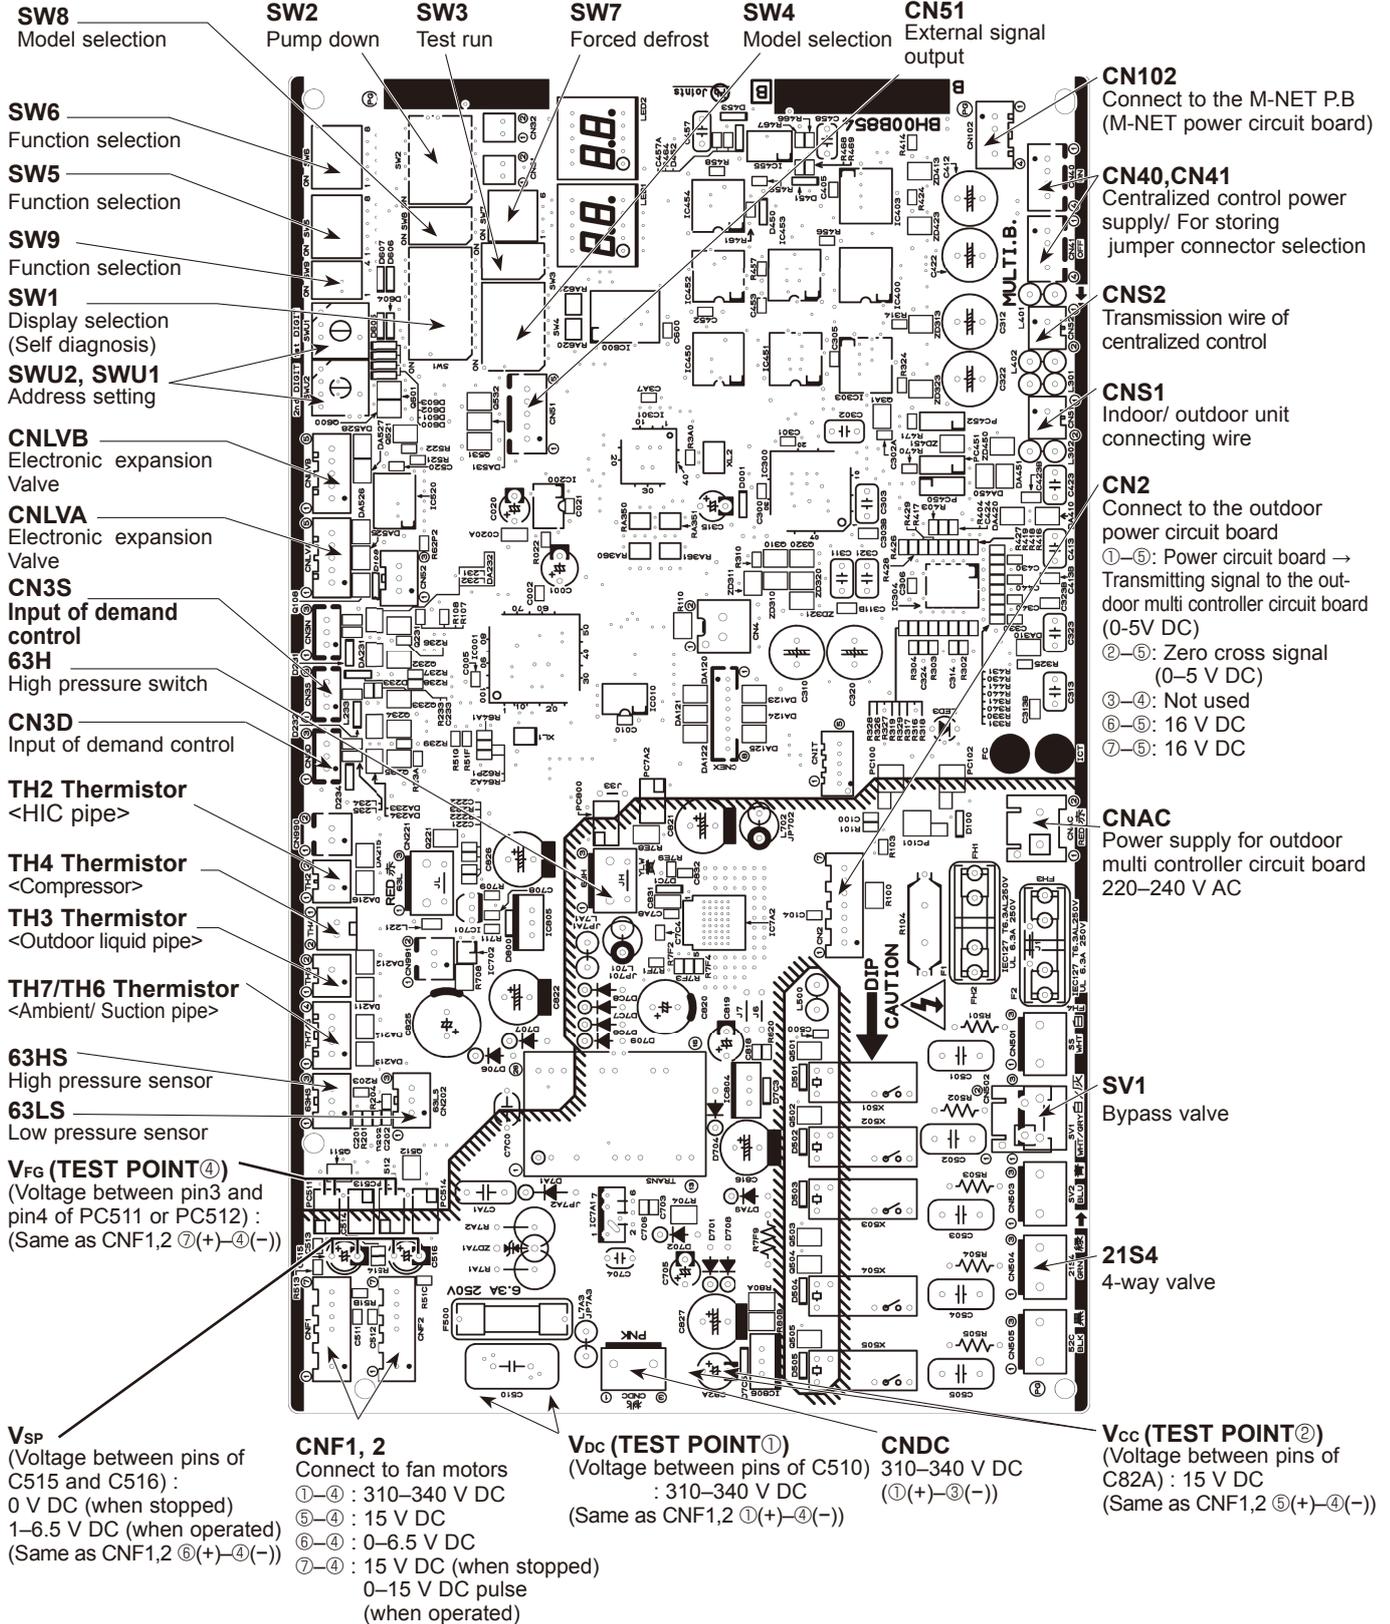

# Outdoor power circuit board

**PUMY-P200YKM  
PUMY-P200YKM-BS**

**Brief Check of POWER MODULE**  
Usually, they are in a state of being short-circuited if they are broken. Measure the resistance in the following points (connectors, etc.). If they are short-circuited, it means that they are broken.

1. Check of DIODE MODULE  
L1]-P1], [L2]-P1], [L3]-P1], [L1]-N1], [L2]-N1], [L3]-N1]
2. Check of DIP-IPM  
P2]-U], P2]-V], P2]-W], N2]-U], N2]-V], N2]-W]

Note: The marks [L1], [L2], [L3], [N1], [N2], [P1], [P2], [U], [V] and [W] shown in the diagram are not actually printed on the board.

**CN5**  
Detection of primary current (Connect to the outdoor noise filter circuit board (CNCT))

**CN2**  
Connect to the outdoor multi controller circuit board (CN2)  
①-⑤: Power circuit board → Transmitting signal to the outdoor multi controller circuit board (0-5 V DC)  
②-⑤: Zero cross signal (0-5 V DC)  
③-④: Not used  
⑥-⑤: 16 V DC  
⑦-⑤: 16 V DC  
⑤: -, [①, ②, ⑥, ⑦: +]

**CN4**  
Connect to the outdoor multi controller circuit board (CN4)

TAB connector on X52A  
Connect to the RS resistor


SC-U, SC-V, SC-W  
Connect to the compressor (MC)  
Voltage among phases:  
10-400 V AC

TB-L1, TB-L2, TB-L3  
Connect to the outdoor noise filter circuit board (LO1, LO2, LO3)  
380 V AC


**POWER MODULE**  
TB-N1  
Connect to the smoothing capacitor CB2⊖ and the CK capacitor

TB-P2  
Connect to the smoothing capacitor CB1⊕

TB-C1  
Connect to the smoothing capacitor CB1⊖, CB2⊕

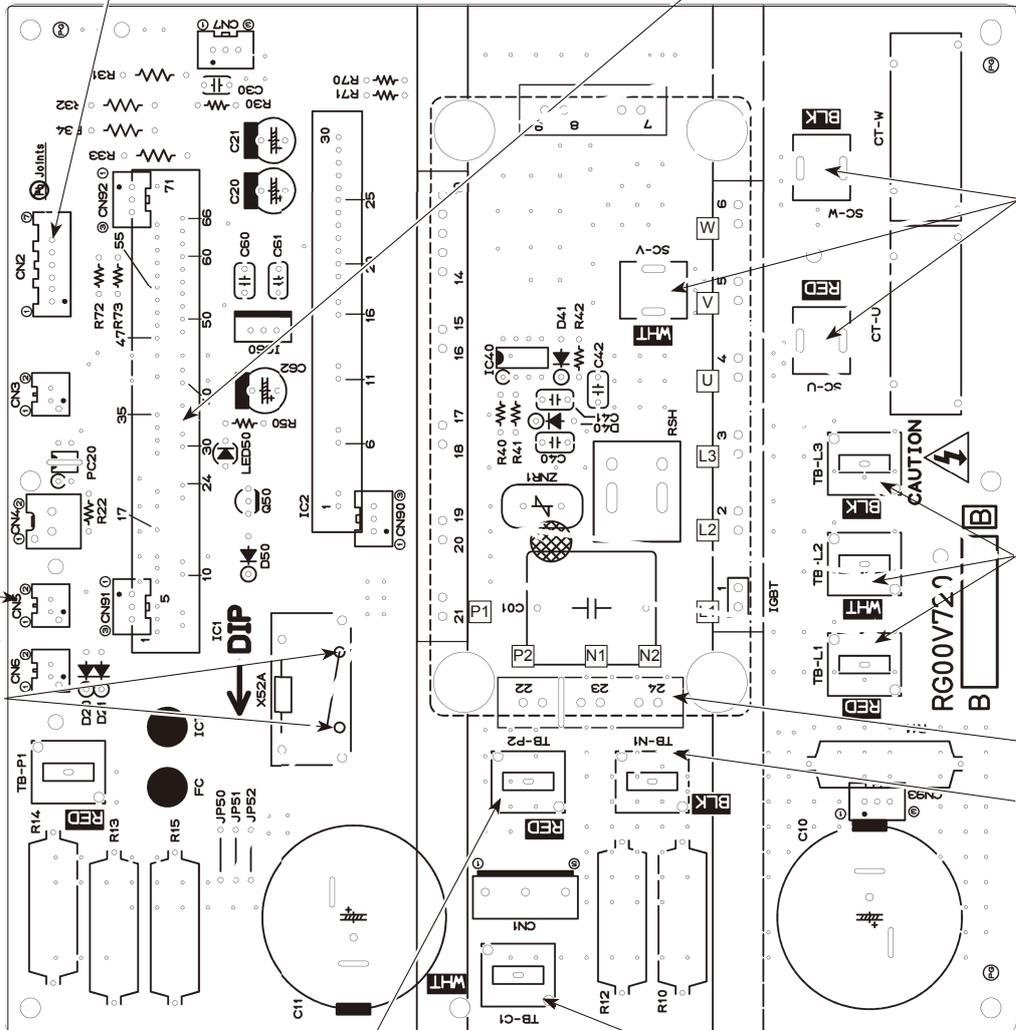

M-NET power circuit board  
 PUMY-P200YKM PUMY-P200YKM-BS

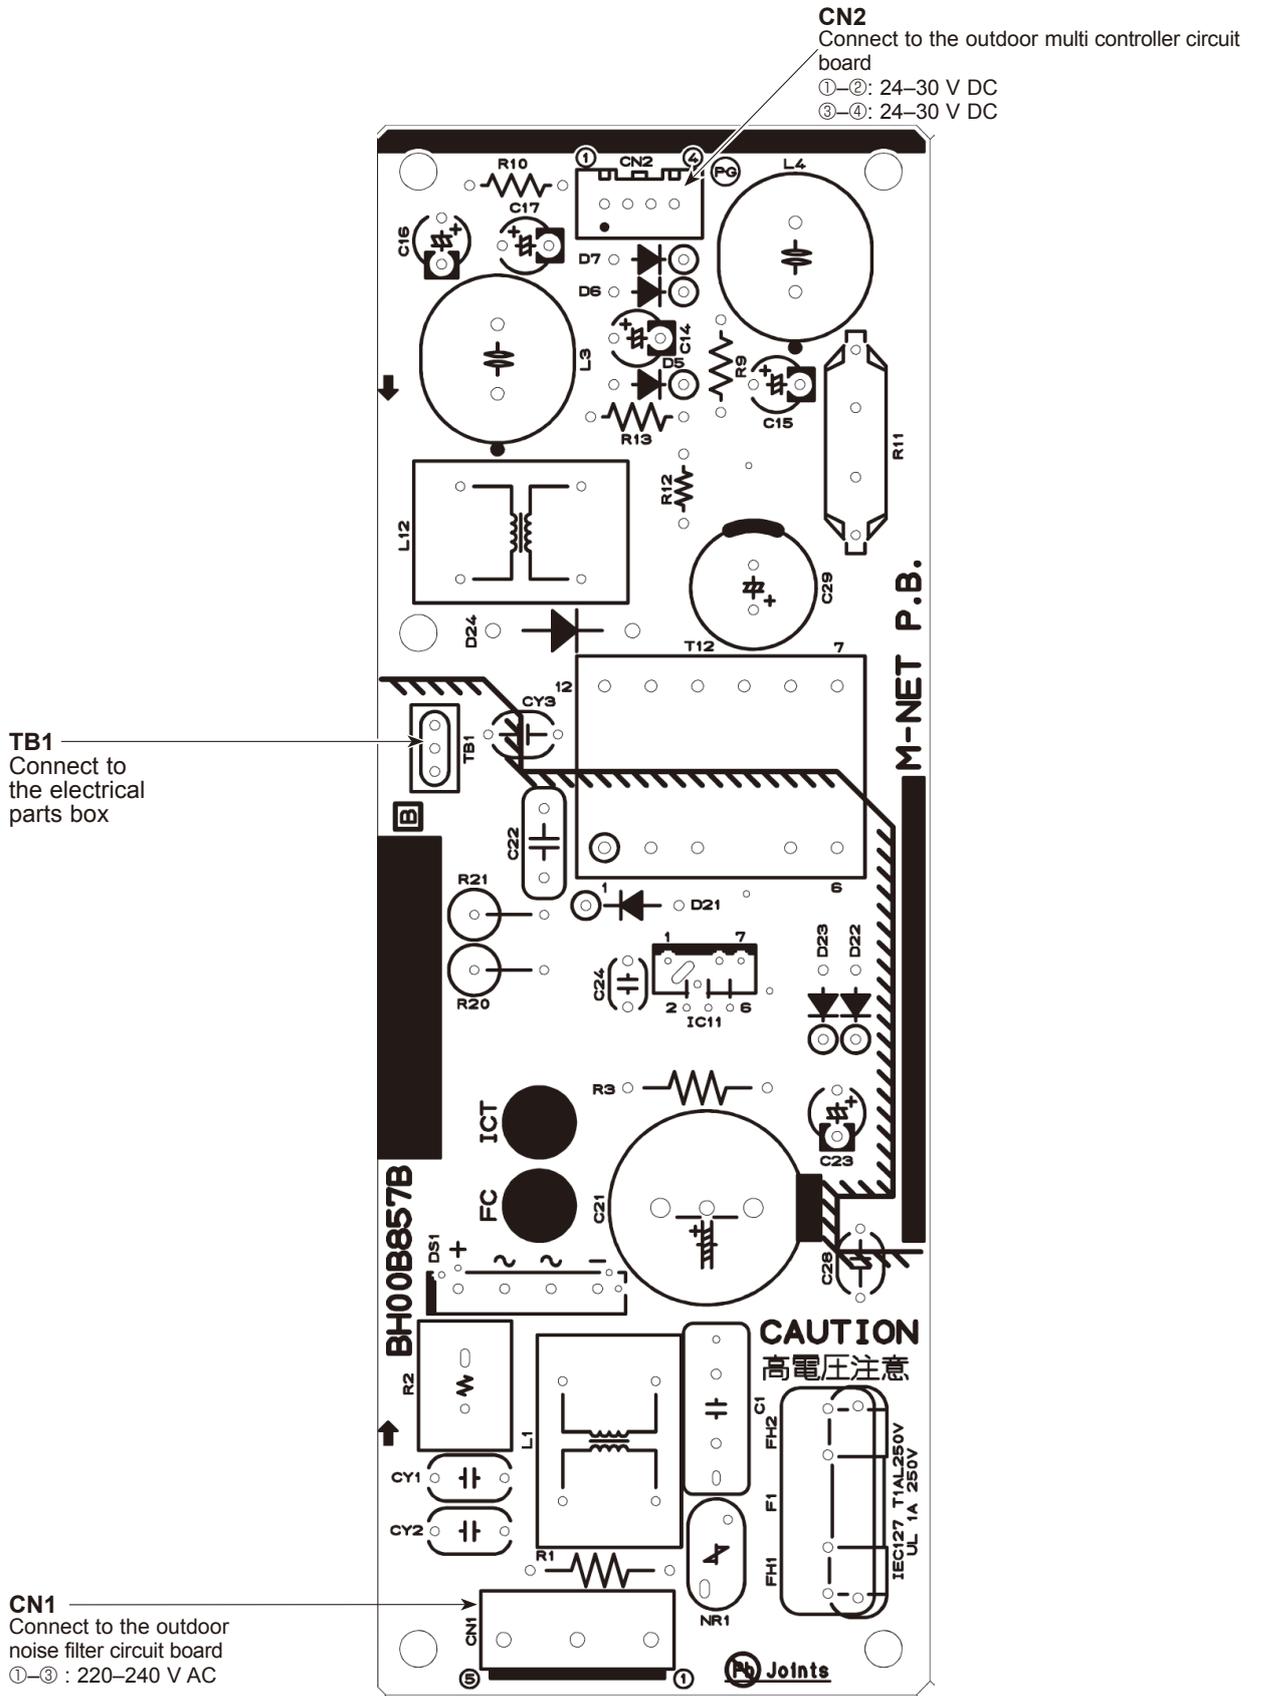



SW:setting  
0...:OFF  
1...:ON

## 8-10. OUTDOOR UNIT FUNCTIONS

No.	SW1 setting	Display mode	Display on the LED1, 2 (display data)								Notes	
			1	2	3	4	5	6	7	8		
0	00000000	Relay output display	Compressor operation	52C	21S4	SV1	(SV2)				Always lighting	ON: light on OFF: light off
1	10000000	Check display	0000-9999 (Alternating display of addresses and check code)	No.2 unit check	No.3 unit check	No.4 unit check	No.5 unit check	No.6 unit check	No.7 unit check	No.8 unit check		•When abnormality occurs, check display. Check: light on Normal: light off
2	01000000	Indoor unit check status	High-pressure abnormality	Abnormality caused by superheat due to low discharge	Comp. temperature abnormality	TH4 abnormality	TH3 abnormality	Outdoor fan rotation frequency abnormality	TH7 abnormality	TH8 abnormality		
3	01000000	Protection input	Heat sink overheating	Overcurrent interception	Voltage abnormality	Insufficient refrigerant amount abnormality	Current sensor abnormality	Low pressure abnormality	63HS abnormality	start over current interception abnormality		Display input microprocessor protection (abnormality)
4	00100000	Protection input	Abnormality in the number of indoor units	Address double setting abnormality	Indoor unit capacity error	Over capacity	Indoor unit address error	Outdoor unit address error	Current sensor open/short	serial communication abnormality		
5	10100000	Abnormality delay display 1	High-pressure abnormality delay	Abnormality delay caused by superheat due to low discharge	Comp. temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	TH8 abnormality delay		Display all abnormalities remaining in abnormality delay
6	01100000	Abnormality delay display 2	Heat sink overheating delay	Overcurrent interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor abnormality delay	Low pressure abnormality	63HS abnormality delay	start over current interception abnormality delay		
7	11100000	Abnormality delay display 3	63LS abnormality delay	HIC abnormality delay	4-way valve abnormality delay	Delay caused by blocked valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay			
8	00010000	Abnormality delay history 1	High-pressure abnormality delay	Abnormality delay caused by superheat due to low discharge	Comp. temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	TH8 abnormality delay		Display all abnormalities remaining in abnormality delay
9	10010000	Abnormality delay history 2	Heat sink overheating delay	Overcurrent interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor abnormality delay	Low pressure abnormality	63HS abnormality delay	start over current interception abnormality delay		
10	01010000	Abnormality delay history 3	63LS abnormality delay	HIC abnormality delay	4-way valve abnormality delay	Delay caused by blocked valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay			
11	11010000	Abnormality code history 1 (the latest)			Abnormality delay	Compressor temperature abnormality	Compressor temperature sensor (TH4) abnormality	Delay code	Abnormality delay			
12	00110000	Abnormality code history 2			1202	Compressor temperature abnormality	1402	High-pressure abnormality				
13	10110000	Abnormality code history 3				Compressor temperature abnormality	1600	Pressure sensor (63HS) abnormality				
14	01110000	Abnormality code history 4			1205	Thermistor <Outdoor liquid pipe> abnormality	1601	Over charge refrigerant abnormality				• Display abnormalities up to present (including abnormality terminals)
15	11110000	Abnormality code history 5			1211	Saturation temperature of suction pressure sensor (TH6) abnormality	4320	Insufficient refrigerant abnormality				• History record in 1 is the latest; records become older in sequence; history record in 10 is the oldest.
16	00001000	Abnormality code history 6			1214	Heat sink thermistor (TH8) abnormality	4330	Frequency converter insufficient wiring voltage abnormality				
17	10001000	Abnormality code history 7			1221	Ambient temperature thermistor (TH7) abnormality	4350	Heat sink temperature abnormality				
18	01001000	Abnormality code history 8						power module abnormality				
19	11001000	Abnormality code history 9										
20	00101000	Abnormality code history 10 (the oldest)										
21	10101000	Cumulative time	0-9999 (unit: 1-hour)									Display of cumulative compressor operating time
22	01101000	Cumulative time	0-9999 (unit: 10-hour)									
23	11101000	Outdoor unit operation display	Excitation Current	Restart after: 3 minutes	Compressor operation	Abnormality (detection)						Cooling : light on, Heating: light blinking Stop fan: light off
24	00011000	Indoor unit operation mode	No. 1 unit mode	No. 2 unit mode	No. 3 unit mode	No. 4 unit mode	No. 5 unit mode	No. 6 unit mode	No. 7 unit mode	No. 8 unit mode		
25	10011000	Indoor unit operation display	No. 1 unit operation	No. 2 unit operation	No. 3 unit operation	No. 4 unit operation	No. 5 unit operation	No. 6 unit operation	No. 7 unit operation	No. 8 unit operation		Thermo ON: light on Thermo OFF: light off

No.	SW1 setting	Display mode	Display on the LED1, 2 (display data)								Notes																						
			1	2	3	4	5	6	7	8																							
26	01011000	Capacity code (No. 1 indoor unit)	0-255								•Display of indoor unit capacity code •The No. 1 unit will start from the address with the lowest number																						
27	11011000	Capacity code (No. 2 indoor unit)	0-255																														
28	00111000	Capacity code (No. 3 indoor unit)	0-255																														
29	10111000	Capacity code (No. 4 indoor unit)	0-255																														
30	01111000	Capacity code (No. 5 indoor unit)	0-255																														
31	11111000	IC1 operation mode	0-255																														
32	00001000	IC2 operation mode	0-255																														
33	10000100	IC3 operation mode	0-255																														
34	01000100	IC4 operation mode	0-255																														
35	11000100	IC5 operation mode	0-255																														
36	00100100	OC operation mode	0-255																														
37	10100100	External connection status	P97:Autochange over permission CN3N1-3 input mode CN3N1-2 input	Heating/Cooling	Abnormal/normal	DEFROST/NO	P94:Demand CN3D1-3 input	P95:Undefined CN3S1-2 input	P96:Autochange over fixed mode CN3N1-2 input	P93: Silent CN3D1-2 input	Excitation current/no	3-min. delay/no	Light on/light off Input: light off No input: light on display of communication demand capacity																				
38	01100100	Communication demand capacity	0-255																														
39	11100100	Number of compressor ON/OFF	0000-9999 (unit: x10)																														
40	00010100	Compressor operating current	0-999.9 (A)																														
41	10010100	Input current of outdoor unit	0-999.9 (A)																														
42	01010100	Thermo-ON operating time	0000-9999 (unit: x10)																														
43	11010100	Total capacity of thermo-ON	0-255																														
44	00110100	Number of indoor units	0-255																														
45	10110100	DC bus voltage	0-999.9 (V)																														
46	01110100	State of LEV control	Td over heat prevention	SHd decrease prevention	Min. Sj correction depends on Td	Min. Sj correction depends on Shd	LEV opening correction depends on Pd	LEV opening correction depends on Td	LEV opening correction depends on Td	Connection of high compression ratio prevention																							
47	11110100	Discharge pressure control	Discharge pressure control	Compressor temperature control	Discharge temp. (heating) backup	Discharge temp. (heating) backup	Pd abnormality control (heating)	Pd Back up (heating)					Freeze prevention control																				
48	00001100	State of compressor frequency control 2	Heat sink over heat prevention control	Secondary current control	Input current control	Frequency restrain of receipt voltage change	Low pressure decrease prevention	SHd control																									
49	10001100	Protection input	63LS abnormality	HIC abnormality		4-way valve disconnection abnormality	Abnormally caused by blocked valve in cooling mode	TH6 abnormality					Power module abnormality																				
50	01001100	The second current value when microprocessor of POWER BOARD abnormality is detected	0-999.9[A(rms)]																														
51	11001100	The radiator panel temperature when microprocessor of power circuit board abnormality is detected	-99.9-999.9 (Short/Open: -99.9 or 999.9)																														
			<table border="1"> <thead> <tr> <th>Content</th> <th>Content</th> </tr> </thead> <tbody> <tr> <td>State of compressor frequency(Hz) control (Words)</td> <td>Hz control by pressure limitation</td> </tr> <tr> <td>Discharge pressure control</td> <td>Hz control by discharge temperature limitation</td> </tr> <tr> <td>Compressor temperature control</td> <td>Hz control by bypass valve</td> </tr> <tr> <td>SV control</td> <td>Control that restrains abnormal rise of discharge pressure</td> </tr> <tr> <td>Abnormal rise of Pd control</td> <td>Heat sink over heat prevention control</td> </tr> <tr> <td>Heat sink over heat prevention control</td> <td>Secondary current control</td> </tr> <tr> <td>Secondary current control</td> <td>Input current control</td> </tr> <tr> <td>Input current control</td> <td>Max. Hz correction control due to voltage decrease</td> </tr> <tr> <td>Hz correction of receipt voltage decrease prevention</td> <td>Max. Hz correction control due to receipt voltage change</td> </tr> <tr> <td>Hz restrain of receipt voltage change</td> <td></td> </tr> </tbody> </table>								Content	Content	State of compressor frequency(Hz) control (Words)	Hz control by pressure limitation	Discharge pressure control	Hz control by discharge temperature limitation	Compressor temperature control	Hz control by bypass valve	SV control	Control that restrains abnormal rise of discharge pressure	Abnormal rise of Pd control	Heat sink over heat prevention control	Heat sink over heat prevention control	Secondary current control	Secondary current control	Input current control	Input current control	Max. Hz correction control due to voltage decrease	Hz correction of receipt voltage decrease prevention	Max. Hz correction control due to receipt voltage change	Hz restrain of receipt voltage change		
Content	Content																																
State of compressor frequency(Hz) control (Words)	Hz control by pressure limitation																																
Discharge pressure control	Hz control by discharge temperature limitation																																
Compressor temperature control	Hz control by bypass valve																																
SV control	Control that restrains abnormal rise of discharge pressure																																
Abnormal rise of Pd control	Heat sink over heat prevention control																																
Heat sink over heat prevention control	Secondary current control																																
Secondary current control	Input current control																																
Input current control	Max. Hz correction control due to voltage decrease																																
Hz correction of receipt voltage decrease prevention	Max. Hz correction control due to receipt voltage change																																
Hz restrain of receipt voltage change																																	

No.	SW1 setting	Display mode	Display on the LED1, 2 (display data)								Notes
			1	2	3	4	5	6	7	8	
52	00101100	Outdoor LEV-A opening pulse									Display of opening pulse of outdoor LEV
53	10101100	Outdoor LEV-A opening pulse abnormality delay									
54	01101100	Outdoor LEV-A opening pulse abnormality									
55	11101100	Outdoor LEV-B opening pulse									
56	00011100	Outdoor LEV-B opening pulse abnormality delay									
57	10011100	Outdoor LEV-B opening pulse abnormality									
58	01011100	63LS (Low-pressure)kgf/cm <sup>2</sup>									
59	11011100	63LS abnormality delay									
60	00111100	63 LS abnormality	-99.99~999.9								Display of data from sensor and thermistor
61	10111100	TH2 (HIC pipe) °C									
62	01111100	TH2(HIC) abnormality delay									
63	11111100	TH2(HIC) abnormality									
64	00000010	Operational frequency	0-255								Display of actual operating frequency
65	10000010	Target frequency	0-255								
66	01000010	Outdoor fan control step number	0-15								Display of number of outdoor fan control steps (target)
69	10100010	IC1 LEV Opening pulse									
70	01100010	IC2 LEV Opening pulse									
71	11100010	IC3 LEV Opening pulse									
72	00010010	IC4 LEV Opening pulse									
73	10010010	IC5 LEV Opening pulse									
74	01010010	High-pressure sensor (Pa) kgf/cm <sup>2</sup>									
75	11010010	TH4 (Td) °C									
76	00110010	TH6 (ET) °C									
77	10110010	TH7 (Ambient+temp) °C									
78	01110010	TH3 (Outdoor liquid pipe) °C									
80	00001010	TH8 (Heat sink) °C									
81	10001010	IC1 TH23 (Gas) °C									
82	01001010	IC2 TH23 (Gas) °C									
83	11001010	IC3 TH23 (Gas) °C									
84	00101010	IC4 TH23 (Gas) °C									
85	10101010	IC5 TH23 (Gas) °C									
86	01101010	C1 TH22 (Liquid) °C									
87	11101010	IC2 TH22 (Liquid) °C									
88	00011010	IC3 TH22 (Liquid) °C									
89	10011010	IC4 TH22 (Liquid) °C									
90	01011010	IC5 TH22 (Liquid) °C									
91	11011010	IC1 TH21 (Intake) °C									
92	00111010	IC2 TH21 (Intake) °C									
93	10111010	IC3 TH21 (Intake) °C									
94	01111010	IC4 TH21 (Intake) °C									
95	11111010	IC5 TH21 (Intake) °C									
			-99.9~999.9 (When indoor unit is not connected, it is displayed as"0".)								Display of outdoor subcool (SC) data



No.	SW1 setting	Display mode	Display on the LED1, 2 (display data)								Notes
			1	2	3	4	5	6	7	8	
131	11000001	IC1 LEV opening pulse at abnormality delay	0-2000								Display of opening pulse of indoor LEV at time of abnormality delay
132	00100001	IC2 LEV opening pulse at abnormality delay									
133	10100000	IC3 LEV opening pulse at abnormality delay									
134	01100000	IC4 LEV opening pulse at abnormality delay									
135	11100001	IC5 LEV opening pulse at abnormality delay									
136	00010001	High-pressure sensor data at time of abnormality delay kgf/cm <sup>2</sup>									Display of data from high-pressure sensor, all thermistors, and SC/SH at time of abnormality delay
137	10010001	TH4 sensor data at time of abnormality delay °C									
138	01010001	TH6 sensor data at time of abnormality delay °C									
139	11010001	TH3 sensor data at time of abnormality delay °C									
140	00110001	TH8 sensor data at time of abnormality delay °C									
141	10110001	OC SC (cooling) at time of abnormality delay °C	-99.9-999.9								
142	01110001	IC1 SC/SH at time of abnormality delay °C									
143	11110001	IC2 SC/SH at time of abnormality delay °C									
144	00001001	IC3 SC/SH at time of abnormality delay °C									
145	10001001	IC4 SC/SH at time of abnormality delay °C									
146	01001001	IC5 SC/SH at time of abnormality delay °C									
147	11001001	Indoor SC/SH at abnormality delay (No.9 unit)									Display of indoor SC/SH at abnormality delay
148	00101001	Indoor SC/SH at abnormality delay (No.10 unit)	-99.9-999.9								
149	10101001	Indoor SC/SH at abnormality delay (No.11 unit)	(SH: In cooling mode, it is displayed as "0".)								
150	01101001	Indoor SC/SH at abnormality delay (No.12 unit)									
151	11101001	Indoor LEV opening pulse at abnormality delay (No.9 unit)	0-2000								Display of opening pulse of indoor LEV at abnormality delay
152	00011001	Indoor LEV opening pulse at abnormality delay (No.10 unit)									
153	10011001	Indoor LEV opening pulse at abnormality delay (No.11 unit)									
154	01011001	Indoor LEV opening pulse at abnormality delay (No.12 unit)									

No.	SW1 setting	Display mode	Display on the LED1, 2 (display data)								Notes
			1	2	3	4	5	6	7	8	
155	11011001	Indoor SC/SH at time of abnormality (No.9 unit)	-99.9-999.9 (Short/Open: -99.9 or 999.9) (SH: In cooling mode, it is displayed as "0".)								Display of indoor SC/SH at time of abnormality
156	00111001	Indoor SC/SH at time of abnormality (No.10 unit)									
157	10111001	Indoor SC/SH at time of abnormality (No.11 unit)									
158	01111001	Indoor SC/SH at time of abnormality (No.12 unit)									
159	11111001	Capacity code (No.9 indoor unit)	0-255								
160	11111101	Capacity code (No.10 indoor unit)									
161	10000101	Capacity code (No.11 indoor unit)									
162	01111101	Capacity code (No.12 indoor unit)									
163	11000101	Indoor SC/SH (No.9 unit)	During heating: subcool (SC) during cooling: superheat (SH)								
164	00100101	Indoor SC/SH (No.10 unit)									
165	10100101	Indoor SC/SH (No.11 unit)									
166	01100101	Indoor SC/SH (No.12 unit)									
170	01010101	ROM version monitor	Display of version data of ROM								
171	11010101	ROM type									
172	00110101	Check sum mode	Display of ROM type								
173	10110101	TH23 (No.9 indoor unit)									
174	01110101	TH23 (No.10 indoor unit)	-99.9-999.9 (Short/Open: -99.9 or 999.9)								
175	11110101	TH23 (No.11 indoor unit)									
176	10001101	TH23 (No.12 indoor unit)									
177	10001101	TH22 (No.9 indoor unit)									
178	01001101	TH22 (No.10 indoor unit)									
179	11001101	TH22 (No.11 indoor unit)									
180	00101101	TH22 (No.12 indoor unit)									
181	10101101	Backup heater determination value A									
182	01101101	Backup heater determination value B	-99.9-999.9								
183	11101101	Backup heater determination value C									
184	00011101	Backup heater determination value D									
185	10011101	TH21 (No.9 indoor unit)	-99.9-999.9 (Short/Open: -99.9 or 999.9)								
186	01011101	TH21 (No.10 indoor unit)									
187	11011101	TH21 (No.11 indoor unit)									
188	00111101	TH21 (No.12 indoor unit)	-99.9-999.9								
189	10111101	4220 Error history									
192	00000011	Actual frequency of abnormality	—	—	PAM error	PAM error (received FO)	Power synchronization error	L1 open-phase	Under voltage	Over voltage	Display of actual frequency at time of abnormality

No.	SW1 setting 12345678	Display mode	Display on the LED1, 2 (display data)								Notes	
			1	2	3	4	5	6	7	8		
193	10000011	Fan step number at time of abnormality	0-15								Display of fan step number at time of abnormality	
195	11000011	IC1 LEV opening pulse at time of abnormality									Display of opening pulse of indoor LEV at time of abnormality	
196	00100011	IC2 LEV opening pulse at time of abnormality										
197	10100011	IC3 LEV opening pulse at time of abnormality										
198	01100011	IC4 LEV opening pulse at time of abnormality										
199	11100011	IC5 LEV opening pulse at time of abnormality										
200	00010011	High-pressure sensor data at time of abnormality									Display of data from high-pressure sensor, all thermistors, and SC/SH at time of abnormality.	
201	10010011	TH4 sensor data at time of abnormality	-99.9-999.9									
202	01010011	TH6 sensor data at time of abnormality										
203	11010011	TH3 sensor data at time of abnormality										
204	00110011	TH8 sensor data at time of abnormality										
205	10110011	OC SC (cooling) at time of abnormality									Display of data from high-pressure sensor, all thermistors, and SC/SH at time of abnormality.	
206	01110011	IC1 SC/SH at time of abnormality	-99.9-999.9									
207	11110011	IC2 SC/SH at time of abnormality										
208	00001011	IC3 SC/SH at time of abnormality										
209	10001011	IC4 SC/SH at time of abnormality										
210	01001011	IC5 SC/SH at time of abnormality									Display of indoor unit capacity code	
211	11001011	IC6 Capacity code	0-255									
212	00101011	IC7 Capacity code										
213	10101011	IC8 Capacity code										
214	01101011	IC6 operation mode	Fan		Cooling thermo-ON		Cooling thermo-OFF		Heating thermo-ON		Heating thermo-OFF	
215	11101011	IC7 operation mode									Display of indoor unit operation mode	
216	00011011	IC8 operation mode										
217	10011011	IC6 LEV opening pulse	0-2000								Display of opening pulse of indoor LEV	
218	01011001	IC7 LEV opening pulse										
219	11011001	IC8 LEV opening pulse										



This chapter provides an introduction to electrical wiring for the CITY MULTI-S series, together with notes concerning power wiring, wiring for control (transmission wires and remote controller wires), and the frequency converter.

### 9-1. OVERVIEW OF POWER WIRING

- (1) Use a separate power supply for the outdoor unit and indoor unit.
- (2) Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
- (3) The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- (4) Specific wiring requirements should adhere to the wiring regulations of the region.
- (5) Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
- (6) Install an earth longer than other cables.

**⚠ Warning:**

- Be sure to use specified wires to connect so that no external force is imparted to terminal connections. If connections are not fixed firmly, it may cause heating or fire.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.


**⚠ Caution:**

- Some installation site may require attachment of an earth leakage breaker. If no earth leakage breaker is installed, it may cause an electric shock.
- Do not use anything other than breaker and fuse with correct capacity. Using fuse and wire or copper wire with too large capacity may cause a malfunction of unit or fire.
- Be sure to install N-Line. Without N-Line, it could cause damage to the unit.

### 9-2. WIRING OF MAIN POWER SUPPLY AND EQUIPMENT CAPACITY

PUMY-P200YKM

PUMY-P200YKM-BS

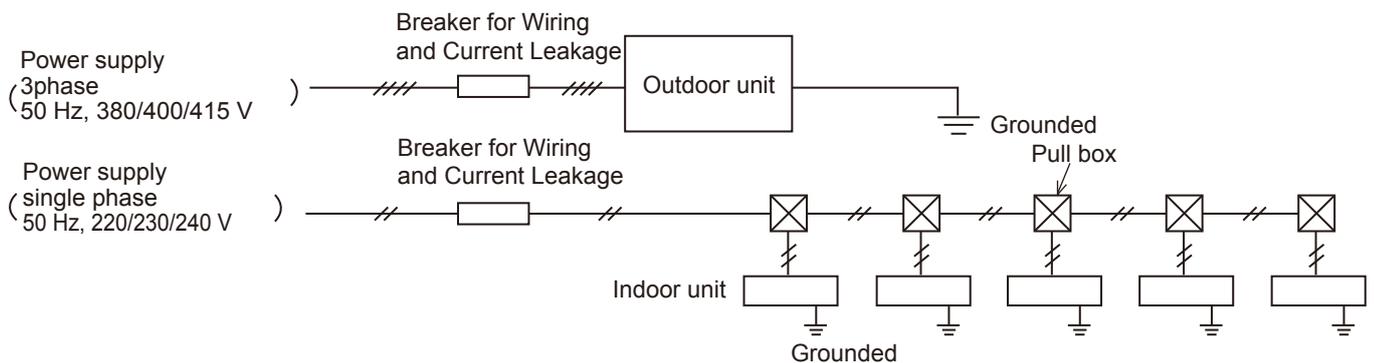

## 9-2-1. Cross section area of Wire for Main Power and ON/OFF capacities PUMY-P200YKM PUMY-P200YKM-BS

Model		Power Supply	Minimum Wire Cross-sectional area (mm <sup>2</sup> )			Breaker for Wiring *1	Breaker for Current Leakage
			Main Cable	Branch	Ground		
Outdoor unit	P200	3N~380/400/415 V 50 Hz	2.5	—	2.5	25 A	25 A 30 mA 0.1 sec. or less

\*1 A breaker with at least 3.0 mm contact separation in each poles shall be provided. Use non-fuse breaker (NF) or earth leakage breaker (NV).

Total operating current of the indoor unit	Minimum wire thickness (mm <sup>2</sup> )			Ground-fault interrupter *2	Local switch (A)		Breaker for wiring (NFB)
	Main Cable	Branch	Ground		Capacity	Fuse	
F0 = 16A or less *3	1.5	1.5	1.5	20 A current sensitivity *4	16	16	20
F0 = 25A or less *3	2.5	2.5	2.5	30 A current sensitivity *4	25	25	30
F0 = 32A or less *3	4.0	4.0	4.0	40 A current sensitivity *4	32	32	40

Apply to IEC61000-3-3 about max. permissive system impedance.

\*2 The Ground-fault interrupter should support inverter circuit.

The Ground-fault interrupter should combine using of local switch or wiring breaker.

\*3 Please take the larger of F1 or F2 as the value for F0.

F1 = Total operating maximum current of the indoor units × 1.2

F2 = {V1 × (Quantity of Type1)/C} + {V1 × (Quantity of Type2)/C} + {V1 × (Quantity of Type3)/C} + {V1 × (Quantity of Others)/C}

Connect to Branch box (PAC-MK-BC)

Indoor unit	V1	V2
Type 1 SEZ-KD-VA, PCA-RP-KAQ, PLA-ZRP-BA(.UK)	19.8	2.4
Type 2 PEAD-RP-JAQ(L).UK	26.9	
Type 3 MLZ-KA-VA, SLZ-KA, VAQ(L)3	9.9	
Type 4 MSZ-FH-VE, MSZ-SF-VE, MSZ-EF-VE, MSZ-SF-VA, MSZ-GF-VE	6.8	
Type 5 MFZ-KJ-VE	7.4	
Type 6 Branch box (PAC-MK-BC)	5.1	

Connect to Connection kit (PAC-LV11M)

Indoor unit	V1	V2
Type 1 MSY-EF-VE, MSY-GE-VA, MSY-GH, MSZ-GE-VA, MSZ-SF-VA, MSZ-SF-VE, MSZ-EF-VE, MSZ-FH-VE	6.8	2.4
Type 2 MFZ-KJ-VE	7.4	
Type 3 Connection kit (PAC-LV11M)	3.5	

Indoor unit	V1	V2
Type 1 PMFY-VBM, PLFY-VBM, PEFY-VMS1, PCFY-VKM, PKFY-VHM, PKFY-VKM, PFFY-VKM	19.8	2.4
Type 2 PLFY-VCM	9.9	
Type 3 PKFY-VBM	3.5	
Type 4 PEFY-VMA	38	1.6
Type 5 PEFY-VMHS	46.6	4.8
Type 6 PLFY-VLMD, PEFY-VMH, PEFY-VMR, PDFY-VM, PFFY-VLEM, PFFY-VLRM	0	0

C : Multiple of tripping current at tripping time 0.01s

Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>

Condition PLFY-VBM × 4 + PEFY-VMA × 1, C = 8 (refer to right sample chart)

F2 = 19.8 × 4/8 + 38 × 1/8

= 14.65

→ 16A breaker (Tripping current = 8 × 16A at 0.01s)

\*4 Current sensitivity is calculated using the following formula.


G1 = V2 × (Quantity of Type1) + V2 × (Quantity of Type2) + V2 × (Quantity of Type3) + V2 × (Quantity of Others)

+ V3 × (Wire length[km])

G1	Current sensitivity
30 or less	30 mA 0.1 sec or less
100 or less	100 mA 0.1 sec or less

Wire thickness	V3
1.5 mm <sup>2</sup>	48
2.5 mm <sup>2</sup>	56
4.0 mm <sup>2</sup>	66

Sample chart

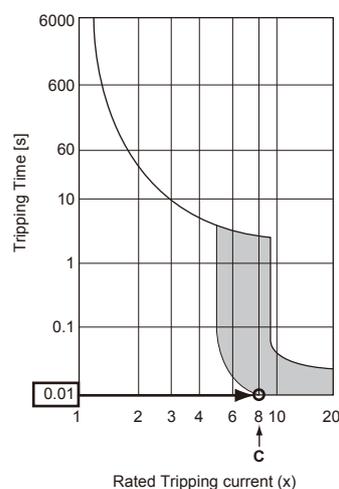

1. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
2. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
3. Specific wiring requirements should adhere to the wiring regulations of the region.
4. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
5. Install an earth longer than other cables.

### 9-3. DESIGN FOR CONTROL WIRING

Please note that the types and numbers of control wires needed by the CITY MULTI-S series will depend on the remote controllers and whether they are linked with the system.

#### 9-3-1. Selection number of control wires

		M-NET remote controller
Use		Remote controller used in system control operations. • Group operation involving different refrigerant systems. • Linked operation with upper control system.
Remote controller → indoor unit		2-core wires (non-polar)
Transmission wires	Wires connecting → indoor units	
	Wires connecting → indoor units with outdoor unit	
	Wires connecting → outdoor units	

### 9-4. WIRING TRANSMISSION CABLES

#### 9-4-1. Types of control cables

1. Wiring transmission cables
  - Types of transmission cables: Shielding wire (2-core) CVVS, CPEVS or MVVS
  - Cable diameter: More than 1.25 mm<sup>2</sup>
  - Maximum wiring length: Within 200 m

#### 2. M-NET Remote control cables

Kind of remote control cable	Shielding wire (2-core) CVVS, CPEVS or MVVS
Cable diameter	0.5 to 1.25 mm <sup>2</sup>
Remarks	When 10 m is exceeded, use a cable with the same specifications as transmission line wiring.

#### 3. MA Remote control cables

Kind of remote control cable	Sheathed 2-core cable (unshielded) CVV
Cable diameter	0.3 to 1.25 mm <sup>2</sup> (0.75 to 1.25 mm <sup>2</sup> )*
Remarks	Within 200 m

\* Connected with simple remote controller.

#### 9-4-2. Wiring examples

- Controller name, symbol and allowable number of controllers.


Name	Symbol	Allowable number of controllers	
Outdoor unit controller	OC	-	
Indoor unit controller	IC	PUMY-P200	1 to 12 units per 1 OC
Remote controller	RC	RC (M-NET)	Maximum of 12 controllers for 1 OC
		MA	Maximum of 2 per group

## 9-5. SYSTEM SWITCH SETTING

In order to identify the destinations of signals to the outdoor units, indoor units, and remote controller of the MULTI-S series, each microprocessor must be assigned an identification number (address). The addresses of outdoor units, indoor units, and remote controller must be set using their settings switches. Please consult the installation manual that comes with each unit for detailed information on setting procedures.

## 9-6. EXAMPLE EXTERNAL WIRING DIAGRAM FOR A BASIC SYSTEM

Example using a M-NET remote controller

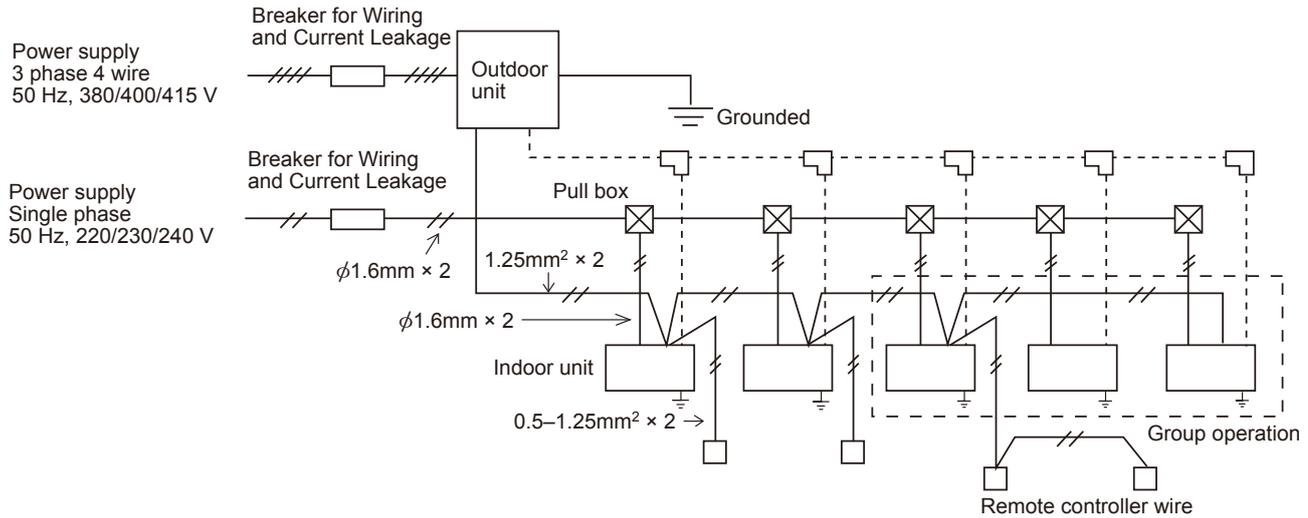

## 9-7. METHOD FOR OBTAINING ELECTRICAL CHARACTERISTICS WHEN A CAPACITY AGREEMENT IS TO BE SIGNED WITH AN ELECTRIC POWER COMPANY

The electrical characteristics of connected indoor unit system for air conditioning systems, including the MULTI-S series, will depend on the arrangement of the indoor and outdoor units.

First read the data on the selected indoor and outdoor units and then use the following formulas to calculate the electrical characteristics before applying for a capacity agreement with the local electric power company.

### 9-7-1. Obtaining the electrical characteristics of a CITY MULTI-S series system

#### (1) Procedure for obtaining total power consumption

	Page numbers in this technical manual	Power consumption
Total power consumption of each indoor unit	See the technical manual of each indoor unit	①
Power consumption of outdoor unit*	Standard capacity table— Refer to 4-3.	②
Total power consumption of system	See the technical manual of each indoor unit	①+② <kW>

\*The power consumption of the outdoor unit will vary depending on the total capacity of the selected indoor units.

#### (2) Method of obtaining total current

	Page numbers in this technical manual	Subtotal
Total current through each indoor unit	See the technical manual of each indoor unit	①
Current through outdoor unit*	Standard capacity table— Refer to 4-3.	②
Total current through system	See the technical manual of each indoor unit	①+② <A>

The current through the outdoor unit will vary depending on the total capacity of the selected indoor units.

#### (3) Method of obtaining system power factor


Use the following formula and the total power and current obtained in parts ① and ② on the above tables to calculate the system power factor.

$$\text{System power factor} = \frac{(\text{Total system power consumption})}{(\text{Total system current} \times \text{voltage})} \times 100 \%$$

### 9-7-2. Applying to an electric power company for power and total current

Calculations should be performed separately for heating and cooling employing the same methods; use the largest resulting value in your application to the electric power company.

**Line-Branch Method**  
Connection Examples  
(Connecting to 4 Indoor Units)

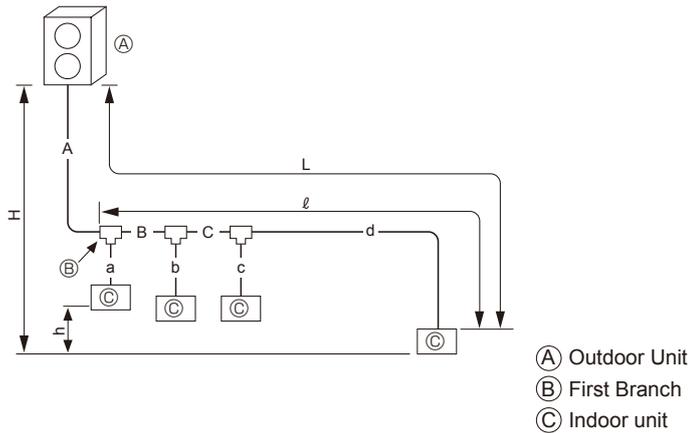

Permissible Length	Total Piping Length	$A+B+C+a+b+c+d \leq 150$ m
	Farthest Piping Length (L)	$A+B+C+d \leq 80$ m
	Farthest Piping Length After First Branch ( $\ell$ )	$B+C+d \leq 30$ m
Permissible High/Low Difference	High/Low Difference in Indoor/Outdoor Section (H)	50 meters or less (If the outdoor unit is lower, 40 meters or less)
	High/Low Difference in Indoor/Indoor Section (h)	15 meters or less

- **Selecting the Refrigerant Branch Kit**  
Use an optional branch piping kit (CMY-Y62-G-E).
- **Select Each Section of Refrigerant Piping**
  - (1) Section From Outdoor Unit to First Branch (A)
  - (2) Sections From Branch to Indoor Unit (a,b,c,d)
  - (3) Section From Branch to Branch (B,C)

Each Section of Piping

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to First Branch (Outdoor Unit Piping Diameter)	(2) Refrigerant Piping Diameter In Section From Branch to Indoor Unit (Indoor Unit Piping Diameter)																															
<table border="1"> <thead> <tr> <th>Model</th> <th colspan="2">Piping Diameter (mm)</th> </tr> </thead> <tbody> <tr> <td rowspan="2">PUMY-P200</td> <td>Liquid Line</td> <td><math>\phi 9.52</math></td> </tr> <tr> <td>Gas Line</td> <td><math>\phi 19.05</math></td> </tr> </tbody> </table>	Model	Piping Diameter (mm)		PUMY-P200	Liquid Line	$\phi 9.52$	Gas Line	$\phi 19.05$	<table border="1"> <thead> <tr> <th>Model number</th> <th colspan="2">Piping Diameter (mm)</th> </tr> </thead> <tbody> <tr> <td rowspan="2">50 or lower</td> <td>Liquid Line</td> <td><math>\phi 6.35</math></td> </tr> <tr> <td>Gas Line</td> <td><math>\phi 12.7</math></td> </tr> <tr> <td rowspan="2">63 to 140</td> <td>Liquid Line</td> <td><math>\phi 9.52</math></td> </tr> <tr> <td>Gas Line</td> <td><math>\phi 15.88</math></td> </tr> <tr> <td rowspan="2">200</td> <td>Liquid Line</td> <td><math>\phi 9.52</math></td> </tr> <tr> <td>Gas Line</td> <td><math>\phi 19.05</math></td> </tr> <tr> <td rowspan="2">250</td> <td>Liquid Line</td> <td><math>\phi 9.52</math></td> </tr> <tr> <td>Gas Line</td> <td><math>\phi 22.22</math></td> </tr> </tbody> </table>	Model number	Piping Diameter (mm)		50 or lower	Liquid Line	$\phi 6.35$	Gas Line	$\phi 12.7$	63 to 140	Liquid Line	$\phi 9.52$	Gas Line	$\phi 15.88$	200	Liquid Line	$\phi 9.52$	Gas Line	$\phi 19.05$	250	Liquid Line	$\phi 9.52$	Gas Line	$\phi 22.22$
Model	Piping Diameter (mm)																															
PUMY-P200	Liquid Line	$\phi 9.52$																														
	Gas Line	$\phi 19.05$																														
Model number	Piping Diameter (mm)																															
50 or lower	Liquid Line	$\phi 6.35$																														
	Gas Line	$\phi 12.7$																														
63 to 140	Liquid Line	$\phi 9.52$																														
	Gas Line	$\phi 15.88$																														
200	Liquid Line	$\phi 9.52$																														
	Gas Line	$\phi 19.05$																														
250	Liquid Line	$\phi 9.52$																														
	Gas Line	$\phi 22.22$																														
(3) Refrigerant Piping Diameter In Section From Branch to Branch																																
<table border="1"> <thead> <tr> <th>Liquid Line (mm)</th> <th>Gas Line (mm)</th> </tr> </thead> <tbody> <tr> <td><math>\phi 9.52</math></td> <td><math>\phi 19.05</math></td> </tr> </tbody> </table>	Liquid Line (mm)	Gas Line (mm)	$\phi 9.52$	$\phi 19.05$																												
Liquid Line (mm)	Gas Line (mm)																															
$\phi 9.52$	$\phi 19.05$																															

Note:  
When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

- **Additional refrigerant charge**  
Refrigerant for the extended piping is not included in the outdoor unit when the unit is shipped from the factory. Therefore, charge each refrigerant piping system with additional refrigerant at the installation site. In addition, in order to carry out service, enter the size and length of each liquid pipe and additional refrigerant charge amounts in the spaces provided on the "Refrigerant amount" plate on the outdoor unit.
- Calculation of additional refrigerant charge**
  - Calculate the additional charge using the liquid pipe size and length of the extended piping and total capacity of connected indoor units.
  - Calculate the additional refrigerant charge using the procedure shown to the right, and charge with the additional refrigerant.
  - For amounts less than 0.1 kg, round up the calculated additional refrigerant charge.  
(For example, if the calculated charge is 6.01 kg, round up the charge to 6.1 kg.)

<Additional Charge>  
**Calculation of refrigerant charge**

Pipe size Liquid pipe $\phi 6.35$ (m) × 19.0 (g/m)	+	Pipe size Liquid pipe $\phi 9.52$ (m) × 50.0 (g/m)	+	Pipe size Liquid pipe $\phi 12.7$ (m) × 92.0 (g/m)	+	Total capacity of connected indoor units Up to 16.0 kW 16.1 to 25.0 kW 25.1 to 32.5 kW	Amount for the indoor units 2.5 kg 3.0 kg 3.5 kg
---	---	---	---	---	---	--	--

**Included refrigerant amount when shipped from the factory**  
Included refrigerant amount: 7.3 Kg

<Example>  
Outdoor model : P200  
Indoor 1 : P125 (14.0 kW) A :  $\phi 9.52$  30 m a :  $\phi 9.52$  15 m  
2 : P40 (4.5 kW) b :  $\phi 6.35$  10 m  
3 : P25 (2.8 kW) c :  $\phi 6.35$  10 m  
4 : P20 (2.2 kW) d :  $\phi 6.35$  20 m


The total length of each liquid line is as follows:  
 $\phi 9.52$  :  $A + a = 30 + 15 = 45$  m  
 $\phi 6.35$  :  $b + c + d = 10 + 10 + 20 = 40$  m

The total capacity of connected indoor unit is as follows:  
 $14.0 + 4.5 + 2.8 + 2.2 = 23.5$

<Calculation example>  
Additional refrigerant charge  
 $40 \times \frac{19.0}{1000} + 45 \times \frac{50.0}{1000} + 3.0 = 6.1$  kg (rounded up)

At the conditions below:

**Header-Branch Method**  
Connection Examples  
(Connecting to 4 Indoor Units)

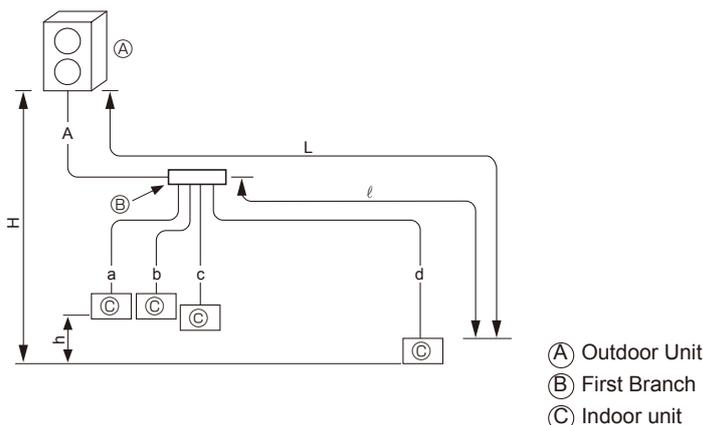

Permissible Length	Total Piping Length	$A+a+b+c+d \leq 150$ m
	Farthest Piping Length (L)	$A+d \leq 80$ m
	Farthest Piping Length After First Branch (l)	d is 30 meters or less
Permissible High/Low Difference	High/Low Difference in Indoor/Outdoor Section (H)	50 meters or less (If the outdoor unit is lower, 40 meters or less)
	High/Low Difference in Indoor/Indoor Section (h)	15 meters or less

■ **Selecting the Refrigerant Branch Kit**

Please select branching kit, which is sold separately, from the table below.  
(The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch header (4 branches)	Branch header (8 branches)
CMY-Y64-G-E	CMY-Y68-G-E

■ **Select Each Section of Refrigerant Piping**

- (1) Section From Outdoor Unit to First Branch (A)
  - (2) Sections From Branch to Indoor Unit (a,b,c,d)
- Each Section of Piping

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to First Branch (Outdoor Unit Piping Diameter)

Model	Piping Diameter (mm)	
PUMY-P200	Liquid Line	φ9.52
	Gas Line	φ19.05

Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

(2) Refrigerant Piping Diameter In Section From Branch to Indoor Unit (Indoor Unit Piping Diameter)

Model number	Piping Diameter (mm)	
50 or lower	Liquid Line	φ6.35
	Gas Line	φ12.7
63 to 140	Liquid Line	φ9.52
	Gas Line	φ15.88
200	Liquid Line	φ9.52
	Gas Line	φ19.05
250	Liquid Line	φ9.52
	Gas Line	φ22.22

■ **Additional refrigerant charge**

Refrigerant for the extended piping is not included in the outdoor unit when the unit is shipped from the factory. Therefore, charge each refrigerant piping system with additional refrigerant at the installation site. In addition, in order to carry out service, enter the size and length of each liquid pipe and additional refrigerant charge amounts in the spaces provided on the "Refrigerant amount" plate on the outdoor unit.

**Calculation of additional refrigerant charge**

- Calculate the additional charge using the liquid pipe size and length of the extended piping and total capacity of connected indoor units.
- Calculate the additional refrigerant charge using the procedure shown to the right, and charge with the additional refrigerant.
- For amounts less than 0.1 kg, round up the calculated additional refrigerant charge.  
(For example, if the calculated charge is 6.01 kg, round up the charge to 6.1 kg.)

<Additional Charge>

**Calculation of refrigerant charge**

Pipe size Liquid pipe ø6.35 (m) × 19.0 (g/m)	+	Pipe size Liquid pipe ø9.52 (m) × 50.0 (g/m)	+	Pipe size Liquid pipe ø 12.7 (m) × 92.0 (g/m)	+	Total capacity of connected indoor units	Amount for the indoor units
						Up to 16.0 kW	2.5 kg
						16.1 to 25.0 kW	3.0 kg
						25.1 to 32.5 kW	3.5 kg

**Included refrigerant amount when shipped from the factory**

Included refrigerant amount: 7.3 Kg

<Example>

Outdoor model : P200

Indoor 1 : P125 (14.0 kW) A : ø9.52 30 m a : ø9.52 15 m  
 2 : P40 (4.5 kW) b : ø6.35 10 m  
 3 : P25 (2.8 kW) c : ø6.35 10 m  
 4 : P20 (2.2 kW) d : ø6.35 20 m

At the conditions below:

The total length of each liquid line is as follows:

ø9.52 :  $A + a = 30 + 15 = 45$  m

ø6.35 :  $b + c + d = 10 + 10 + 20 = 40$  m

The total capacity of connected indoor unit is as follows:


$14.0 + 4.5 + 2.8 + 2.2 = 23.5$

<Calculation example>

Additional refrigerant charge

$$40 \times \frac{19.0}{1000} + 45 \times \frac{50.0}{1000} + 3.0 = 6.1 \text{ kg (rounded up)}$$

**Method of Combined Branching of Lines and Headers**  
 Connection Examples  
 (Connecting to 5 Indoor Units)

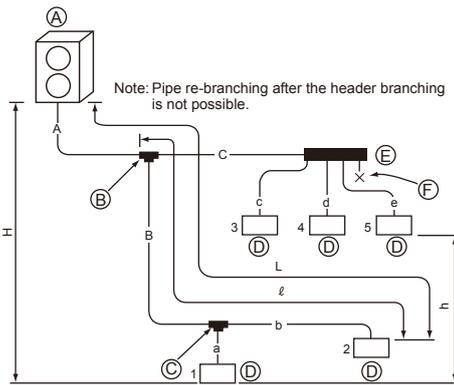

- (A) Outdoor unit
- (B) First branching (branching joint)
- (C) Branching joint
- (D) Indoor unit
- (E) Branching header
- (F) Blind caps

Permissible Length	Total Piping Length	A+B+C+a+b+c+d+e is 150 meters or less
	Farthest Piping Length (L)	A+B+b is 80 meters or less
	Farthest Piping Length After First Branch (ℓ)	B+b is 30 meters or less
Permissible High/Low Difference	High/Low Difference in Indoor/Outdoor Section(H)	50 meters or less (If the outdoor unit is lower, 40 meters or less)
	High/Low Difference in Indoor/Indoor Section(h)	15 meters or less

**Selecting the Refrigerant Branch Kit**

Please select branching kit, which is sold separately, from the table below.  
 (The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch Joint	Branch Header (4 branches)	Branch Header (8 branches)
CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E

**Select Each Section of Refrigerant Piping**

- (1) Section From Outdoor Unit to First Branch (A)
  - (2) Sections From Branch to Indoor Unit (a,b,c,d,e)
  - (3) Section From Branch to Branch (B,C)
- } Each Section of Piping

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to First Branch (Outdoor Unit Piping Diameter)

Model	Piping Diameter (mm)	
PUMY-P200	Liquid Line	φ9.52
	Gas Line	φ19.05

(2) Refrigerant Piping Diameter In Section From Branch to Indoor Unit (Indoor Unit Piping Diameter)

Model number	Piping Diameter (mm)	
50 or lower	Liquid Line	φ6.35
	Gas Line	φ12.7
63 to 140	Liquid Line	φ9.52
	Gas Line	φ15.88
200	Liquid Line	φ9.52
	Gas Line	φ19.05
250	Liquid Line	φ9.52
	Gas Line	φ22.22

(3) Refrigerant Piping Diameter In Section From Branch to Branch

Liquid Line (mm)	Gas Line (mm)
φ9.52	φ19.05

Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

**Additional refrigerant charge**

Refrigerant for the extended piping is not included in the outdoor unit when the unit is shipped from the factory. Therefore, charge each refrigerant piping system with additional refrigerant at the installation site. In addition, in order to carry out service, enter the size and length of each liquid pipe and additional refrigerant charge amounts in the spaces provided on the "Refrigerant amount" plate on the outdoor unit.

**Calculation of additional refrigerant charge**

- Calculate the additional charge using the liquid pipe size and length of the extended piping and total capacity of connected indoor units.
- Calculate the additional refrigerant charge using the procedure shown to the right, and charge with the additional refrigerant.
- For amounts less than 0.1 kg, round up the calculated additional refrigerant charge.  
 (For example, if the calculated charge is 6.01 kg, round up the charge to 6.1 kg.)

<Additional Charge>

**Calculation of refrigerant charge**

Pipe size Liquid pipe φ6.35 (m) × 19.0 (g/m)	+	Pipe size Liquid pipe φ9.52 (m) × 50.0 (g/m)	+	Pipe size Liquid pipe φ 12.7 (m) × 92.0 (g/m)	+	Total capacity of connected indoor units Up to 8.0 kW	Amount for the indoor units 1.5 kg
						8.1 to 16.0 kW	2.5 kg
						16.1 kW or above	3.0 kg

**Included refrigerant amount when shipped from the factory**

Included refrigerant amount: 7.3 Kg

<Example>

Outdoor model : P200

- Indoor 1 : P125 (14.0 kW) A : φ9.52 30 m a : φ9.52 15 m
- 2 : P40 (4.5 kW) B : φ9.52 10 m b : φ6.35 10 m
- 3 : P25 (2.8 kW) C : φ9.52 10 m c : φ6.35 10 m
- 4 : P20 (2.2 kW) d : φ6.35 20 m
- 5 : P20 (2.2 kW) e : φ6.35 10 m

The total length of each liquid line is as follows:

φ9.52 : A + B + C + a = 65 m

φ6.35 : b + c + d + e = 50 m

The total capacity of connected indoor unit is as follows:

14.0 + 4.5 + 2.8 + 2.2 + 2.2 = 25.7

<Calculation example>

Additional refrigerant charge  
 $50 \times \frac{19.0}{1000} + 65 \times \frac{50.0}{1000} + 3.5 = 7.7 \text{ kg (rounded up)}$

At the conditions below:

## 10-2. PRECAUTIONS AGAINST REFRIGERANT LEAKAGE

### 10-2-1. Introduction

R410A refrigerant of this air conditioner is non-toxic and non-flammable but leaking of large amount from an indoor unit into the room where the unit is installed may be deleterious.

To prevent possible injury, the rooms should be large enough to keep the R410A concentration specified by ISO 5149-1 as follows.


#### Maximum concentration

Maximum refrigerant concentration of R410A of a room is 0.44kg/m<sup>3</sup> accordance with ISO 5149-1.

To facilitate calculation, the maximum concentration is expressed in units of kg/m<sup>3</sup> ( kg of R410A per m<sup>3</sup>)

Maximum concentration of R410A: 0.44kg/m<sup>3</sup>

(ISO 5149-1)

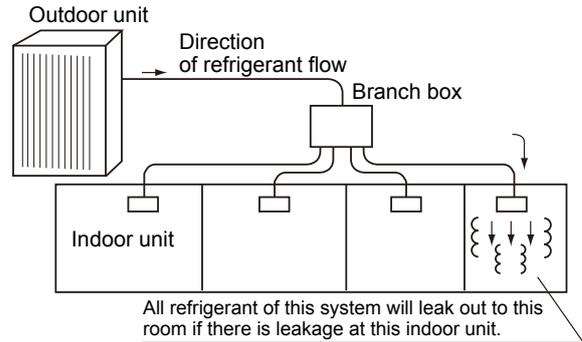

### 10-2-2. Confirming procedure of R410A concentration

Follow (1) to (3) to confirm the R410A concentration and take appropriate treatment, if necessary.

#### (1) Calculate total refrigerant amount by each refrigerant system.

**Total refrigerant amount is precharged refrigerant at ex-factory plus additional charged amount at field installation.**


Note:

When single refrigeration system consists of several independent refrigeration circuit, figure out the total refrigerant amount by each independent refrigerant circuit.


#### (2) Calculate room volumes (m<sup>3</sup>) and find the room with the smallest volume

The part with   represents the room with the smallest volume.


##### (a) Situation in which there are no partitions

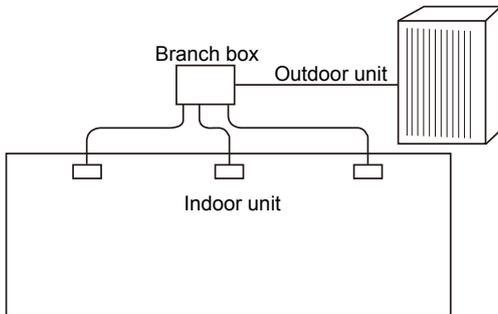

##### (b) There are partitions, but there are openings that allow the effective mixing of air.

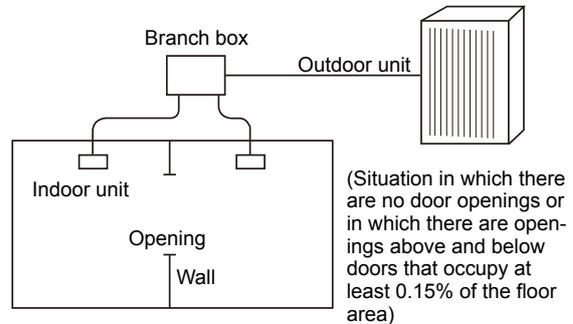

##### (c) If the smallest room has mechanical ventilation apparatus that is linked to a household gas detection and alarm device, the calculations should be performed for the second smallest room.

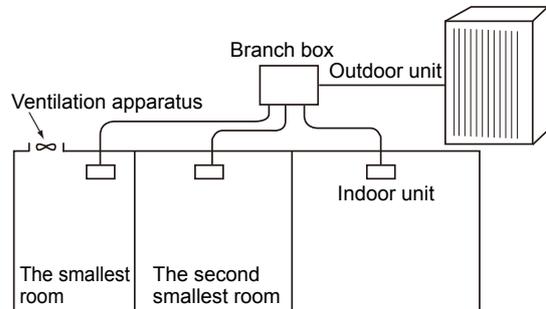

#### (3) Use the results of calculations (1) and (2) to calculate the refrigerant concentration:

$$\frac{\text{Total refrigerant in the refrigerating unit (kg)}}{\text{The smallest room in which an indoor unit has been installed (m}^3\text{)}} \leq \text{Maximum concentration(kg/m}^3\text{)}$$





Maximum concentration of R410A:0.44kg/m<sup>3</sup>

If the calculation results do not exceed the maximum concentration, perform the same calculations for the larger second and third room, etc., until it has been determined that nowhere the maximum concentration will be exceeded.





PUMY-P200YKM

PUMY-P200YKM-BS

Note: Turn OFF the power supply before disassembly.

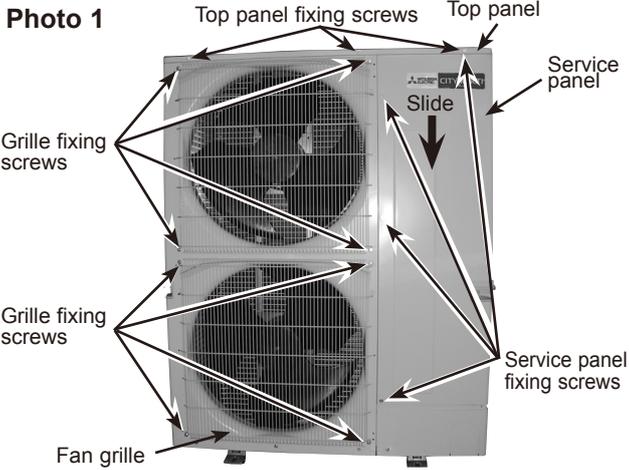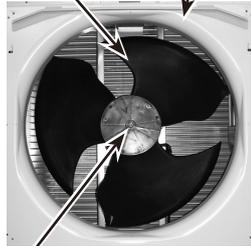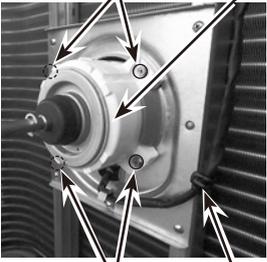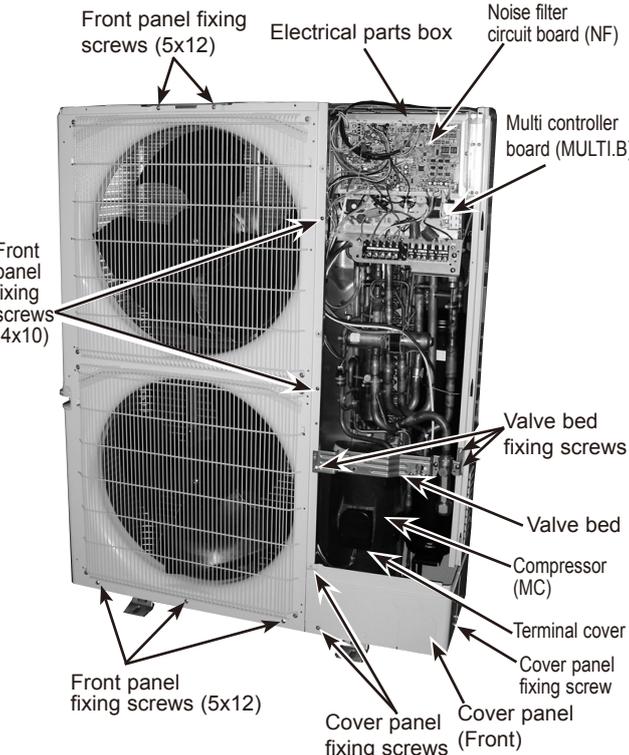OPERATING PROCEDURE	PHOTOS & ILLUSTRATION
<p><b>1. Removing the service panel and top panel</b></p> <p>(1) Remove 4 service panel fixing screws (5 × 12) and slide the hook on the right downward to remove the service panel.</p> <p>(2) Remove screws (3 for front, 3 for rear/5 × 12) of the top panel and remove it.</p>	<p><b>Photo 1</b></p> 
<p><b>2. Removing the fan motor (MF1, MF2)</b></p> <p>(1) Remove the service panel. (See Photo 1)</p> <p>(2) Remove 4 fan grille fixing screws (5 × 12) to detach the fan grille. (See Photo 1)</p> <p>(3) Remove a nut (for right handed screw of M6) to detach the propeller. (See Photo 2.)</p> <p>(4) Disconnect the connectors, CNF1 and CNF2 on multi controller board in electrical parts box.</p> <p>(5) Remove 4 fan motor fixing screws (5 × 20) to detach the fan motor. (See Photo 3)</p>	<p><b>Photo 2</b></p>  <p><b>Photo 3</b></p> 
<p><b>3. Removing the electrical parts box</b></p> <p>(1) Remove the service panel. (See Photo 1)</p> <p>(2) Remove the top panel. (See Photo 1)</p> <p>(3) Disconnect the connecting wire from terminal block. (See Photo 5)</p> <p>(4) Remove all the following connectors from outdoor multi controller circuit board;</p> <p>&lt;Diagram symbol in the connector housing&gt;</p> <ul style="list-style-type: none"> <li>• Fan motor (CNF1, CNF2)</li> <li>• Thermistor &lt;HIC pipe&gt; (TH2)</li> <li>• Thermistor &lt;Outdoor liquid pipe&gt; (TH3)</li> <li>• Thermistor &lt;Compressor&gt; (TH4)</li> <li>• Thermistor &lt;Suction pipe/Ambient, Outdoor&gt; (TH6/7)</li> <li>• High pressure switch (63H)</li> <li>• High pressure sensor (63HS)</li> <li>• Low pressure sensor (63LS)</li> <li>• 4-way valve (21S4)</li> <li>• Bypass valve (SV1)</li> <li>• Electronic expansion valve (CNLVA/CNLVB)</li> </ul> <p>Pull out the disconnected wire from the electrical parts box.</p> <p>(5) Remove the terminal cover and disconnect the compressor lead wire.</p>	<p><b>Photo 4</b></p> 

From the previous page.

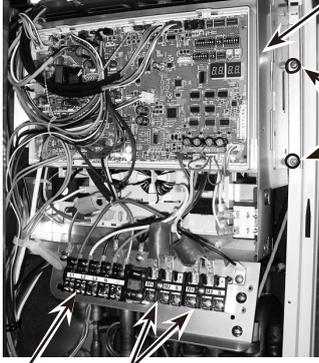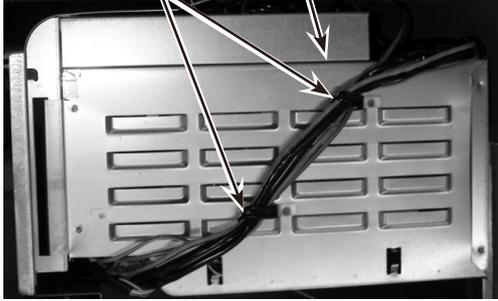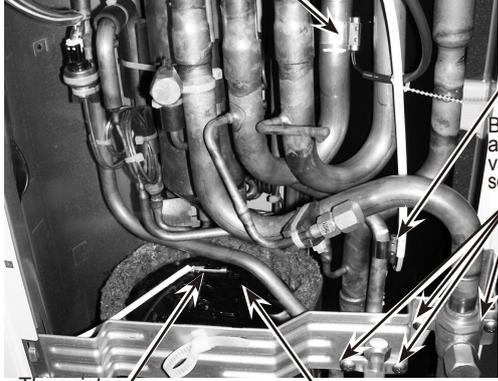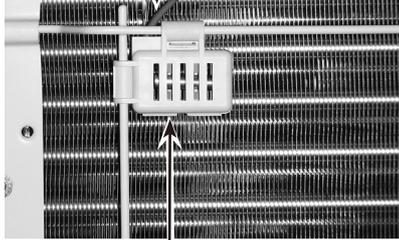OPERATING PROCEDURE	PHOTOS & ILLUSTRATION
<p>(6) Remove 2 electrical parts box fixing screws (4 × 10) and detach the electrical parts box by pulling it upward. The electrical parts box is fixed with 2 hooks on the left and 1 hook on the right.</p>	<p><b>Photo 5</b></p>  <p>Electrical parts box</p> <p>Electrical parts box fixing screws</p> <p>Terminal block (TB1)</p> <p>Terminal block (TB3) (TB7)</p>
<p><b>4. Removing the thermistor &lt;Suction pipe&gt; (TH6)</b></p> <ol style="list-style-type: none"> <li>(1) Remove the service panel. (See Photo 1)</li> <li>(2) Disconnect the connectors, TH6 and TH7 (red), on the outdoor multi controller circuit board in the electrical parts box.</li> <li>(3) Loosen the wire clamps on top of the electrical parts box.</li> <li>(4) Pull out the thermistor &lt;Suction pipe&gt; (TH6) from the sensor holder.</li> </ol> <p><b>Note:</b> When replacing thermistor &lt;Suction pipe&gt; (TH6), replace it together with thermistor &lt;Ambient&gt; (TH7) since they are combined together. Refer to procedure No.5 below to remove thermistor &lt;Ambient&gt; (TH7).</p>	<p><b>Photo 6</b></p>  <p>Clamps</p> <p>Electrical parts box</p> <p><b>Photo 7</b></p>  <p>Thermistor &lt;Suction pipe&gt; (TH6)</p> <p>Thermistor &lt;HIC pipe&gt; (TH2)</p> <p>Ball valve and stop valve fixing screws</p> <p>Thermistor &lt;Compressor&gt; (TH4)</p> <p>Compressor (MC)</p>
<p><b>5. Removing the thermistor &lt;Ambient&gt; (TH7)</b></p> <ol style="list-style-type: none"> <li>(1) Remove the service panel. (See Photo 1)</li> <li>(2) Remove the top panel. (See Photo 1)</li> <li>(3) Disconnect the connector TH7 (red) on the outdoor multi controller circuit board in the electrical parts box.</li> <li>(4) Loosen the wire clamps on top of the electrical parts box. (See Photo 6.)</li> <li>(5) Pull out the thermistor &lt;Ambient&gt; (TH7) from the sensor holder.</li> </ol> <p><b>Note:</b> When replacing thermistor &lt;Ambient&gt; (TH7), replace it together with thermistor &lt;Suction pipe&gt; (TH6), since they are combined together. Refer to procedure No.4 above to remove thermistor &lt;Suction pipe&gt; (TH6).</p>	<p><b>Photo 8</b></p>  <p>Lead wire of thermistor &lt;Ambient&gt; (TH7)</p> <p>Sensor holder</p>

## OPERATING PROCEDURE

### 6. Removing the thermistors

#### Thermistor <HIC> (TH2) and thermistor <Compressor> (TH4)

- (1) Remove the service panel. (See Photo 1)
- (2) Disconnect the connectors, TH2 (black) and TH4 (white), on the Multi controller board in the electrical parts box.
- (3) Loosen the clamp for the lead wire in the rear of the electrical parts box.
- (4) Pull out the thermistor <HIC> (TH2) and thermistor <Compressor> (TH4) from the sensor holder. (See Photo 9-1)

#### Thermistor <Outdoor pipe> (TH3)

- (1) Remove the service panel. (See Photo 1)
- (2) Disconnect the connector, TH3 (white), on the Multi controller board in the electrical parts box.
- (3) Loosen the clamp for the lead wire in the rear of the electrical parts box.
- (4) Pull out the thermistor <Outdoor pipe> (TH3) from the sensor holder. (See Photo 9-2)

### 7. Removing the 4-way valve coil (21S4)

- (1) Remove the service panel. (See Photo 1)

#### [Removing the 4-way valve coil]

- (2) Remove 4-way valve coil fixing screw (M5 × 7).
- (3) Remove the 4-way valve coil by sliding the coil toward you.
- (4) Disconnect the connector 21S4 (green) on the outdoor multi controller circuit board in the electrical parts box.

### 8. Removing the 4-way valve

- (1) Remove the service panel. (See Photo 1)
- (2) Remove the top panel. (See Photo 1)
- (3) Remove the electrical parts box. (See Photo 5)
- (4) Remove 3 valve bed fixing screws (4 × 10) and 4 ball valve and stop valve fixing screws (5 × 16) and then remove the valve bed. (See Photo 4 and 7)
- (5) Remove 2 front cover panel fixing screws (5 × 12) and remove the front cover panel. (See Photo 4)
- (6) Remove 4 back cover panel fixing screws (5 × 12) and remove the back cover panel.
- (7) Remove 3 right side panel fixing screws (5 × 12) in the rear of the unit and then remove the right side panel.
- (8) Remove the 4-way valve coil. (See Photo 10)
- (9) Recover refrigerant.
- (10) Remove the welded part of 4-way valve.

**Note 1:** Recover refrigerant without spreading it in the air.

**Note 2:** The welded part can be removed easily by removing the right side panel.

**Note 3:** When installing the four-way valve, cover it with a wet cloth to prevent it from heating (120°C or more), then braze the pipes so that the inside of pipes are not oxidized.

## PHOTOS

Photo 9-1

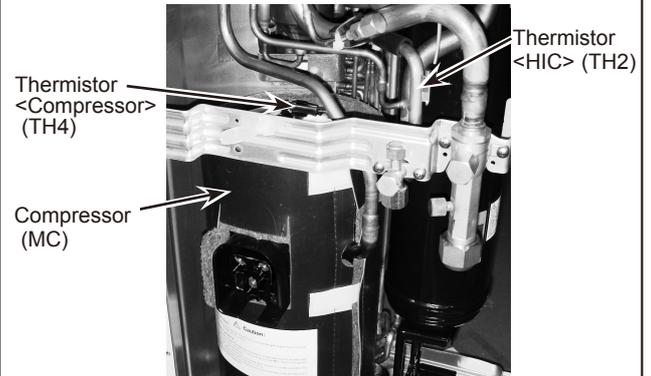


Photo 9-2

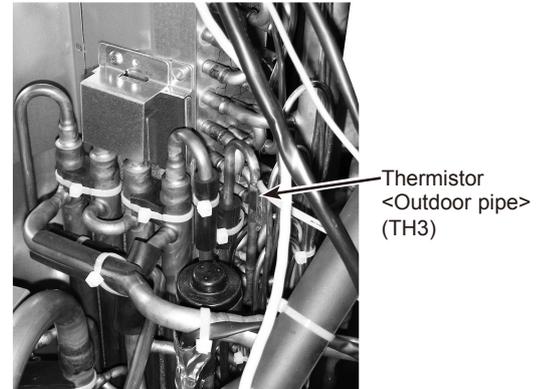


Photo 10



## OPERATING PROCEDURE

### 9. Removing bypass valve coil (SV1) and bypass valve

- (1) Remove the service panel. (See Photo 1)
- (2) Remove the top panel. (See Photo 1)
- (3) Remove 2 front cover panel fixing screws (5 × 12) and remove the front cover panel. (See Photo 4)
- (4) Remove 4 back cover panel fixing screws (5 × 12) and remove the back cover panel.
- (5) Remove 3 right side panel fixing screws (5 × 12) in the rear of the unit and remove the right side panel.
- (6) Remove the bypass valve coil fixing screw (M4 × 6).
- (7) Remove the bypass valve coil by sliding the coil upward.
- (8) Disconnect the connector SV1 (gray) on the outdoor multi controller circuit board in the electrical parts box.
- (9) Remove the electrical parts box. (See Photo 5)
- (10) Recover refrigerant.
- (11) Remove the welded part of bypass valve.

Refer to the notes below.

### 10. Removing the high pressure switch (63H) and high pressure sensor (63HS)

- (1) Remove the service panel. (See Photo 1)
- (2) Remove the top panel. (See Photo 1)
- (3) Remove 2 front cover panel fixing screws (5 × 12) and remove the front cover panel. (See Photo 4)
- (4) Remove 4 back cover panel fixing screws (5 × 12) and remove the back cover panel.
- (5) Remove 3 right side panel fixing screws (5 × 12) in the rear of the unit and remove the right side panel.
- (6) Pull out the lead wire of high pressure switch and high pressure sensor.
- (7) Remove the electrical parts box. (See Photo 5)
- (8) Recover refrigerant.
- (9) Remove the welded part of high pressure switch and high pressure sensor.

Refer to the notes below.

### 11. Removing the low pressure sensor (63LS)

- (1) Remove the service panel. (See Photo 1)
- (2) Remove the top panel. (See Photo 1)
- (3) Remove 2 front cover panel fixing screws (5 × 12) and remove the front cover panel. (See Photo 4)
- (4) Remove 4 back cover panel fixing screws (5 × 12) and remove the back cover panel.
- (5) Remove 3 right side panel fixing screws (5 × 12) in the rear of the unit and remove the right side panel.
- (6) Disconnect the connector 63LS (blue) on the outdoor multi controller circuit board in the electrical parts box.
- (7) Remove the electrical parts box. (See Photo 5)
- (8) Recover refrigerant.
- (9) Remove the welded part of low pressure sensor.



Refer to the notes below.

### 12. Removing electrical expansion valve (LEV-A, LEV-B)

- (1) Remove the service panel. (See Photo 1)
- (2) Remove the top panel. (See Photo 1)
- (3) Remove 2 front cover panel fixing screws (5 × 12) and remove the front cover panel. (See Photo 4)
- (4) Remove 4 back cover panel fixing screws (5 × 12) and remove the back cover panel.
- (5) Remove 3 right side panel fixing screws (5 × 12) in the rear of the unit and remove the right side panel.
- (6) Remove the electrical expansion valve coil. (See Photo 12)
- (7) Remove the electrical parts box. (See Photo 5)
- (8) Recover refrigerant.
- (9) Remove the welded part of electrical expansion valve.


## PHOTOS

Photo 11 & 12

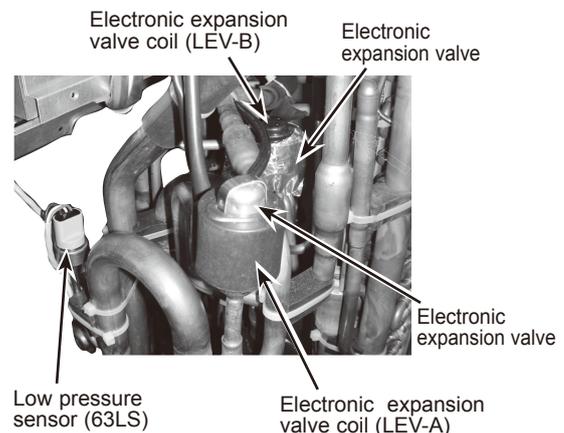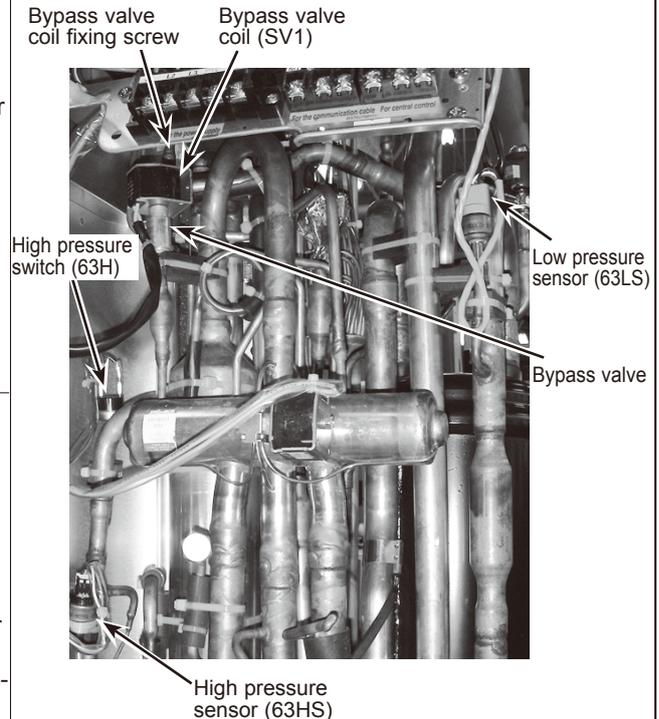

#### Notes:


1. Recover refrigerant without spreading it in the air.
2. The welded part can be removed easily by removing the right side panel.
3. When installing the following parts, cover it with a wet cloth to prevent it from heating as the temperature below, then braze the pipes so that the inside of pipes are not oxidized;
  - Bypass valve (procedure 9), 120°C or more
  - High pressure switch and high pressure sensor (procedure 10), 100°C or more
  - Low pressure sensor (procedure 11), 100°C or more



OPERATING PROCEDURE
<p><b>13. Removing the reactor (DCL)</b></p> <ul style="list-style-type: none"><li>(1) Remove the service panel. (See Photo 1)</li><li>(2) Disconnect the lead wires from the reactor. (See Photo5)</li><li>(3) Disconnect the connectors of reactor on the bottom plate of the electrical parts box. (See Photo13)</li><li>(4) Remove 4 screws ② on the bottom plate of the electrical parts box. (See Photo 13)</li><li>(5) Remove the reactor.</li></ul>

**PHOTOS**

**Photo 13**

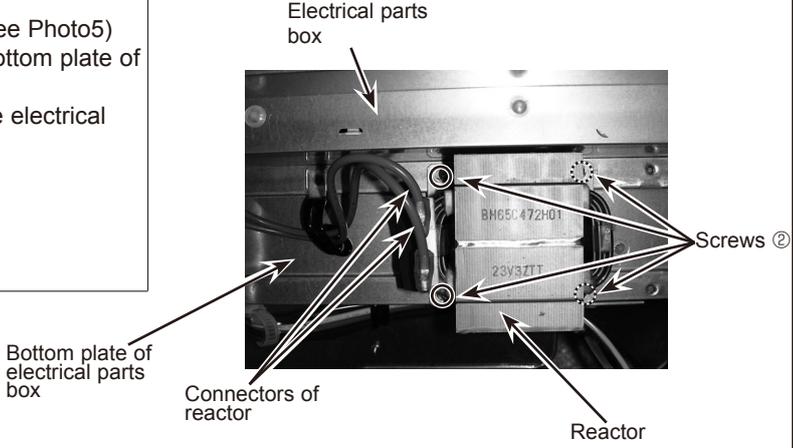

## OPERATING PROCEDURE


### 14. Removing the compressor (MC)

- (1) Remove the service panel. (See Photo 1)
- (2) Remove the top panel. (See Photo 1)
- (3) Remove 2 front cover panel fixing screws (5 × 12) and remove the front cover panel. (See Photo 4)
- (4) Remove front panel fixing screws, 5 (5×12) and 2 (4 × 10) and remove the front panel. (See Photo 4)
- (5) Remove 4 back cover panel fixing screws (5 × 12) and remove the back cover panel.
- (6) Remove the electrical parts box. (See Photo 5)
- (7) Remove 3 valve bed fixing screws (4 × 10) and 4 ball valve and stop valve fixing screws (5 × 16) and then remove the valve bed. (See Photo 4 and 7)
- (8) Remove 3 right side panel fixing screw (5 × 12) in the rear of the unit and then remove the right side panel.
- (9) Remove 4 separator fixing screws (4 × 10) and remove the separator. (See Figure 1)
- (10) Recover refrigerant.
- (11) Remove the 3 compressor fixing nuts for motor using spanner or adjustable wrench.
- (12) Remove the welded pipe of motor for compressor inlet and outlet and then remove the compressor.


**Note: Recover refrigerant without spreading it in the air.**

## PHOTOS

**Photo 14**

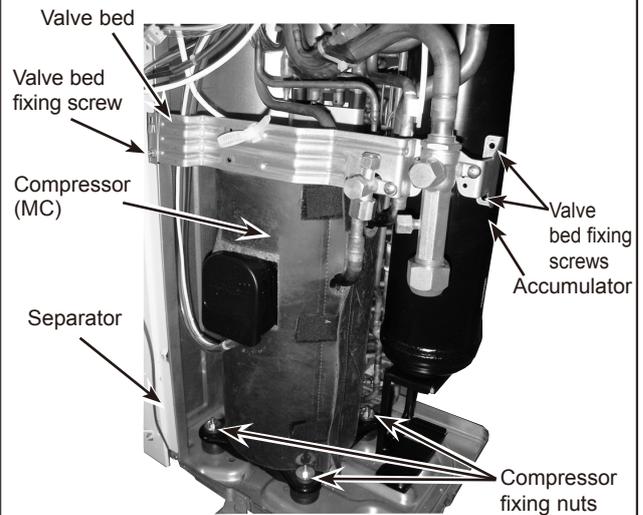

**Figure 1**

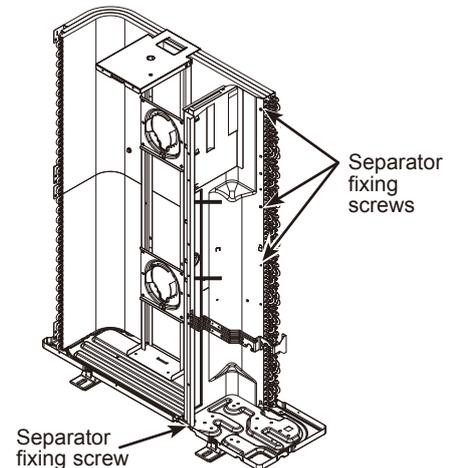


### 15. Removing the accumulator


- (1) Remove the service panel. (See Photo 1)
- (2) Remove the top panel. (See Photo 1)
- (3) Remove 2 front cover panel fixing screws (5 × 12) and remove the front cover panel. (See Photo 4)
- (4) Remove 4 back cover panel fixing screws (5 × 12) and remove the back cover panel.
- (5) Remove the electrical parts box. (See Photo 5)
- (6) Remove 3 valve bed fixing screws (4 × 10) and 4 ball valve and stop valve fixing screws (5 × 16), and then remove the valve bed. (See Photo 4 and 7)
- (7) Remove 3 right side panel fixing screw (5 × 12) in the rear of the unit and then remove the right side panel.
- (8) Recover refrigerant.
- (9) Remove 2 welded pipes of accumulator inlet and outlet.
- (10) Remove 2 accumulator leg fixing screws (4 × 10). (See Photo 16)


**Note: Recover refrigerant without spreading it in the air.**

**Photo 15**

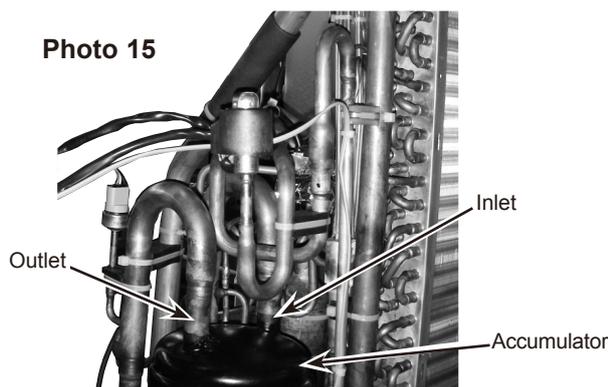

**Photo 16**

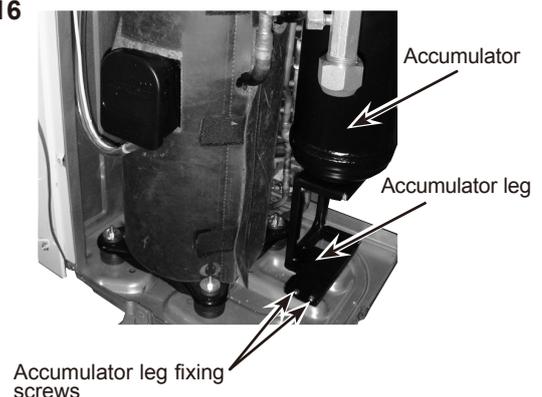



**CITY MULTI™**

**mitsubishi**  
**mitsubishi ELECTRIC CORPORATION**

HEAD OFFICE : TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO100-8310, JAPAN

---