

Revision A:


- MUZ-A12YV-E1 and MUZ-A12YVH-E1 can be connected to MCFZ-A12WV-E1.
- Some mistakes were corrected.

Please void OB328.

SERVICE MANUAL


**No. OB328
REVISED EDITION-A**

Wireless type Models

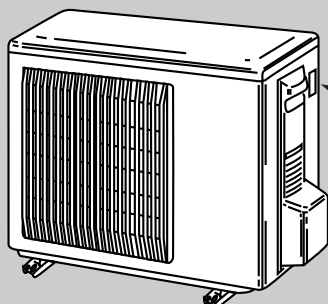MUZ-A09YV - E1
MUZ-A12YV - E1
MUZ-A09YVH - E1
MUZ-A12YVH - E1

 Indication of
model name

MUZ-A09YV - E1
MUZ-A12YV - E1
MUZ-A09YVH - E1
MUZ-A12YVH - E1

CONTENTS

| | |
|-------------------------------------|----|
| 1. TECHNICAL CHANGES | 2 |
| 2. PART NAMES AND FUNCTIONS | 5 |
| 3. SPECIFICATION | 5 |
| 4. NOISE CRITERIA CURVES | 7 |
| 5. OUTLINES AND DIMENSIONS | 8 |
| 6. WIRING DIAGRAM | 9 |
| 7. REFRIGERANT SYSTEM DIAGRAM | 11 |
| 8. PERFORMANCE CURVES | 12 |
| 9. ACTUATOR CONTROL | 21 |
| 10. SERVICE FUNCTIONS | 22 |
| 11. TROUBLESHOOTING | 22 |
| 12. DISASSEMBLY INSTRUCTIONS | 34 |
| 13. PARTS LIST | 38 |

NOTE:

This service manual describes technical data of the outdoor units.

- As for indoor units MSZ-A09YV-E1 and MSZ-A12YV-E1, refer to the service manual OB327.
- As for indoor unit MCFZ-A12WV-E1, refer to the service manual OB344.



Revision A:

- MUZ-A12YV-E1 and MUZ-A12YVH-E1 can be connected to MCFZ-A12WV-E1.
- Some mistakes were corrected.

1 TECHNICAL CHANGES



INFORMATION FOR THE AIR CONDITIONER WITH R410A REFRIGERANT

- This room air conditioner adopts an HFC refrigerant (R410A) which never destroys the ozone layer.
- Pay particular attention to the following points, though the basic installation procedure is same as that for R22 air conditioners.
 - ① As R410A has working pressure approximate 1.6 times as high as that of R22, some special tools and piping parts/materials are required. Refer to the table below.
 - ② Take sufficient care not to allow water and other contaminations to enter the R410A refrigerant during storage and installation, since it is more susceptible to contaminations than R22.
 - ③ For refrigerant piping, use clean, pressure-proof parts/materials specifically designed for R410A. (Refer to 2. Refrigerant piping.)
 - ④ Composition change may occur in R410A since it is a mixed refrigerant. When charging, charge liquid refrigerant to prevent composition change.

| | | New refrigerant | Previous refrigerant |
|-------------------|---------------------------------------|-------------------------------|----------------------|
| Refrigerant | Refrigerant | R410A | R22 |
| | Composition (Ratio) | HFC-32: HFC-125 (50%:50%) | R22 (100%) |
| | Refrigerant handling | Pseudo-azeotropic refrigerant | Single refrigerant |
| | Chlorine | Not included | Included |
| | Safety group (ASHRAE) | A1/A1 | A1 |
| | Molecular weight | 72.6 | 86.5 |
| | Boiling point (°C) | -51.4 | -40.8 |
| | Steam pressure [25°C](Mpa) | 1.557 | 0.94 |
| | Saturated steam density [25°C](Kg/m³) | 64 | 44.4 |
| | Combustibility | Non combustible | Non combustible |
| | ODP ※1 | 0 | 0.055 |
| | GWP ※2 | 1730 | 1700 |
| | Refrigerant charge method | From liquid phase in cylinder | Gas phase |
| | Additional charge on leakage | Possible | Possible |
| Refrigerating oil | Kind | Incompatible oil | Compatible oil |
| | Color | Non | Light yellow |
| | Smell | Non | Non |


※1 :Ozone Destruction Parameter : based on CFC-11

※2 :Global Warmth Parameter : based on CO₂
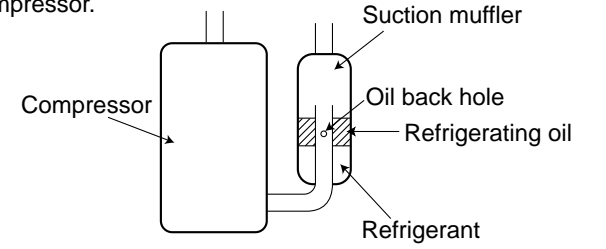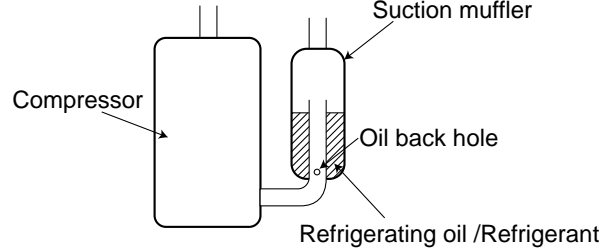
| | New Specification | Current Specification |
|------------|--|--|
| Compressor | <p>The incompatible refrigerating oil easily separates from refrigerant and is in the upper layer inside the suction muffler. Raising position of the oil back hole enables to back the refrigerating oil of the upper layer to flow back to the compressor.</p>  | <p>Since refrigerant and refrigerating oil are compatible each, refrigerating oil backs to the compressor through the lower position oil back hole.</p>  |

NOTE : The unit of pressure has been changed to MPa on the international system of units(SI unit system).
 The conversion factor is: **1(MPa [Gauge]) =10.2(kgf/cm² [Gauge])**

Conversion chart of refrigerant temperature and pressure

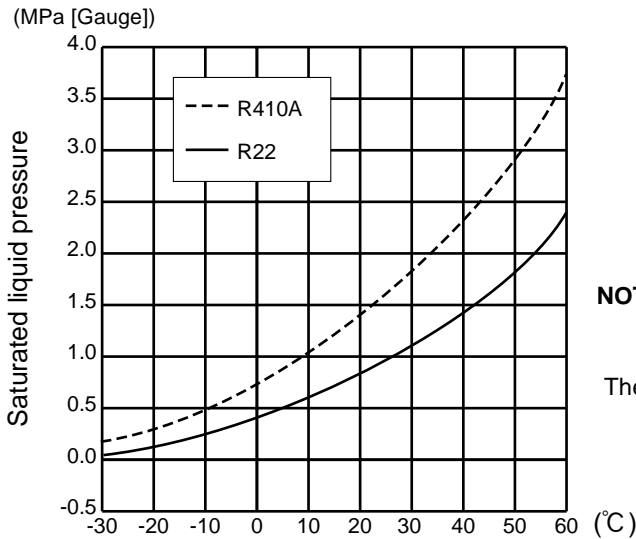

NOTE : The unit of pressure has been changed to MPa on the international system of units(SI unit system).

The conversion factor is: **1(MPa [Gauge]) =10.2(kgf/cm² [Gauge])**

1.Tools dedicated for the air conditioner with R410A refrigerant

The following tools are required for R410A refrigerant. Some R22 tools can be substituted for R410A tools.

The diameter of the service port on the stop valve in outdoor unit has been changed to prevent any other refrigerant being charged into the unit. Cap size has been changed from 7/16 UNF with 20 threads to 1/2 UNF with 20 threads.

| R410A tools | Can R22 tools be used? | Description |
|---|------------------------|---|
| Gauge manifold | No | R410A has high pressures beyond the measurement range of existing gauges. Port diameters have been changed to prevent any other refrigerant from being charged into the unit. |
| Charge hose | No | Hose material and cap size have been changed to improve the pressure resistance. |
| Gas leak detector | No | Dedicated for HFC refrigerant. |
| Torque wrench | Yes | 6.35 mm and 9.52 mm |
| | No | 12.7 mm |
| Flare tool | Yes | Clamp bar hole has been enlarged to reinforce the spring strength in the tool. |
| Flare gauge | New | Provided for flaring work (to be used with R22 flare tool). |
| Vacuum pump adapter | New | Provided to prevent the back flow of oil. This adapter enables you to use vacuum pumps. |
| Electronic scale for refrigerant charging | New | It is difficult to measure R410A with a charging cylinder because the refrigerant bubbles due to high pressure and high-speed vaporization |

No : Not Substitutable for R410A Yes : Substitutable for R410A

2.Refrigerant piping

① Specifications

Use the refrigerant pipes that meet the following specifications.

| Pipe | Outside diameter | Wall thickness | Insulation material |
|------------|------------------|----------------|--|
| | mm | | |
| For liquid | 6.35 | 0.8 mm | Heat resisting foam plastic Specific gravity 0.045 Thickness 8 mm |
| For gas | 9.52 | 0.8 mm | |
| | 12.7 | 0.8 mm | |

- Use a copper pipe or a copper-alloy seamless pipe with a thickness of 0.8 mm. Never use any pipe with a thickness less than 0.8mm, as the pressure resistance is insufficient.

② Flaring work and flare nut

Flaring work for R410A pipe differs from that for R22 pipe.

For details of flaring work, refer to Installation manual "FLARING WORK".

| Pipe diameter mm | Dimension of flare nut | |
|---------------------|------------------------|-----|
| | R410A | R22 |
| 6.35 | 17 | 17 |
| 9.52 | 22 | 22 |
| 12.7 | 26 | 24 |

3.Refrigerant oil

Apply the special refrigeration oil (accessories: packed with indoor unit) to the flare and the union seat surfaces.


4.Air purge

- Do not discharge the refrigerant into the atmosphere.
Take care not to discharge refrigerant into the atmosphere during installation, reinstallation, or repairs to the refrigerant circuit.
- Use the vacuum pump for air purging for the purpose of environmental protection.

5.Additional charge

For additional charging, charge the refrigerant from liquid phase of the gas cylinder.

If the refrigerant is charged from the gas phase, composition change may occur in the refrigerant inside the cylinder and the outdoor unit. In this case, ability of the refrigerating cycle decreases or normal operation can be impossible. However, charging the liquid refrigerant all at once may cause the compressor to be locked. Thus, charge the refrigerant slowly.

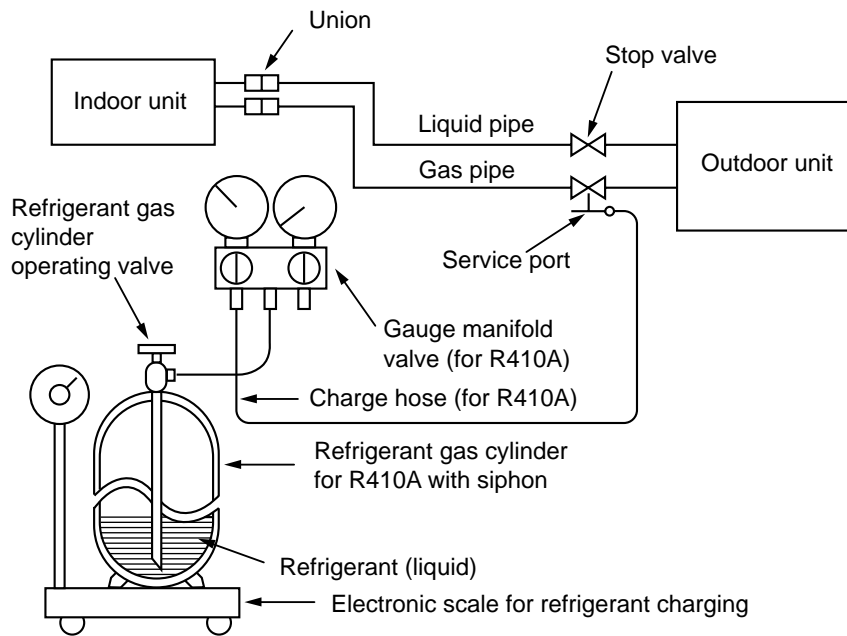


2

PART NAMES AND FUNCTIONS

MUZ-A09YV -^[E1] MUZ-A12YV -^[E1]
 MUZ-A09YVH -^[E1] MUZ-A12YVH -^[E1]

OUTDOOR UNIT

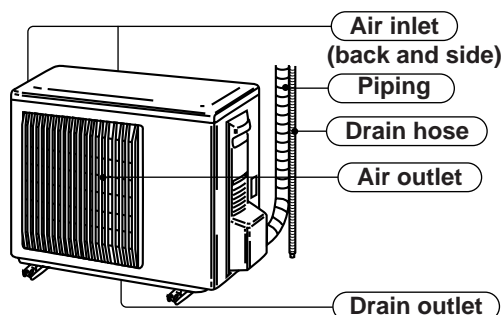

ACCESSORIES

OUTDOOR UNIT

| | | |
|---|--------------|--|
| | | MUZ-A09YV - ^[E1] MUZ-A12YV - ^[E1] |
| ① | Drain socket | 1 |

3

SPECIFICATION

| Outdoor model | | | MUZ-A09YV - ^[E1] MUZ-A09YVH - ^[E1] Indoor model MSZ-A09YV - ^[E1] | MUZ-A12YV - ^[E1] MUZ-A12YVH - ^[E1] Indoor model MSZ-A12YV - ^[E1] | MUZ-A12YV - ^[E1] MUZ-A12YVH - ^[E1] Indoor model MCFZ-A12WV - ^[E1] | | | |
|--------------------------------------|-------------------------------------|-------------------|--|--|---|---------------|----------------------------|---------------|
| Function | | | Cooling | Heating | Cooling | Heating | Cooling | Heating |
| Power supply | | | Single phase 230V,50Hz | | Single phase 230V,50Hz | | Single phase 230V,50Hz | |
| Capacity | Capacity Rated frequency(Min.-Max.) | kW | 2.5 (0.9-3.2) | 3.2 (0.9-5.0) | 3.5 (1.0-4.1) | 4.0 (0.9-6.0) | 3.5 (1.0-4.1) | 3.9 (0.9-5.9) |
| | Dehumidification | ℓ /h | 1.4 | — | 2.0 | — | 2.0 | — |
| | Air flow | m ³ /h | 1900 | | 1900 | | 1900 | |
| Electrical data | Starting current *1 | A | 3.90 | | 5.00 | | 5.00 | |
| | Compressor motor current *1 | A | 2.89 | 3.49 | 4.57 | | 4.46 | |
| | Fan motor current | A | 0.24 | | 0.24 | | 0.24 | |
| Coefficient of performance(C.O.P) *1 | | | 3.73 | 3.81 | 3.21 | 3.70 | 3.21 | 3.61 |
| Compressor | Model | | KNB073FBVH | | KNB092FAAH | | KNB092FAAH | |
| | Output | W | 550 | | 650 | | 650 | |
| | Winding resistance(at 20°C) | Ω | U-V 1.53 | U-W 1.53 | U-V 0.49 | U-W 0.49 | U-V 0.49 | U-W 0.49 |
| Fan motor | Model | | RA6V21-AA | | RA6V21-AA | | RA6V21-AA | |
| | Winding resistance(at 20°C) | Ω | WHT-BLK 347 BLK-RED 281 | | WHT-BLK 347 BLK-RED 281 | | WHT-BLK 347 BLK-RED 281 | |
| | Dimensions W×H×D | mm | 800×550×285 | | 800×550×285 | | 800×550×285 | |
| Weight | | | kg | | 33 | | 34 | |
| Special remarks | Sound level | dB(A) | 46 | | 47 | 48 | 47 | 48 |
| | Fan speed | rpm | 825 | | 825 | | 825 | |
| | Fan speed regulator | | 1 | | 1 | | 1 | |
| | Refrigerant filling capacity(R410A) | kg | 0.80 | | 0.90 | | 0.90 | |
| | Refrigerating oil (Model) | cc | 320 (NEO22) | | 320 (NEO22) | | 320 (NEO22) | |
| | Thermistor RT61(at 0°C) | kΩ | 32.6 | | 32.6 | | 32.6 | |
| | Thermistor RT62(at 100°C) | kΩ | 13.4 | | 13.4 | | 13.4 | |
| | Thermistor RT64(at 50°C) | kΩ | 17 | | 17 | | 17 | |
| Thermistor RT65(at 25°C) | kΩ | 10 | | 10 | | 10 | | |

NOTE : Test conditions are based on ISO 5151
 Cooling : Indoor DB 27°C WB 19°C
 Outdoor DB 35°C WB(24°C)
 Heating : Indoor DB 20°C WB 15°C
 Outdoor DB 7°C WB 6°C
 Refrigerant piping length (one way): 5m
 *1 Measured under rated operating frequency

Specifications and rating conditions of main electric parts

OUTDOOR UNIT

| Item | Model | MUZ-A09YV - [E1] | MUZ-A09YVH - [E1] | MUZ-A12YV - [E1] | MUZ-A12YVH - [E1] |
|--------------------------------|--------------------|------------------|-------------------|------------------------------|-------------------|
| Current transformer | (CT) | ETQ19Z53AY | | | |
| Current transformer | (CT761, CT781) | ETQ19Z71AY | | | |
| Smoothing capacitor | (C62A, C62B, C61B) | 680 μ F 420V | | | |
| Outdoor fan capacitor | (C65) | 1.8 μ F 440V | | | |
| Diode module | (DB61, DB65) | D25XB60 | | | |
| Fuse | (F61) | 250V 20A | | | |
| Fuse | (F71, F801) | 250V 3.15A | | | |
| Defrost heater | (H) | — | 230V 130W | — | 230V 130W |
| Power transistor module | (IPM) | PS21244A | | | |
| Expansion valve coil | (LEV) | CAD-MD12ME 12VDC | | | |
| Reactor | (L61) | 10A 23.0mH | | | |
| Current-detecting resistor | (R61) | 45m Ω 5W | | 50m Ω 5W (2 elements) | |
| Current-detecting resistor | (R831) | 25m Ω 5W | | | |
| Current-limiting resistor | (R64A, R64B) | 5.1 Ω 10W | | | |
| Solid state relay | (SR61) | G3MB | | | |
| Terminal block | (TB) | 3P | | | |
| Relay | (X63) | G5N-1a/G5NB-1a | | | |
| Relay | (X64) | G4A-1A-PS | | | |
| Relay | (X66) | — | G5N-1a/G5NB-1a | — | G5N-1a/G5NB-1a |
| R.V. coil | (21S4) | LD30013 | | | |
| Heater protector | (26H) | — | Open 45°C | — | Open 45°C |
| Outdoor fan motor thermal fuse | | Open 152°C | | | |

4


NOISE CRITERIA CURVES

MUZ-A09YV -[E1]
MUZ-A09YVH -[E1]

| SPEED | FUNCTION | SPL(dB(A)) | LINE |
|-------|----------|------------|------|
| High | COOLING | 46 | ●—● |
| | HEATING | 46 | ○—○ |

Test conditions,

Cooling : Dry-bulb temperature 35°C Wet-bulb temperature (24°C)
 Heating : Dry-bulb temperature 7°C Wet-bulb temperature 6°C


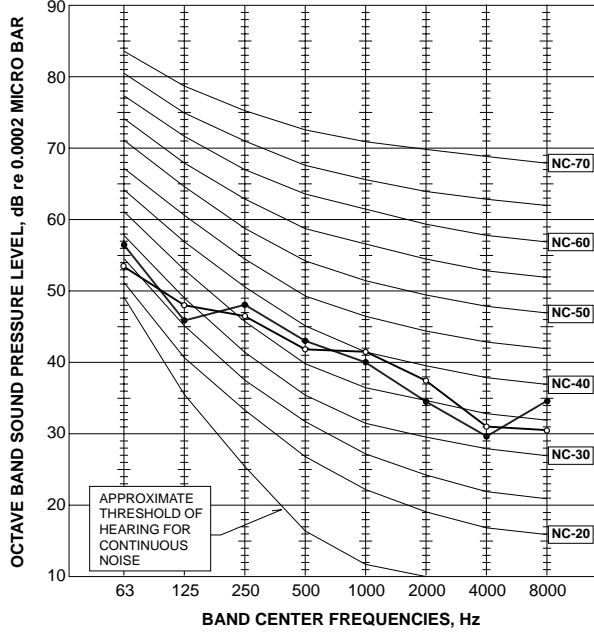


MUZ-A12YV -[E1]
MUZ-A12YVH -[E1]

| FAN SPEED | FUNCTION | SPL(dB(A)) | LINE |
|-----------|----------|------------|------|
| High | COOLING | 47 | ●—● |
| | HEATING | 48 | ○—○ |

Test conditions,

Cooling : Dry-bulb temperature 35°C Wet-bulb temperature (24°C)
 Heating : Dry-bulb temperature 7°C Wet-bulb temperature 6°C

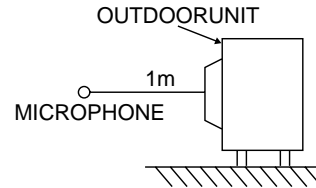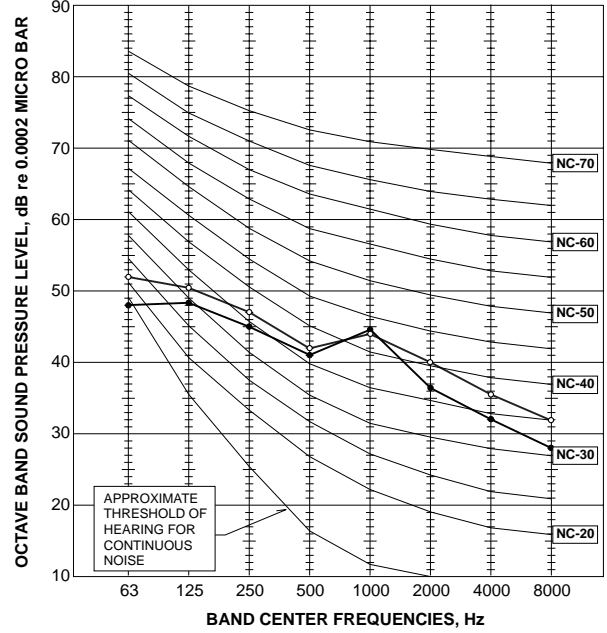

5



OUTLINES AND DIMENSIONS

MUZ-A09YV -[E1] MUZ-A12YV -[E1]
 MUZ-A09YVH -[E1] MUZ-A12YVH -[E1]

Unit: mm

OUTDOOR UNIT

REQUIRED SPACE

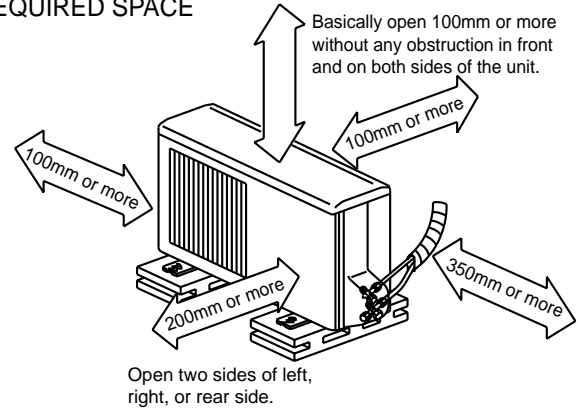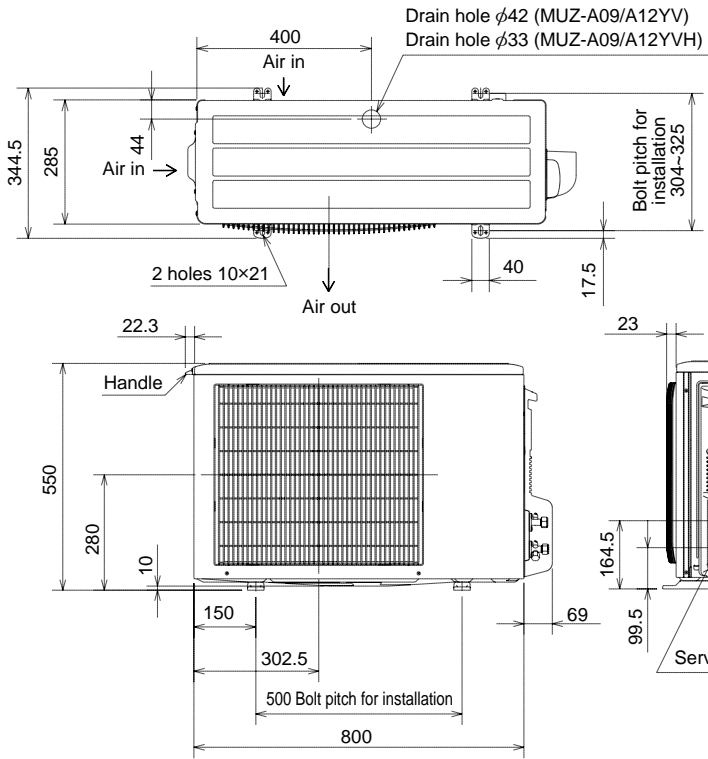


MUZ-A09YV -E1

MUZ-A12YV -E1

OUTDOOR UNIT

MODELS WIRING DIAGRAM

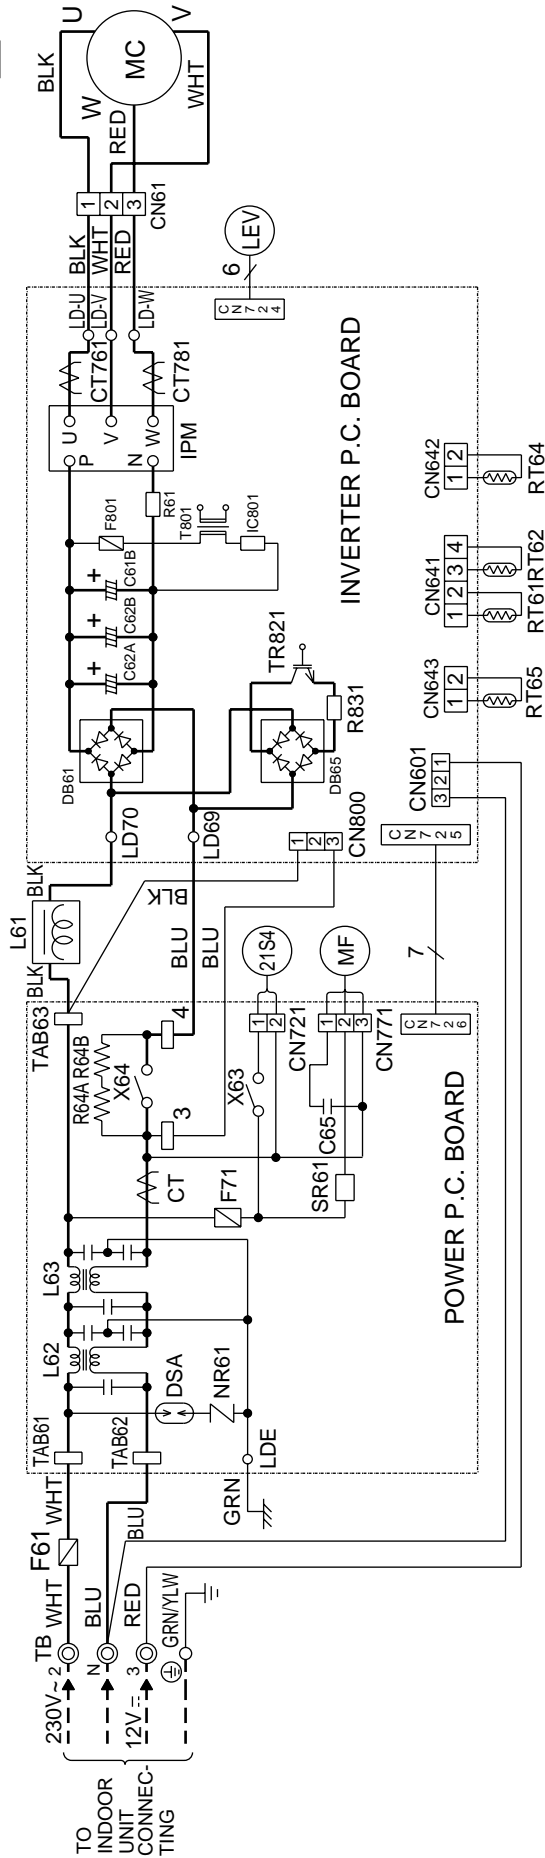


NOTE: 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing.
 2. Use copper conductors only. (For field wiring)
 3. Symbols below indicate.
 ○: Terminal block, □□□□: Connector

| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|----------------|--------------------------|---------|----------------------------------|-----------|--------------------------------|
| CT781 | CURRENT TRANSFORMER | LEV | EXPANSION VALVE COIL | RT65 | AMBIENT TEMPERATURE THERMISTOR |
| C62A,C62B,C61B | SMOOTHING CAPACITOR | L61 | REACTOR | R61,R831 | CURRENT-DETECTING RESISTOR |
| C65 | OUTDOOR FAN CAPACITOR | L62,L63 | CMC COIL | R64A,R64B | CURRENT-LIMITING RESISTOR |
| DB61,DB65 | DIODE MODULE | MC | COMPRESSOR | SR61 | SOLID STATE RELAY |
| DSA | SURGE ABSORBER | MF | OUTDOOR FAN MOTOR (INNER FUSE) | TB | TERMINAL BLOCK |
| F61 | FUSE (20A) | NR61 | VARIATOR | TR821 | SWITCHING POWER TRANSISTOR |
| F71,F801 | FUSE (3.15A) | RT61 | DEFROST THERMISTOR | T801 | TRANSFORMER |
| IC801 | INTELLIGENT POWER DEVICE | RT62 | DISCHARGE TEMPERATURE THERMISTOR | X63,X64 | RELAY |
| IPM | POWER TRANSISTOR MODULE | RT64 | FIN TEMPERATURE THERMISTOR | 21S4 | R.V. COIL |

MUZ-A09YVH -E1
MUZ-A12YVH -E1

OUTDOOR UNIT

MODELS WIRING DIAGRAM

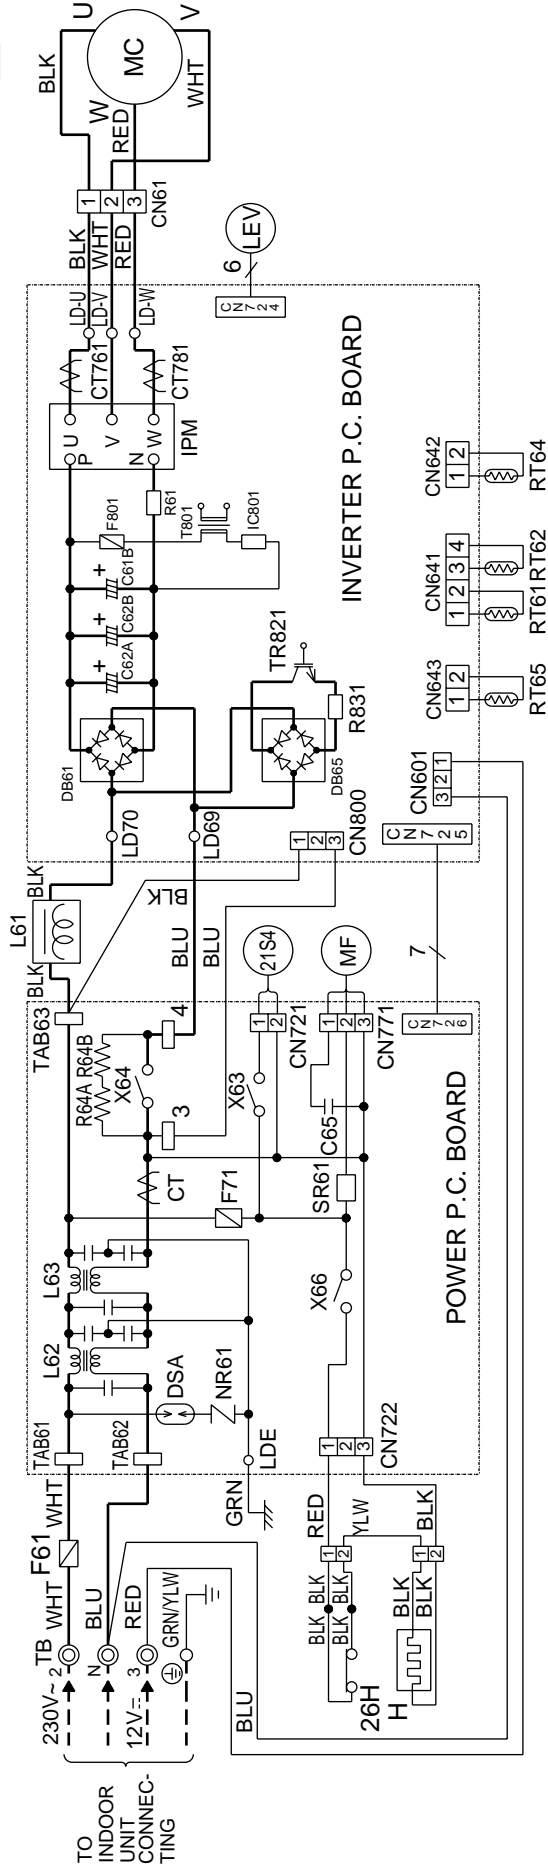

NOTE:1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing.
 2. Use copper conductors only. (For field wiring)
 3. Symbols below indicate.
 ○: Terminal block, □□□: Connector


| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|----------------|--------------------------|---------|----------------------------------|-------------|----------------------------|
| CT761,CT781 | CURRENT TRANSFORMER | LEV | EXPANSION VALVE COIL | R61,R831 | CURRENT-DETECTING RESISTOR |
| C62A,C62B,C61B | SMOOTHING CAPACITOR | L61 | REACTOR | R64A,R64B | CURRENT-LIMITING RESISTOR |
| C65 | OUTDOOR FAN CAPACITOR | L62,L63 | CMC COIL | SR61 | SOLID STATE RELAY |
| DB61,DB65 | DIODE MODULE | MC | COMPRESSOR | TB | TERMINAL BLOCK |
| DSA | SURGE ABSORBER | MF | OUTDOOR FAN MOTOR (INNER FUSE) | TR821 | SWITCHING POWER TRANSISTOR |
| F61 | FUSE (20A) | NR61 | VARIATOR | T801 | TRANSFORMER |
| F71,F801 | FUSE (3.15A) | RT61 | DEFROST THERMISTOR | X63,X64,X66 | RELAY |
| H | DEFROST HEATER | RT62 | DISCHARGE TEMPERATURE THERMISTOR | 21S4 | R.V. COIL |
| IC801 | INTELLIGENT POWER DEVICE | RT64 | FIN TEMPERATURE THERMISTOR | 26H | HEATER PROTECTOR |
| IPM | POWER TRANSISTOR MODULE | RT65 | AMBIENT TEMPERATURE THERMISTOR | | |

7

REFRIGERANT SYSTEM DIAGRAM

MUZ-A09YV - [E1]
 MUZ-A09YVH - [E1]
 MUZ-A12YV - [E1]
 MUZ-A12YVH - [E1]


Unit:mm

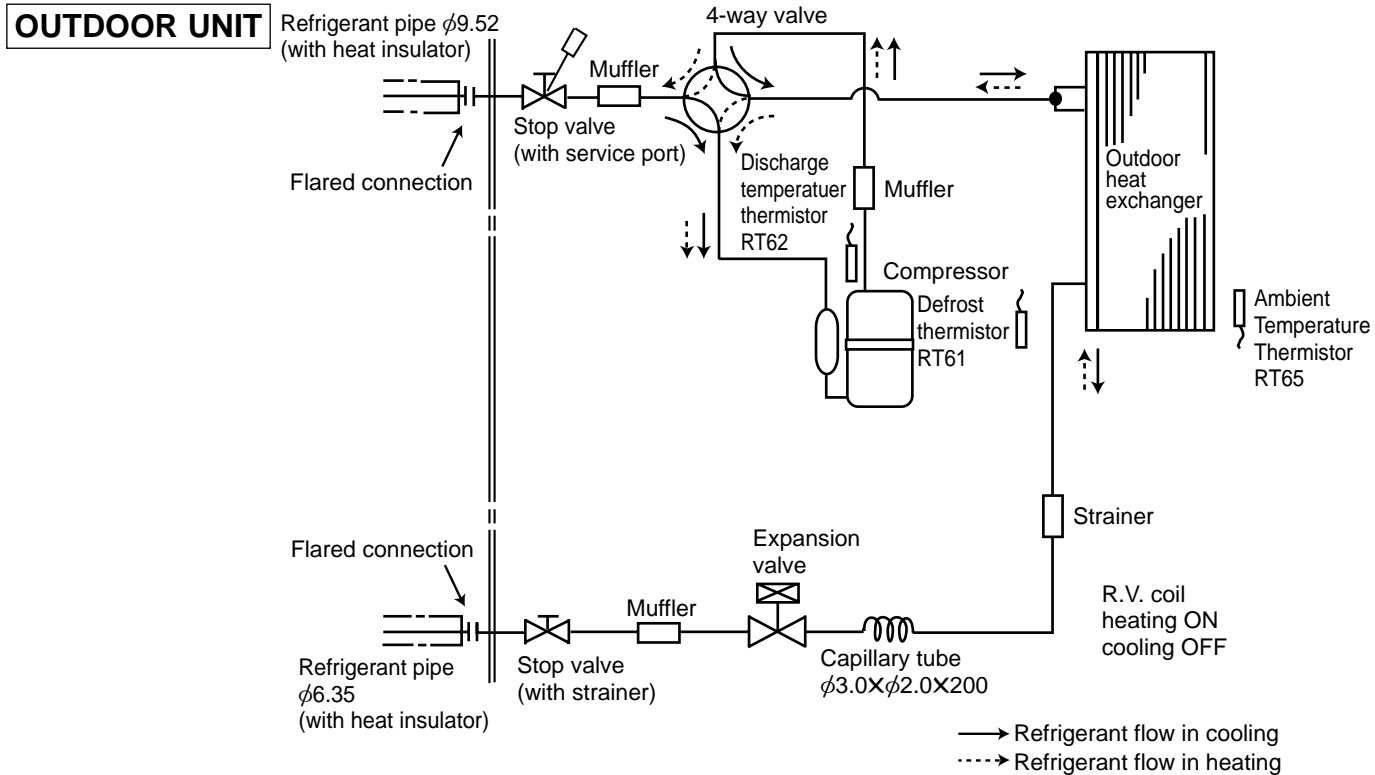

MAX. REFRIGERANT PIPING LENGTH

| Model | Refrigerant piping Max. length : m A | Piping size O.D : mm | | Length of connecting pipe : m | |
|--|--|----------------------|--------|-------------------------------|--------------|
| | | Gas | Liquid | Indoor unit | Outdoor unit |
| MUZ-A09YV - [E1] MUZ-A09YVH - [E1] MUZ-A12YV - [E1] MUZ-A12YVH - [E1] | 20 | 9.52 | 6.35 | Gas 0.43 Liquid 0.5 | — |

MAX. HEIGHT DIFFERENCE

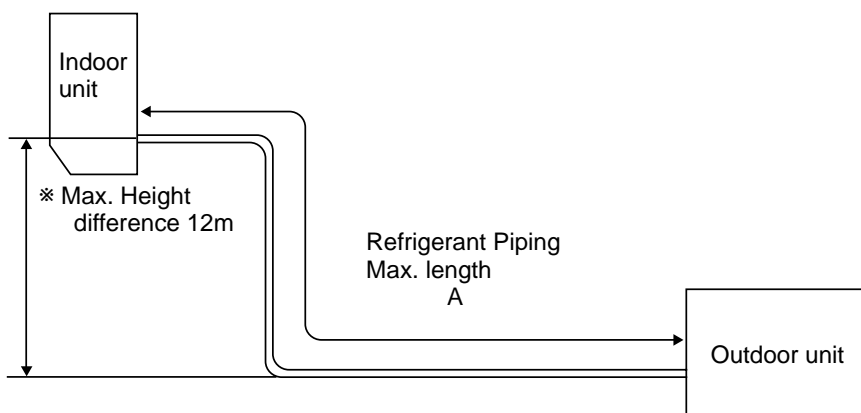

* Height difference should be within 12m regardless of which unit, indoor or outdoor position is high.

ADDITIONAL REFRIGERANT CHARGE (R410A:g)

| Model | Outdoor unit precharged | Refrigerant piping length (one way) | | | | | | | | | | | |
|---|-------------------------|-------------------------------------|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| | | 5m | 6m | 7m | 8m | 9m | 10m | 11m | 12m | 13m | 14m | 15m | 20m |
| MUZ-A09YV - [E1] MUZ-A09YVH - [E1] | 800 | 0 | 0 | 0 | 90 | 120 | 150 | 180 | 210 | 240 | 270 | 300 | 450 |
| MUZ-A12YV - [E1] MUZ-A12YVH - [E1] | 900 | 0 | 0 | 0 | 90 | 120 | 150 | 180 | 210 | 240 | 270 | 300 | 450 |

Calculation : $Xg=30g/m \times (\text{Refrigerant piping length(m)} - 5)$

8

PERFORMANCE CURVES

MUZ-A09YV - [E1] **MUZ-A12YV** - [E1]
MUZ-A09YVH - [E1] **MUZ-A12YVH** - [E1]

The standard data contained in these specifications apply only to the operation of the air conditioner under normal conditions. Since operating conditions vary according to the areas where these units are installed. The following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

(1) GUARANTEED VOLTAGE

198 ~ 264V, 50Hz

(2) AIR FLOW

Air flow should be set at MAX.

(3) MAIN READINGS

- | | | |
|---|-------|-----------|
| (1) Indoor intake air wet-bulb temperature : | °C WB | } Cooling |
| (2) Indoor outlet air wet-bulb temperature : | °C WB | |
| (3) Outdoor intake air dry-bulb temperature : | °C DB | |
| (4) Total input: | W | |
| (5) Indoor intake air dry-bulb temperature : | °C DB | } Heating |
| (6) Outdoor intake air wet-bulb temperature : | °C WB | |
| (7) Total input : | W | |


Indoor air wet/dry-bulb temperature difference on the left side of the chart on next page shows the difference between the indoor intake air wet/dry-bulb temperature and the indoor outlet air wet/dry-bulb temperature for your reference at service.

How to measure the indoor air wet-bulb / dry-bulb temperature difference

- Attach at least 2 sets of wet and dry-bulb thermometers to the indoor air intake as shown in the figure, and at least 2 sets of wet and dry-bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
- Attach at least 2 sets of wet and dry-bulb thermometers to the outdoor air intake.
Cover the thermometers to prevent direct rays of the sun.
- Check that the air filter is cleaned.
- Open windows and doors of room.
- Press the EMERGENCY OPERATION switch once (twice) to start the EMERGENCY COOL (HEAT) MODE.
- When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
- 10 minutes later, measure temperature again and check that the temperature does not change.


INDOOR UNIT

MSZ type

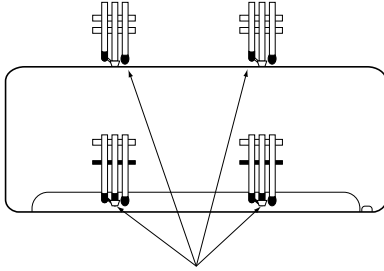


Wet and dry-bulb thermometers
FRONT VIEW

MCFZ type






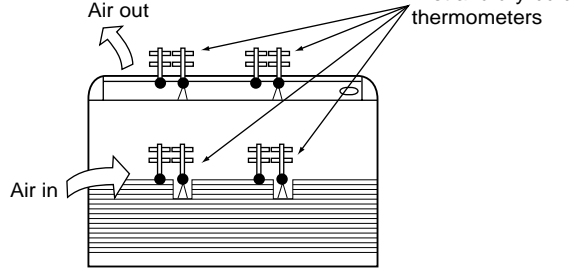


FRONT VIEW

OUTDOOR UNIT

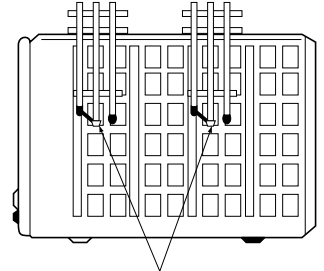


Wet and dry-bulb thermometers
BACK VIEW

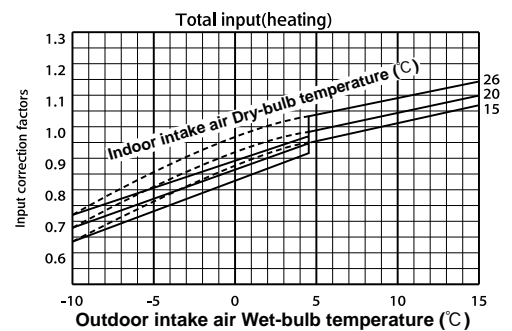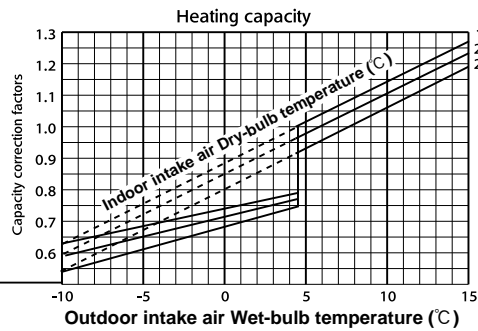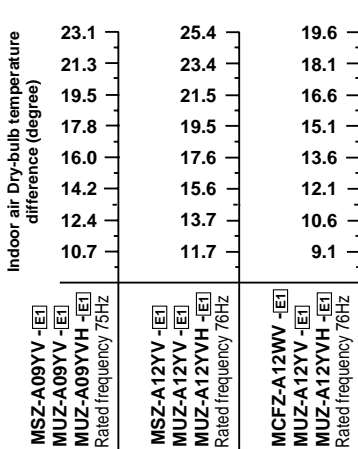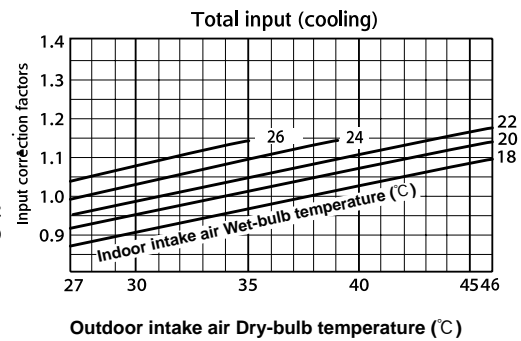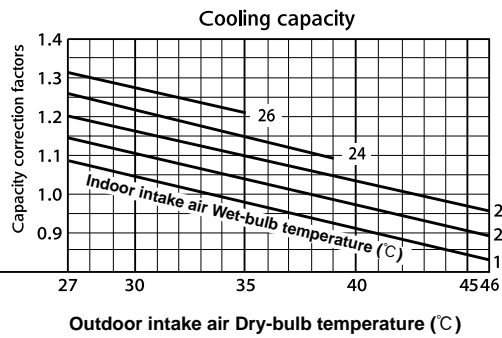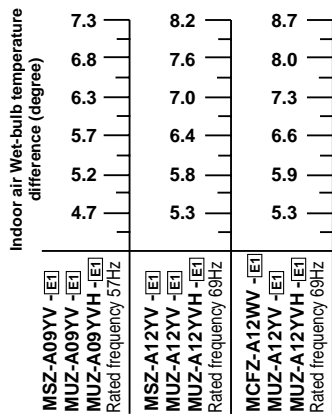


NOTE: The above curves are for the heating operation without any frost.




MUZ-A09YV - [E1]
MUZ-A09YVH - [E1]

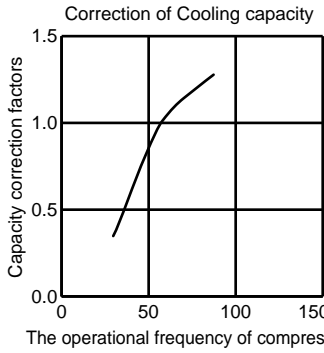


MUZ-A09YV - [E1]
MUZ-A09YVH - [E1]

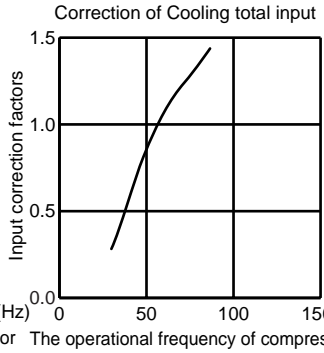


MUZ-A09YV - [E1]
MUZ-A09YVH - [E1]

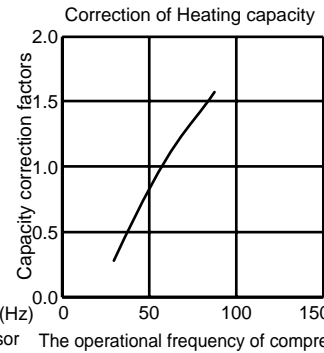


MUZ-A09YV - [E1]
MUZ-A09YVH - [E1]

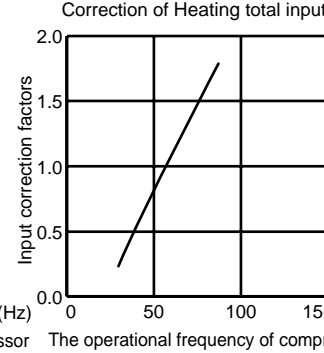


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MSZ-A12YV - [E1])

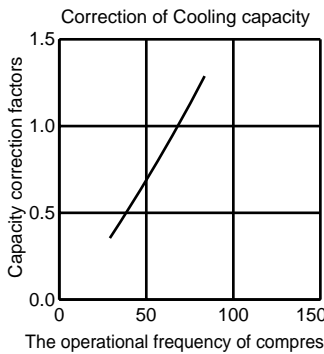


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MSZ-A12YV - [E1])

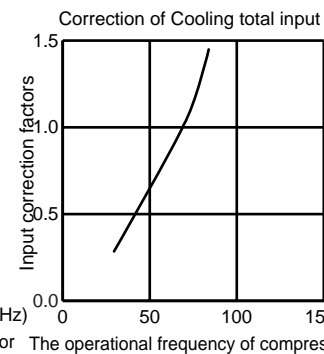


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MSZ-A12YV - [E1])

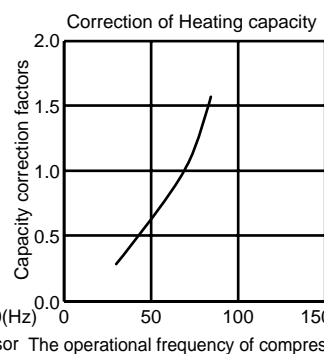


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MSZ-A12YV - [E1])

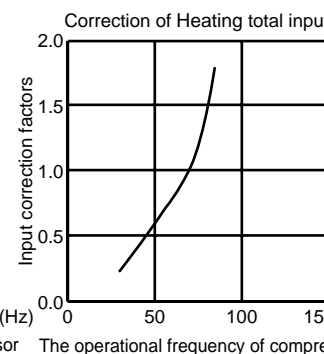


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MCFZ-A12WV - [E1])

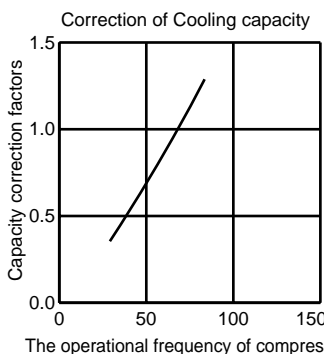


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MCFZ-A12WV - [E1])

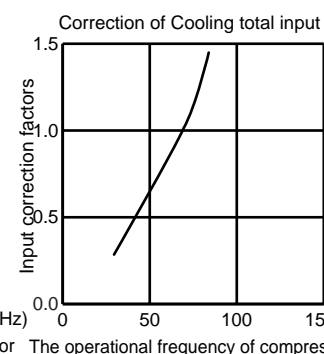

MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MCFZ-A12WV - [E1])

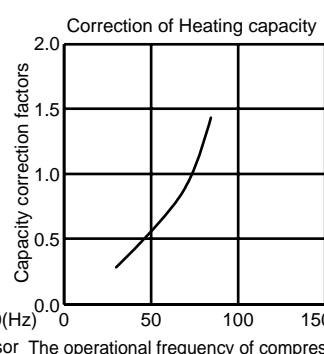

MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MCFZ-A12WV - [E1])

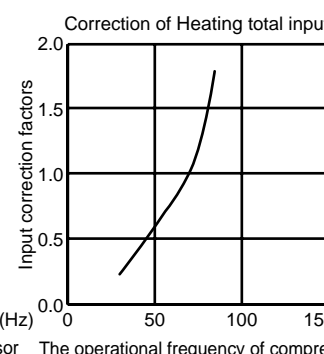

OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT

<How to operate fixed-frequency operation (Test run operation)>

1. Press the EMERGENCY OPERATION switch to COOL or HEAT mode (COOL : Press once, HEAT : Press twice).
2. Test run operation starts and continue to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (Operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press the EMERGENCY OPERATION switch or any button on remote controller.

NOTE : The unit of pressure has been changed to MPa on the international system of units (SI unit system).


The conversion factor is: **1(MPa [Gauge]) =10.2(kgf/cm² [Gauge])**

OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT COOL operation


- ① Both indoor and outdoor unit are under the same temperature/humidity condition.
- ② Air flow : High speed
- ③ Operational frequency : 57Hz(MUZ-A09YV, MUZ-A09YVH)
69Hz(MUZ-A12YV, MUZ-A12YVH)

| Dry-bulb temperature | Relative humidity(%) |
|----------------------|----------------------|
| 20 | 50 |
| 25 | 60 |
| 30 | 70 |


MUZ-A09YV - [E1]
MUZ-A09YVH - [E1]

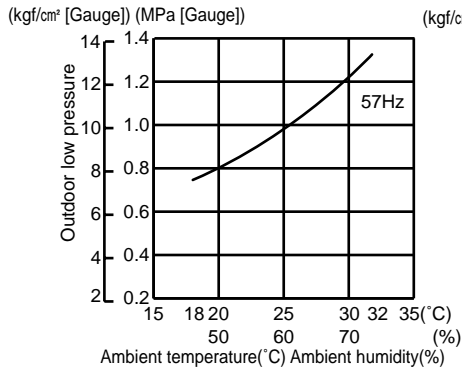


MUZ-A09YV - [E1]
MUZ-A09YVH - [E1]

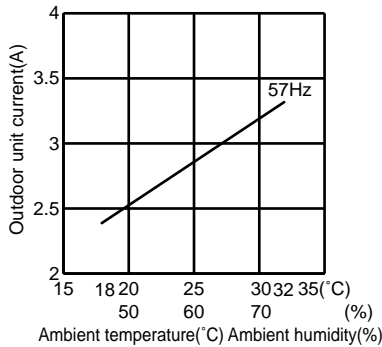


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MSZ-A12YV - [E1])

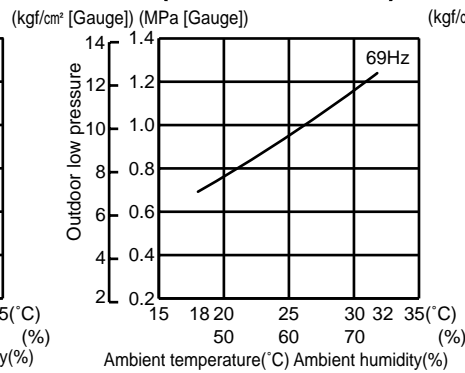


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MSZ-A12YV - [E1])

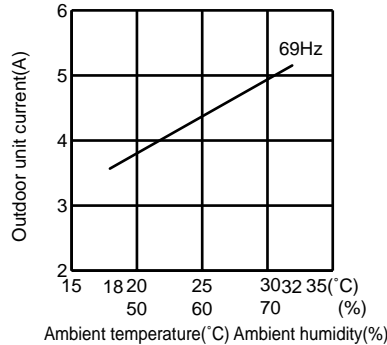

MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MCFZ-A12WV - [E1])

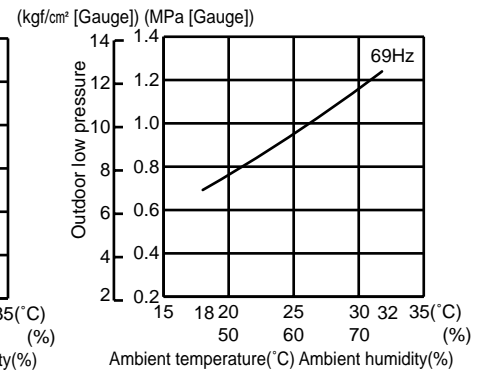


MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MCFZ-A12WV - [E1])

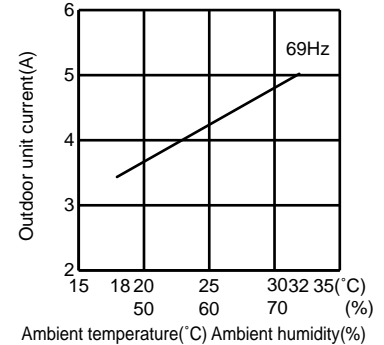


HEAT operation

- Condition indoor: Dry bulb temperature 20.0°C
Wet bulb temperature 14.5°C
Condition outdoor: Dry bulb temperature 2,7,15,20.0°C
Wet bulb temperature 1,6,12,14.5°C


MUZ-A09YV - [E1]
MUZ-A09YVH - [E1]

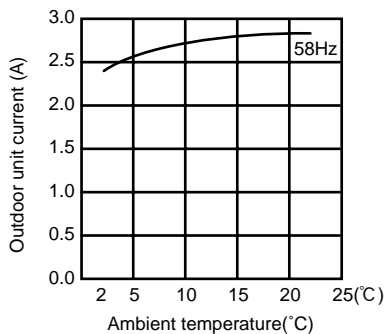

MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MSZ-A12YV - [E1])

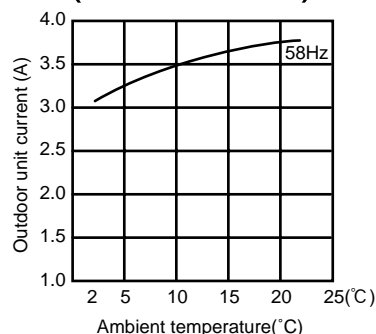

MUZ-A12YV - [E1]
MUZ-A12YVH - [E1]
(Indoor unit :
MCFZ-A12WV - [E1])

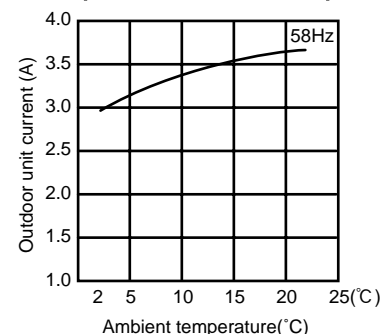

PERFORMANCE DATA COOL operation Rated frequency 57Hz
MSZ-A09YV -[E1] : MUZ-A09YV -[E1] MUZ-A09YVH -[E1]

CAPACITY:2.5(kW) SHF:0.79 INPUT:670(W)

| | | OUTDOOR DB(°C) | | | | | | | | | | | | | | | |
|---------------|---------------|----------------|------|------|-------|------|------|------|-------|------|------|------|-------|------|------|------|-------|
| INDOOR DB(°C) | INDOOR WB(°C) | 21 | | | | 25 | | | | 27 | | | | 30 | | | |
| | | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT |
| 21 | 18 | 2.94 | 1.79 | 0.61 | 536 | 2.81 | 1.72 | 0.61 | 563 | 2.70 | 1.65 | 0.61 | 590 | 2.60 | 1.59 | 0.61 | 616 |
| 21 | 20 | 3.06 | 1.50 | 0.49 | 563 | 2.94 | 1.44 | 0.49 | 596 | 2.85 | 1.40 | 0.49 | 610 | 2.75 | 1.35 | 0.49 | 637 |
| 22 | 18 | 2.94 | 1.91 | 0.65 | 536 | 2.81 | 1.83 | 0.65 | 563 | 2.70 | 1.76 | 0.65 | 590 | 2.60 | 1.69 | 0.65 | 616 |
| 22 | 20 | 3.06 | 1.62 | 0.53 | 563 | 2.94 | 1.56 | 0.53 | 596 | 2.85 | 1.51 | 0.53 | 610 | 2.75 | 1.46 | 0.53 | 637 |
| 22 | 22 | 3.19 | 1.31 | 0.41 | 583 | 3.08 | 1.26 | 0.41 | 620 | 3.00 | 1.23 | 0.41 | 637 | 2.88 | 1.18 | 0.41 | 663 |
| 23 | 18 | 2.94 | 2.03 | 0.69 | 536 | 2.81 | 1.94 | 0.69 | 563 | 2.70 | 1.86 | 0.69 | 590 | 2.60 | 1.79 | 0.69 | 616 |
| 23 | 20 | 3.06 | 1.75 | 0.57 | 563 | 2.94 | 1.67 | 0.57 | 596 | 2.85 | 1.62 | 0.57 | 610 | 2.75 | 1.57 | 0.57 | 637 |
| 23 | 22 | 3.19 | 1.43 | 0.45 | 583 | 3.08 | 1.38 | 0.45 | 620 | 3.00 | 1.35 | 0.45 | 637 | 2.88 | 1.29 | 0.45 | 663 |
| 24 | 18 | 2.94 | 2.14 | 0.73 | 536 | 2.81 | 2.05 | 0.73 | 563 | 2.70 | 1.97 | 0.73 | 590 | 2.60 | 1.90 | 0.73 | 616 |
| 24 | 20 | 3.06 | 1.87 | 0.61 | 563 | 2.94 | 1.79 | 0.61 | 596 | 2.85 | 1.74 | 0.61 | 610 | 2.75 | 1.68 | 0.61 | 637 |
| 24 | 22 | 3.19 | 1.56 | 0.49 | 583 | 3.08 | 1.51 | 0.49 | 620 | 3.00 | 1.47 | 0.49 | 637 | 2.88 | 1.41 | 0.49 | 663 |
| 24 | 24 | 3.35 | 1.24 | 0.37 | 610 | 3.23 | 1.19 | 0.37 | 643 | 3.15 | 1.17 | 0.37 | 663 | 3.05 | 1.13 | 0.37 | 697 |
| 25 | 18 | 2.94 | 2.26 | 0.77 | 536 | 2.81 | 2.17 | 0.77 | 563 | 2.70 | 2.08 | 0.77 | 590 | 2.60 | 2.00 | 0.77 | 616 |
| 25 | 20 | 3.06 | 1.99 | 0.65 | 563 | 2.94 | 1.91 | 0.65 | 596 | 2.85 | 1.85 | 0.65 | 610 | 2.75 | 1.79 | 0.65 | 637 |
| 25 | 22 | 3.19 | 1.69 | 0.53 | 583 | 3.08 | 1.63 | 0.53 | 620 | 3.00 | 1.59 | 0.53 | 637 | 2.88 | 1.52 | 0.53 | 663 |
| 25 | 24 | 3.35 | 1.37 | 0.41 | 610 | 3.23 | 1.32 | 0.41 | 643 | 3.15 | 1.29 | 0.41 | 663 | 3.05 | 1.25 | 0.41 | 697 |
| 26 | 18 | 2.94 | 2.38 | 0.81 | 536 | 2.81 | 2.28 | 0.81 | 563 | 2.70 | 2.19 | 0.81 | 590 | 2.60 | 2.11 | 0.81 | 616 |
| 26 | 20 | 3.06 | 2.11 | 0.69 | 563 | 2.94 | 2.03 | 0.69 | 596 | 2.85 | 1.97 | 0.69 | 610 | 2.75 | 1.90 | 0.69 | 637 |
| 26 | 22 | 3.19 | 1.82 | 0.57 | 583 | 3.08 | 1.75 | 0.57 | 620 | 3.00 | 1.71 | 0.57 | 637 | 2.88 | 1.64 | 0.57 | 663 |
| 26 | 24 | 3.35 | 1.51 | 0.45 | 610 | 3.23 | 1.45 | 0.45 | 643 | 3.15 | 1.42 | 0.45 | 663 | 3.05 | 1.37 | 0.45 | 697 |
| 26 | 26 | 3.45 | 1.14 | 0.33 | 643 | 3.35 | 1.11 | 0.33 | 677 | 3.30 | 1.09 | 0.33 | 697 | 3.20 | 1.06 | 0.33 | 717 |
| 27 | 18 | 2.94 | 2.50 | 0.85 | 536 | 2.81 | 2.39 | 0.85 | 563 | 2.70 | 2.30 | 0.85 | 590 | 2.60 | 2.21 | 0.85 | 616 |
| 27 | 20 | 3.06 | 2.24 | 0.73 | 563 | 2.94 | 2.14 | 0.73 | 596 | 2.85 | 2.08 | 0.73 | 610 | 2.75 | 2.01 | 0.73 | 637 |
| 27 | 22 | 3.19 | 1.94 | 0.61 | 583 | 3.08 | 1.88 | 0.61 | 620 | 3.00 | 1.83 | 0.61 | 637 | 2.88 | 1.75 | 0.61 | 663 |
| 27 | 24 | 3.35 | 1.64 | 0.49 | 610 | 3.23 | 1.58 | 0.49 | 643 | 3.15 | 1.54 | 0.49 | 663 | 3.05 | 1.49 | 0.49 | 697 |
| 27 | 26 | 3.45 | 1.28 | 0.37 | 643 | 3.35 | 1.24 | 0.37 | 677 | 3.30 | 1.22 | 0.37 | 697 | 3.20 | 1.18 | 0.37 | 717 |
| 28 | 18 | 2.94 | 2.61 | 0.89 | 536 | 2.81 | 2.50 | 0.89 | 563 | 2.70 | 2.40 | 0.89 | 590 | 2.60 | 2.31 | 0.89 | 616 |
| 28 | 20 | 3.06 | 2.36 | 0.77 | 563 | 2.94 | 2.26 | 0.77 | 596 | 2.85 | 2.19 | 0.77 | 610 | 2.75 | 2.12 | 0.77 | 637 |
| 28 | 22 | 3.19 | 2.07 | 0.65 | 583 | 3.08 | 2.00 | 0.65 | 620 | 3.00 | 1.95 | 0.65 | 637 | 2.88 | 1.87 | 0.65 | 663 |
| 28 | 24 | 3.35 | 1.78 | 0.53 | 610 | 3.23 | 1.71 | 0.53 | 643 | 3.15 | 1.67 | 0.53 | 663 | 3.05 | 1.62 | 0.53 | 697 |
| 28 | 26 | 3.45 | 1.41 | 0.41 | 643 | 3.35 | 1.37 | 0.41 | 677 | 3.30 | 1.35 | 0.41 | 697 | 3.20 | 1.31 | 0.41 | 717 |
| 29 | 18 | 2.94 | 2.73 | 0.93 | 536 | 2.81 | 2.62 | 0.93 | 563 | 2.70 | 2.51 | 0.93 | 590 | 2.60 | 2.42 | 0.93 | 616 |
| 29 | 20 | 3.06 | 2.48 | 0.81 | 563 | 2.94 | 2.38 | 0.81 | 596 | 2.85 | 2.31 | 0.81 | 610 | 2.75 | 2.23 | 0.81 | 637 |
| 29 | 22 | 3.19 | 2.20 | 0.69 | 583 | 3.08 | 2.12 | 0.69 | 620 | 3.00 | 2.07 | 0.69 | 637 | 2.88 | 1.98 | 0.69 | 663 |
| 29 | 24 | 3.35 | 1.91 | 0.57 | 610 | 3.23 | 1.84 | 0.57 | 643 | 3.15 | 1.80 | 0.57 | 663 | 3.05 | 1.74 | 0.57 | 697 |
| 29 | 26 | 3.45 | 1.55 | 0.45 | 643 | 3.35 | 1.51 | 0.45 | 677 | 3.30 | 1.49 | 0.45 | 697 | 3.20 | 1.44 | 0.45 | 717 |
| 30 | 18 | 2.94 | 2.85 | 0.97 | 536 | 2.81 | 2.73 | 0.97 | 563 | 2.70 | 2.62 | 0.97 | 590 | 2.60 | 2.52 | 0.97 | 616 |
| 30 | 20 | 3.06 | 2.60 | 0.85 | 563 | 2.94 | 2.50 | 0.85 | 596 | 2.85 | 2.42 | 0.85 | 610 | 2.75 | 2.34 | 0.85 | 637 |
| 30 | 22 | 3.19 | 2.33 | 0.73 | 583 | 3.08 | 2.24 | 0.73 | 620 | 3.00 | 2.19 | 0.73 | 637 | 2.88 | 2.10 | 0.73 | 663 |
| 30 | 24 | 3.35 | 2.04 | 0.61 | 610 | 3.23 | 1.97 | 0.61 | 643 | 3.15 | 1.92 | 0.61 | 663 | 3.05 | 1.86 | 0.61 | 697 |
| 30 | 26 | 3.45 | 1.69 | 0.49 | 643 | 3.35 | 1.64 | 0.49 | 677 | 3.30 | 1.62 | 0.49 | 697 | 3.20 | 1.57 | 0.49 | 717 |
| 31 | 18 | 2.94 | 2.97 | 1.01 | 536 | 2.81 | 2.84 | 1.01 | 563 | 2.70 | 2.73 | 1.01 | 590 | 2.60 | 2.63 | 1.01 | 616 |
| 31 | 20 | 3.06 | 2.73 | 0.89 | 563 | 2.94 | 2.61 | 0.89 | 596 | 2.85 | 2.54 | 0.89 | 610 | 2.75 | 2.45 | 0.89 | 637 |
| 31 | 22 | 3.19 | 2.45 | 0.77 | 583 | 3.08 | 2.37 | 0.77 | 620 | 3.00 | 2.31 | 0.77 | 637 | 2.88 | 2.21 | 0.77 | 663 |
| 31 | 24 | 3.35 | 2.18 | 0.65 | 610 | 3.23 | 2.10 | 0.65 | 643 | 3.15 | 2.05 | 0.65 | 663 | 3.05 | 1.98 | 0.65 | 697 |
| 31 | 26 | 3.45 | 1.83 | 0.53 | 643 | 3.35 | 1.78 | 0.53 | 677 | 3.30 | 1.75 | 0.53 | 697 | 3.20 | 1.70 | 0.53 | 717 |
| 32 | 18 | 2.94 | 3.08 | 1.05 | 536 | 2.81 | 2.95 | 1.05 | 563 | 2.70 | 2.84 | 1.05 | 590 | 2.60 | 2.73 | 1.05 | 616 |
| 32 | 20 | 3.06 | 2.85 | 0.93 | 563 | 2.94 | 2.73 | 0.93 | 596 | 2.85 | 2.65 | 0.93 | 610 | 2.75 | 2.56 | 0.93 | 637 |
| 32 | 22 | 3.19 | 2.58 | 0.81 | 583 | 3.08 | 2.49 | 0.81 | 620 | 3.00 | 2.43 | 0.81 | 637 | 2.88 | 2.33 | 0.81 | 663 |
| 32 | 24 | 3.35 | 2.31 | 0.69 | 610 | 3.23 | 2.23 | 0.69 | 643 | 3.15 | 2.17 | 0.69 | 663 | 3.05 | 2.10 | 0.69 | 697 |
| 32 | 26 | 3.45 | 1.97 | 0.57 | 643 | 3.35 | 1.91 | 0.57 | 677 | 3.30 | 1.88 | 0.57 | 697 | 3.20 | 1.82 | 0.57 | 717 |

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation Rated frequency 57Hz
MSZ-A09YV -[E1] : MUZ-A09YV -[E1] MUZ-A09YVH -[E1]

CAPACITY:2.5(kW) SHF:0.79 INPUT:670(W)

| | | OUTDOOR DB(°C) | | | | | | | | | | | |
|----------------|----------------|----------------|------|------|-------|------|------|------|-------|------|------|------|-------|
| INDOOR DB (°C) | INDOOR WB (°C) | 35 | | | | 40 | | | | 46 | | | |
| | | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT |
| 21 | 18 | 2.45 | 1.49 | 0.61 | 657 | 2.25 | 1.37 | 0.61 | 697 | 2.08 | 1.27 | 0.61 | 724 |
| 21 | 20 | 2.58 | 1.26 | 0.49 | 683 | 2.40 | 1.18 | 0.49 | 717 | 2.23 | 1.09 | 0.49 | 757 |
| 22 | 18 | 2.45 | 1.59 | 0.65 | 657 | 2.25 | 1.46 | 0.65 | 697 | 2.08 | 1.35 | 0.65 | 724 |
| 22 | 20 | 2.58 | 1.36 | 0.53 | 683 | 2.40 | 1.27 | 0.53 | 717 | 2.23 | 1.18 | 0.53 | 757 |
| 22 | 22 | 2.73 | 1.12 | 0.41 | 710 | 2.55 | 1.05 | 0.41 | 750 | 2.38 | 0.97 | 0.41 | 777 |
| 23 | 18 | 2.45 | 1.69 | 0.69 | 657 | 2.25 | 1.55 | 0.69 | 697 | 2.08 | 1.43 | 0.69 | 724 |
| 23 | 20 | 2.58 | 1.47 | 0.57 | 683 | 2.40 | 1.37 | 0.57 | 717 | 2.23 | 1.27 | 0.57 | 757 |
| 23 | 22 | 2.73 | 1.23 | 0.45 | 710 | 2.55 | 1.15 | 0.45 | 750 | 2.38 | 1.07 | 0.45 | 777 |
| 24 | 18 | 2.45 | 1.79 | 0.73 | 657 | 2.25 | 1.64 | 0.73 | 697 | 2.08 | 1.51 | 0.73 | 724 |
| 24 | 20 | 2.58 | 1.57 | 0.61 | 683 | 2.40 | 1.46 | 0.61 | 717 | 2.23 | 1.36 | 0.61 | 757 |
| 24 | 22 | 2.73 | 1.34 | 0.49 | 710 | 2.55 | 1.25 | 0.49 | 750 | 2.38 | 1.16 | 0.49 | 777 |
| 24 | 24 | 2.88 | 1.06 | 0.37 | 737 | 2.70 | 1.00 | 0.37 | 771 | 2.55 | 0.94 | 0.37 | 804 |
| 25 | 18 | 2.45 | 1.89 | 0.77 | 657 | 2.25 | 1.73 | 0.77 | 697 | 2.08 | 1.60 | 0.77 | 724 |
| 25 | 20 | 2.58 | 1.67 | 0.65 | 683 | 2.40 | 1.56 | 0.65 | 717 | 2.23 | 1.45 | 0.65 | 757 |
| 25 | 22 | 2.73 | 1.44 | 0.53 | 710 | 2.55 | 1.35 | 0.53 | 750 | 2.38 | 1.26 | 0.53 | 777 |
| 25 | 24 | 2.88 | 1.18 | 0.41 | 737 | 2.70 | 1.11 | 0.41 | 771 | 2.55 | 1.05 | 0.41 | 804 |
| 26 | 18 | 2.45 | 1.98 | 0.81 | 657 | 2.25 | 1.82 | 0.81 | 697 | 2.08 | 1.68 | 0.81 | 724 |
| 26 | 20 | 2.58 | 1.78 | 0.69 | 683 | 2.40 | 1.66 | 0.69 | 717 | 2.23 | 1.54 | 0.69 | 757 |
| 26 | 22 | 2.73 | 1.55 | 0.57 | 710 | 2.55 | 1.45 | 0.57 | 750 | 2.38 | 1.35 | 0.57 | 777 |
| 26 | 24 | 2.88 | 1.29 | 0.45 | 737 | 2.70 | 1.22 | 0.45 | 771 | 2.55 | 1.15 | 0.45 | 804 |
| 26 | 26 | 3.03 | 1.00 | 0.33 | 764 | 2.85 | 0.94 | 0.33 | 797 | 2.68 | 0.88 | 0.33 | 831 |
| 27 | 18 | 2.45 | 2.08 | 0.85 | 657 | 2.25 | 1.91 | 0.85 | 697 | 2.08 | 1.76 | 0.85 | 724 |
| 27 | 20 | 2.58 | 1.88 | 0.73 | 683 | 2.40 | 1.75 | 0.73 | 717 | 2.23 | 1.62 | 0.73 | 757 |
| 27 | 22 | 2.73 | 1.66 | 0.61 | 710 | 2.55 | 1.56 | 0.61 | 750 | 2.38 | 1.45 | 0.61 | 777 |
| 27 | 24 | 2.88 | 1.41 | 0.49 | 737 | 2.70 | 1.32 | 0.49 | 771 | 2.55 | 1.25 | 0.49 | 804 |
| 27 | 26 | 3.03 | 1.12 | 0.37 | 764 | 2.85 | 1.05 | 0.37 | 797 | 2.68 | 0.99 | 0.37 | 831 |
| 28 | 18 | 2.45 | 2.18 | 0.89 | 657 | 2.25 | 2.00 | 0.89 | 697 | 2.08 | 1.85 | 0.89 | 724 |
| 28 | 20 | 2.58 | 1.98 | 0.77 | 683 | 2.40 | 1.85 | 0.77 | 717 | 2.23 | 1.71 | 0.77 | 757 |
| 28 | 22 | 2.73 | 1.77 | 0.65 | 710 | 2.55 | 1.66 | 0.65 | 750 | 2.38 | 1.54 | 0.65 | 777 |
| 28 | 24 | 2.88 | 1.52 | 0.53 | 737 | 2.70 | 1.43 | 0.53 | 771 | 2.55 | 1.35 | 0.53 | 804 |
| 28 | 26 | 3.03 | 1.24 | 0.41 | 764 | 2.85 | 1.17 | 0.41 | 797 | 2.68 | 1.10 | 0.41 | 831 |
| 29 | 18 | 2.45 | 2.28 | 0.93 | 657 | 2.25 | 2.09 | 0.93 | 697 | 2.08 | 1.93 | 0.93 | 724 |
| 29 | 20 | 2.58 | 2.09 | 0.81 | 683 | 2.40 | 1.94 | 0.81 | 717 | 2.23 | 1.80 | 0.81 | 757 |
| 29 | 22 | 2.73 | 1.88 | 0.69 | 710 | 2.55 | 1.76 | 0.69 | 750 | 2.38 | 1.64 | 0.69 | 777 |
| 29 | 24 | 2.88 | 1.64 | 0.57 | 737 | 2.70 | 1.54 | 0.57 | 771 | 2.55 | 1.45 | 0.57 | 804 |
| 29 | 26 | 3.03 | 1.36 | 0.45 | 764 | 2.85 | 1.28 | 0.45 | 797 | 2.68 | 1.20 | 0.45 | 831 |
| 30 | 18 | 2.45 | 2.38 | 0.97 | 657 | 2.25 | 2.18 | 0.97 | 697 | 2.08 | 2.01 | 0.97 | 724 |
| 30 | 20 | 2.58 | 2.19 | 0.85 | 683 | 2.40 | 2.04 | 0.85 | 717 | 2.23 | 1.89 | 0.85 | 757 |
| 30 | 22 | 2.73 | 1.99 | 0.73 | 710 | 2.55 | 1.86 | 0.73 | 750 | 2.38 | 1.73 | 0.73 | 777 |
| 30 | 24 | 2.88 | 1.75 | 0.61 | 737 | 2.70 | 1.65 | 0.61 | 771 | 2.55 | 1.56 | 0.61 | 804 |
| 30 | 26 | 3.03 | 1.48 | 0.49 | 764 | 2.85 | 1.40 | 0.49 | 797 | 2.68 | 1.31 | 0.49 | 831 |
| 31 | 18 | 2.45 | 2.47 | 1.01 | 657 | 2.25 | 2.27 | 1.01 | 697 | 2.08 | 2.10 | 1.01 | 724 |
| 31 | 20 | 2.58 | 2.29 | 0.89 | 683 | 2.40 | 2.14 | 0.89 | 717 | 2.23 | 1.98 | 0.89 | 757 |
| 31 | 22 | 2.73 | 2.10 | 0.77 | 710 | 2.55 | 1.96 | 0.77 | 750 | 2.38 | 1.83 | 0.77 | 777 |
| 31 | 24 | 2.88 | 1.87 | 0.65 | 737 | 2.70 | 1.76 | 0.65 | 771 | 2.55 | 1.66 | 0.65 | 804 |
| 31 | 26 | 3.03 | 1.60 | 0.53 | 764 | 2.85 | 1.51 | 0.53 | 797 | 2.68 | 1.42 | 0.53 | 831 |
| 32 | 18 | 2.45 | 2.57 | 1.05 | 657 | 2.25 | 2.36 | 1.05 | 697 | 2.08 | 2.18 | 1.05 | 724 |
| 32 | 20 | 2.58 | 2.39 | 0.93 | 683 | 2.40 | 2.23 | 0.93 | 717 | 2.23 | 2.07 | 0.93 | 757 |
| 32 | 22 | 2.73 | 2.21 | 0.81 | 710 | 2.55 | 2.07 | 0.81 | 750 | 2.38 | 1.92 | 0.81 | 777 |
| 32 | 24 | 2.88 | 1.98 | 0.69 | 737 | 2.70 | 1.86 | 0.69 | 771 | 2.55 | 1.76 | 0.69 | 804 |
| 32 | 26 | 3.03 | 1.72 | 0.57 | 764 | 2.85 | 1.62 | 0.57 | 797 | 2.68 | 1.52 | 0.57 | 831 |

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation Rated frequency 69Hz

MSZ-A12YV -[E1] MCFZ-A12WV -[E1] : MUZ-A12YV -[E1] MUZ-A12YVH -[E1]

CAPACITY:3.5(kW) SHF:0.76 INPUT:1090(W)

| | | OUTDOOR DB(°C) | | | | | | | | | | | | | | | |
|---------------|---------------|----------------|------|------|-------|------|------|------|-------|------|------|------|-------|------|------|------|-------|
| INDOOR DB(°C) | INDOOR WB(°C) | 21 | | | | 25 | | | | 27 | | | | 30 | | | |
| | | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT |
| 21 | 18 | 4.11 | 2.39 | 0.58 | 872 | 3.94 | 2.28 | 0.58 | 916 | 3.78 | 2.19 | 0.58 | 959 | 3.64 | 2.11 | 0.58 | 1003 |
| 21 | 20 | 4.29 | 1.97 | 0.46 | 916 | 4.11 | 1.89 | 0.46 | 970 | 3.99 | 1.84 | 0.46 | 992 | 3.85 | 1.77 | 0.46 | 1036 |
| 22 | 18 | 4.11 | 2.55 | 0.62 | 872 | 3.94 | 2.44 | 0.62 | 916 | 3.78 | 2.34 | 0.62 | 959 | 3.64 | 2.26 | 0.62 | 1003 |
| 22 | 20 | 4.29 | 2.14 | 0.50 | 916 | 4.11 | 2.06 | 0.50 | 970 | 3.99 | 2.00 | 0.50 | 992 | 3.85 | 1.93 | 0.50 | 1036 |
| 22 | 22 | 4.46 | 1.70 | 0.38 | 948 | 4.31 | 1.64 | 0.38 | 1008 | 4.20 | 1.60 | 0.38 | 1036 | 4.03 | 1.53 | 0.38 | 1079 |
| 23 | 18 | 4.11 | 2.71 | 0.66 | 872 | 3.94 | 2.60 | 0.66 | 916 | 3.78 | 2.49 | 0.66 | 959 | 3.64 | 2.40 | 0.66 | 1003 |
| 23 | 20 | 4.29 | 2.32 | 0.54 | 916 | 4.11 | 2.22 | 0.54 | 970 | 3.99 | 2.15 | 0.54 | 992 | 3.85 | 2.08 | 0.54 | 1036 |
| 23 | 22 | 4.46 | 1.87 | 0.42 | 948 | 4.31 | 1.81 | 0.42 | 1008 | 4.20 | 1.76 | 0.42 | 1036 | 4.03 | 1.69 | 0.42 | 1079 |
| 24 | 18 | 4.11 | 2.88 | 0.70 | 872 | 3.94 | 2.76 | 0.70 | 916 | 3.78 | 2.65 | 0.70 | 959 | 3.64 | 2.55 | 0.70 | 1003 |
| 24 | 20 | 4.29 | 2.49 | 0.58 | 916 | 4.11 | 2.39 | 0.58 | 970 | 3.99 | 2.31 | 0.58 | 992 | 3.85 | 2.23 | 0.58 | 1036 |
| 24 | 22 | 4.46 | 2.05 | 0.46 | 948 | 4.31 | 1.98 | 0.46 | 1008 | 4.20 | 1.93 | 0.46 | 1036 | 4.03 | 1.85 | 0.46 | 1079 |
| 24 | 24 | 4.69 | 1.59 | 0.34 | 992 | 4.52 | 1.54 | 0.34 | 1046 | 4.41 | 1.50 | 0.34 | 1079 | 4.27 | 1.45 | 0.34 | 1134 |
| 25 | 18 | 4.11 | 3.04 | 0.74 | 872 | 3.94 | 2.91 | 0.74 | 916 | 3.78 | 2.80 | 0.74 | 959 | 3.64 | 2.69 | 0.74 | 1003 |
| 25 | 20 | 4.29 | 2.66 | 0.62 | 916 | 4.11 | 2.55 | 0.62 | 970 | 3.99 | 2.47 | 0.62 | 992 | 3.85 | 2.39 | 0.62 | 1036 |
| 25 | 22 | 4.46 | 2.23 | 0.50 | 948 | 4.31 | 2.15 | 0.50 | 1008 | 4.20 | 2.10 | 0.50 | 1036 | 4.03 | 2.01 | 0.50 | 1079 |
| 25 | 24 | 4.69 | 1.78 | 0.38 | 992 | 4.52 | 1.72 | 0.38 | 1046 | 4.41 | 1.68 | 0.38 | 1079 | 4.27 | 1.62 | 0.38 | 1134 |
| 26 | 18 | 4.11 | 3.21 | 0.78 | 872 | 3.94 | 3.07 | 0.78 | 916 | 3.78 | 2.95 | 0.78 | 959 | 3.64 | 2.84 | 0.78 | 1003 |
| 26 | 20 | 4.29 | 2.83 | 0.66 | 916 | 4.11 | 2.71 | 0.66 | 970 | 3.99 | 2.63 | 0.66 | 992 | 3.85 | 2.54 | 0.66 | 1036 |
| 26 | 22 | 4.46 | 2.41 | 0.54 | 948 | 4.31 | 2.32 | 0.54 | 1008 | 4.20 | 2.27 | 0.54 | 1036 | 4.03 | 2.17 | 0.54 | 1079 |
| 26 | 24 | 4.69 | 1.97 | 0.42 | 992 | 4.52 | 1.90 | 0.42 | 1046 | 4.41 | 1.85 | 0.42 | 1079 | 4.27 | 1.79 | 0.42 | 1134 |
| 26 | 26 | 4.83 | 1.45 | 0.30 | 1046 | 4.69 | 1.41 | 0.30 | 1101 | 4.62 | 1.39 | 0.30 | 1134 | 4.48 | 1.34 | 0.30 | 1166 |
| 27 | 18 | 4.11 | 3.37 | 0.82 | 872 | 3.94 | 3.23 | 0.82 | 916 | 3.78 | 3.10 | 0.82 | 959 | 3.64 | 2.98 | 0.82 | 1003 |
| 27 | 20 | 4.29 | 3.00 | 0.70 | 916 | 4.11 | 2.88 | 0.70 | 970 | 3.99 | 2.79 | 0.70 | 992 | 3.85 | 2.70 | 0.70 | 1036 |
| 27 | 22 | 4.46 | 2.59 | 0.58 | 948 | 4.31 | 2.50 | 0.58 | 1008 | 4.20 | 2.44 | 0.58 | 1036 | 4.03 | 2.33 | 0.58 | 1079 |
| 27 | 24 | 4.69 | 2.16 | 0.46 | 992 | 4.52 | 2.08 | 0.46 | 1046 | 4.41 | 2.03 | 0.46 | 1079 | 4.27 | 1.96 | 0.46 | 1134 |
| 27 | 26 | 4.83 | 1.64 | 0.34 | 1046 | 4.69 | 1.59 | 0.34 | 1101 | 4.62 | 1.57 | 0.34 | 1134 | 4.48 | 1.52 | 0.34 | 1166 |
| 28 | 18 | 4.11 | 3.54 | 0.86 | 872 | 3.94 | 3.39 | 0.86 | 916 | 3.78 | 3.25 | 0.86 | 959 | 3.64 | 3.13 | 0.86 | 1003 |
| 28 | 20 | 4.29 | 3.17 | 0.74 | 916 | 4.11 | 3.04 | 0.74 | 970 | 3.99 | 2.95 | 0.74 | 992 | 3.85 | 2.85 | 0.74 | 1036 |
| 28 | 22 | 4.46 | 2.77 | 0.62 | 948 | 4.31 | 2.67 | 0.62 | 1008 | 4.20 | 2.60 | 0.62 | 1036 | 4.03 | 2.50 | 0.62 | 1079 |
| 28 | 24 | 4.69 | 2.35 | 0.50 | 992 | 4.52 | 2.26 | 0.50 | 1046 | 4.41 | 2.21 | 0.50 | 1079 | 4.27 | 2.14 | 0.50 | 1134 |
| 28 | 26 | 4.83 | 1.84 | 0.38 | 1046 | 4.69 | 1.78 | 0.38 | 1101 | 4.62 | 1.76 | 0.38 | 1134 | 4.48 | 1.70 | 0.38 | 1166 |
| 29 | 18 | 4.11 | 3.70 | 0.90 | 872 | 3.94 | 3.54 | 0.90 | 916 | 3.78 | 3.40 | 0.90 | 959 | 3.64 | 3.28 | 0.90 | 1003 |
| 29 | 20 | 4.29 | 3.34 | 0.78 | 916 | 4.11 | 3.21 | 0.78 | 970 | 3.99 | 3.11 | 0.78 | 992 | 3.85 | 3.00 | 0.78 | 1036 |
| 29 | 22 | 4.46 | 2.95 | 0.66 | 948 | 4.31 | 2.84 | 0.66 | 1008 | 4.20 | 2.77 | 0.66 | 1036 | 4.03 | 2.66 | 0.66 | 1079 |
| 29 | 24 | 4.69 | 2.53 | 0.54 | 992 | 4.52 | 2.44 | 0.54 | 1046 | 4.41 | 2.38 | 0.54 | 1079 | 4.27 | 2.31 | 0.54 | 1134 |
| 29 | 26 | 4.83 | 2.03 | 0.42 | 1046 | 4.69 | 1.97 | 0.42 | 1101 | 4.62 | 1.94 | 0.42 | 1134 | 4.48 | 1.88 | 0.42 | 1166 |
| 30 | 18 | 4.11 | 3.87 | 0.94 | 872 | 3.94 | 3.70 | 0.94 | 916 | 3.78 | 3.55 | 0.94 | 959 | 3.64 | 3.42 | 0.94 | 1003 |
| 30 | 20 | 4.29 | 3.52 | 0.82 | 916 | 4.11 | 3.37 | 0.82 | 970 | 3.99 | 3.27 | 0.82 | 992 | 3.85 | 3.16 | 0.82 | 1036 |
| 30 | 22 | 4.46 | 3.12 | 0.70 | 948 | 4.31 | 3.01 | 0.70 | 1008 | 4.20 | 2.94 | 0.70 | 1036 | 4.03 | 2.82 | 0.70 | 1079 |
| 30 | 24 | 4.69 | 2.72 | 0.58 | 992 | 4.52 | 2.62 | 0.58 | 1046 | 4.41 | 2.56 | 0.58 | 1079 | 4.27 | 2.48 | 0.58 | 1134 |
| 30 | 26 | 4.83 | 2.22 | 0.46 | 1046 | 4.69 | 2.16 | 0.46 | 1101 | 4.62 | 2.13 | 0.46 | 1134 | 4.48 | 2.06 | 0.46 | 1166 |
| 31 | 18 | 4.11 | 4.03 | 0.98 | 872 | 3.94 | 3.86 | 0.98 | 916 | 3.78 | 3.70 | 0.98 | 959 | 3.64 | 3.57 | 0.98 | 1003 |
| 31 | 20 | 4.29 | 3.69 | 0.86 | 916 | 4.11 | 3.54 | 0.86 | 970 | 3.99 | 3.43 | 0.86 | 992 | 3.85 | 3.31 | 0.86 | 1036 |
| 31 | 22 | 4.46 | 3.30 | 0.74 | 948 | 4.31 | 3.19 | 0.74 | 1008 | 4.20 | 3.11 | 0.74 | 1036 | 4.03 | 2.98 | 0.74 | 1079 |
| 31 | 24 | 4.69 | 2.91 | 0.62 | 992 | 4.52 | 2.80 | 0.62 | 1046 | 4.41 | 2.73 | 0.62 | 1079 | 4.27 | 2.65 | 0.62 | 1134 |
| 31 | 26 | 4.83 | 2.42 | 0.50 | 1046 | 4.69 | 2.35 | 0.50 | 1101 | 4.62 | 2.31 | 0.50 | 1134 | 4.48 | 2.24 | 0.50 | 1166 |
| 32 | 18 | 4.11 | 4.19 | 1.02 | 872 | 3.94 | 4.02 | 1.02 | 916 | 3.78 | 3.86 | 1.02 | 959 | 3.64 | 3.71 | 1.02 | 1003 |
| 32 | 20 | 4.29 | 3.86 | 0.90 | 916 | 4.11 | 3.70 | 0.90 | 970 | 3.99 | 3.59 | 0.90 | 992 | 3.85 | 3.47 | 0.90 | 1036 |
| 32 | 22 | 4.46 | 3.48 | 0.78 | 948 | 4.31 | 3.36 | 0.78 | 1008 | 4.20 | 3.28 | 0.78 | 1036 | 4.03 | 3.14 | 0.78 | 1079 |
| 32 | 24 | 4.69 | 3.10 | 0.66 | 992 | 4.52 | 2.98 | 0.66 | 1046 | 4.41 | 2.91 | 0.66 | 1079 | 4.27 | 2.82 | 0.66 | 1134 |
| 32 | 26 | 4.83 | 2.61 | 0.54 | 1046 | 4.69 | 2.53 | 0.54 | 1101 | 4.62 | 2.49 | 0.54 | 1134 | 4.48 | 2.42 | 0.54 | 1166 |

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation Rated frequency 69Hz

MSZ-A12YV -[E1] MCFZ-A12WV -[E1] : MUZ-A12YV -[E1] MUZ-A12YVH -[E1]

CAPACITY:3.5(kW) SHF:0.76 INPUT:1090(W)

| | | OUTDOOR DB(°C) | | | | | | | | | | | |
|----------------|----------------|----------------|------|------|-------|------|------|------|-------|------|------|------|-------|
| INDOOR DB (°C) | INDOOR WB (°C) | 35 | | | | 40 | | | | 46 | | | |
| | | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT | Q | SHC | SHF | INPUT |
| 21 | 18 | 3.43 | 1.99 | 0.58 | 1068 | 3.15 | 1.83 | 0.58 | 1134 | 2.91 | 1.68 | 0.58 | 1177 |
| 21 | 20 | 3.61 | 1.66 | 0.46 | 1112 | 3.36 | 1.55 | 0.46 | 1166 | 3.12 | 1.43 | 0.46 | 1232 |
| 22 | 18 | 3.43 | 2.13 | 0.62 | 1068 | 3.15 | 1.95 | 0.62 | 1134 | 2.91 | 1.80 | 0.62 | 1177 |
| 22 | 20 | 3.61 | 1.80 | 0.50 | 1112 | 3.36 | 1.68 | 0.50 | 1166 | 3.12 | 1.56 | 0.50 | 1232 |
| 22 | 22 | 3.82 | 1.45 | 0.38 | 1155 | 3.57 | 1.36 | 0.38 | 1221 | 3.33 | 1.26 | 0.38 | 1264 |
| 23 | 18 | 3.43 | 2.26 | 0.66 | 1068 | 3.15 | 2.08 | 0.66 | 1134 | 2.91 | 1.92 | 0.66 | 1177 |
| 23 | 20 | 3.61 | 1.95 | 0.54 | 1112 | 3.36 | 1.81 | 0.54 | 1166 | 3.12 | 1.68 | 0.54 | 1232 |
| 23 | 22 | 3.82 | 1.60 | 0.42 | 1155 | 3.57 | 1.50 | 0.42 | 1221 | 3.33 | 1.40 | 0.42 | 1264 |
| 24 | 18 | 3.43 | 2.40 | 0.70 | 1068 | 3.15 | 2.21 | 0.70 | 1134 | 2.91 | 2.03 | 0.70 | 1177 |
| 24 | 20 | 3.61 | 2.09 | 0.58 | 1112 | 3.36 | 1.95 | 0.58 | 1166 | 3.12 | 1.81 | 0.58 | 1232 |
| 24 | 22 | 3.82 | 1.75 | 0.46 | 1155 | 3.57 | 1.64 | 0.46 | 1221 | 3.33 | 1.53 | 0.46 | 1264 |
| 24 | 24 | 4.03 | 1.37 | 0.34 | 1199 | 3.78 | 1.29 | 0.34 | 1254 | 3.57 | 1.21 | 0.34 | 1308 |
| 25 | 18 | 3.43 | 2.54 | 0.74 | 1068 | 3.15 | 2.33 | 0.74 | 1134 | 2.91 | 2.15 | 0.74 | 1177 |
| 25 | 20 | 3.61 | 2.24 | 0.62 | 1112 | 3.36 | 2.08 | 0.62 | 1166 | 3.12 | 1.93 | 0.62 | 1232 |
| 25 | 22 | 3.82 | 1.91 | 0.50 | 1155 | 3.57 | 1.79 | 0.50 | 1221 | 3.33 | 1.66 | 0.50 | 1264 |
| 25 | 24 | 4.03 | 1.53 | 0.38 | 1199 | 3.78 | 1.44 | 0.38 | 1254 | 3.57 | 1.36 | 0.38 | 1308 |
| 26 | 18 | 3.43 | 2.68 | 0.78 | 1068 | 3.15 | 2.46 | 0.78 | 1134 | 2.91 | 2.27 | 0.78 | 1177 |
| 26 | 20 | 3.61 | 2.38 | 0.66 | 1112 | 3.36 | 2.22 | 0.66 | 1166 | 3.12 | 2.06 | 0.66 | 1232 |
| 26 | 22 | 3.82 | 2.06 | 0.54 | 1155 | 3.57 | 1.93 | 0.54 | 1221 | 3.33 | 1.80 | 0.54 | 1264 |
| 26 | 24 | 4.03 | 1.69 | 0.42 | 1199 | 3.78 | 1.59 | 0.42 | 1254 | 3.57 | 1.50 | 0.42 | 1308 |
| 26 | 26 | 4.24 | 1.27 | 0.30 | 1243 | 3.99 | 1.20 | 0.30 | 1297 | 3.75 | 1.12 | 0.30 | 1352 |
| 27 | 18 | 3.43 | 2.81 | 0.82 | 1068 | 3.15 | 2.58 | 0.82 | 1134 | 2.91 | 2.38 | 0.82 | 1177 |
| 27 | 20 | 3.61 | 2.52 | 0.70 | 1112 | 3.36 | 2.35 | 0.70 | 1166 | 3.12 | 2.18 | 0.70 | 1232 |
| 27 | 22 | 3.82 | 2.21 | 0.58 | 1155 | 3.57 | 2.07 | 0.58 | 1221 | 3.33 | 1.93 | 0.58 | 1264 |
| 27 | 24 | 4.03 | 1.85 | 0.46 | 1199 | 3.78 | 1.74 | 0.46 | 1254 | 3.57 | 1.64 | 0.46 | 1308 |
| 27 | 26 | 4.24 | 1.44 | 0.34 | 1243 | 3.99 | 1.36 | 0.34 | 1297 | 3.75 | 1.27 | 0.34 | 1352 |
| 28 | 18 | 3.43 | 2.95 | 0.86 | 1068 | 3.15 | 2.71 | 0.86 | 1134 | 2.91 | 2.50 | 0.86 | 1177 |
| 28 | 20 | 3.61 | 2.67 | 0.74 | 1112 | 3.36 | 2.49 | 0.74 | 1166 | 3.12 | 2.31 | 0.74 | 1232 |
| 28 | 22 | 3.82 | 2.37 | 0.62 | 1155 | 3.57 | 2.21 | 0.62 | 1221 | 3.33 | 2.06 | 0.62 | 1264 |
| 28 | 24 | 4.03 | 2.01 | 0.50 | 1199 | 3.78 | 1.89 | 0.50 | 1254 | 3.57 | 1.79 | 0.50 | 1308 |
| 28 | 26 | 4.24 | 1.61 | 0.38 | 1243 | 3.99 | 1.52 | 0.38 | 1297 | 3.75 | 1.42 | 0.38 | 1352 |
| 29 | 18 | 3.43 | 3.09 | 0.90 | 1068 | 3.15 | 2.84 | 0.90 | 1134 | 2.91 | 2.61 | 0.90 | 1177 |
| 29 | 20 | 3.61 | 2.81 | 0.78 | 1112 | 3.36 | 2.62 | 0.78 | 1166 | 3.12 | 2.43 | 0.78 | 1232 |
| 29 | 22 | 3.82 | 2.52 | 0.66 | 1155 | 3.57 | 2.36 | 0.66 | 1221 | 3.33 | 2.19 | 0.66 | 1264 |
| 29 | 24 | 4.03 | 2.17 | 0.54 | 1199 | 3.78 | 2.04 | 0.54 | 1254 | 3.57 | 1.93 | 0.54 | 1308 |
| 29 | 26 | 4.24 | 1.78 | 0.42 | 1243 | 3.99 | 1.68 | 0.42 | 1297 | 3.75 | 1.57 | 0.42 | 1352 |
| 30 | 18 | 3.43 | 3.22 | 0.94 | 1068 | 3.15 | 2.96 | 0.94 | 1134 | 2.91 | 2.73 | 0.94 | 1177 |
| 30 | 20 | 3.61 | 2.96 | 0.82 | 1112 | 3.36 | 2.76 | 0.82 | 1166 | 3.12 | 2.55 | 0.82 | 1232 |
| 30 | 22 | 3.82 | 2.67 | 0.70 | 1155 | 3.57 | 2.50 | 0.70 | 1221 | 3.33 | 2.33 | 0.70 | 1264 |
| 30 | 24 | 4.03 | 2.33 | 0.58 | 1199 | 3.78 | 2.19 | 0.58 | 1254 | 3.57 | 2.07 | 0.58 | 1308 |
| 30 | 26 | 4.24 | 1.95 | 0.46 | 1243 | 3.99 | 1.84 | 0.46 | 1297 | 3.75 | 1.72 | 0.46 | 1352 |
| 31 | 18 | 3.43 | 3.36 | 0.98 | 1068 | 3.15 | 3.09 | 0.98 | 1134 | 2.91 | 2.85 | 0.98 | 1177 |
| 31 | 20 | 3.61 | 3.10 | 0.86 | 1112 | 3.36 | 2.89 | 0.86 | 1166 | 3.12 | 2.68 | 0.86 | 1232 |
| 31 | 22 | 3.82 | 2.82 | 0.74 | 1155 | 3.57 | 2.64 | 0.74 | 1221 | 3.33 | 2.46 | 0.74 | 1264 |
| 31 | 24 | 4.03 | 2.50 | 0.62 | 1199 | 3.78 | 2.34 | 0.62 | 1254 | 3.57 | 2.21 | 0.62 | 1308 |
| 31 | 26 | 4.24 | 2.12 | 0.50 | 1243 | 3.99 | 2.00 | 0.50 | 1297 | 3.75 | 1.87 | 0.50 | 1352 |
| 32 | 18 | 3.43 | 3.50 | 1.02 | 1068 | 3.15 | 3.21 | 1.02 | 1134 | 2.91 | 2.96 | 1.02 | 1177 |
| 32 | 20 | 3.61 | 3.24 | 0.90 | 1112 | 3.36 | 3.02 | 0.90 | 1166 | 3.12 | 2.80 | 0.90 | 1232 |
| 32 | 22 | 3.82 | 2.98 | 0.78 | 1155 | 3.57 | 2.78 | 0.78 | 1221 | 3.33 | 2.59 | 0.78 | 1264 |
| 32 | 24 | 4.03 | 2.66 | 0.66 | 1199 | 3.78 | 2.49 | 0.66 | 1254 | 3.57 | 2.36 | 0.66 | 1308 |
| 32 | 26 | 4.24 | 2.29 | 0.54 | 1243 | 3.99 | 2.15 | 0.54 | 1297 | 3.75 | 2.02 | 0.54 | 1352 |

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA HEAT operation

MSZ-A09YV -[E1] : MUZ-A09YV -[E1] MUZ-A09YVH -[E1] Rated frequency 75Hz

CAPACITY:3.2(kW) INPUT:840(W)

| INDOOR DB(°C) | OUTDOOR WB(°C) | | | | | | | | | | | | | |
|------------------|----------------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|
| | -10 | | -5 | | 0 | | 5 | | 10 | | 15 | | 20 | |
| | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT |
| 15 | 2.02 | 546 | 2.43 | 655 | 2.85 | 739 | 3.26 | 798 | 3.68 | 848 | 4.06 | 874 | 4.48 | 890 |
| 21 | 1.92 | 588 | 2.30 | 697 | 2.72 | 773 | 3.10 | 832 | 3.52 | 874 | 3.90 | 899 | 4.30 | 932 |
| 26 | 1.73 | 630 | 2.14 | 739 | 2.53 | 815 | 2.94 | 874 | 3.36 | 916 | 3.74 | 941 | 4.16 | 966 |

NOTE Q:Total capacity (kW) INPUT:Total power input (W) DB : Dry-bulb temperature WB : Wet-bulb temperature

MSZ-A12YV -[E1] : MUZ-A12YV -[E1] MUZ-A12YVH -[E1] Rated frequency 76Hz

CAPACITY:4.0(kW) INPUT:1080(W)

| INDOOR DB(°C) | OUTDOOR WB(°C) | | | | | | | | | | | | | |
|------------------|----------------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|
| | -10 | | -5 | | 0 | | 5 | | 10 | | 15 | | 20 | |
| | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT |
| 15 | 2.52 | 702 | 3.04 | 842 | 3.56 | 950 | 4.08 | 1026 | 4.60 | 1091 | 5.08 | 1123 | 5.60 | 1145 |
| 21 | 2.40 | 756 | 2.88 | 896 | 3.40 | 994 | 3.88 | 1069 | 4.40 | 1123 | 4.88 | 1156 | 5.38 | 1199 |
| 26 | 2.16 | 810 | 2.68 | 950 | 3.16 | 1048 | 3.68 | 1123 | 4.20 | 1177 | 4.68 | 1210 | 5.20 | 1242 |

NOTE Q:Total capacity (kW) INPUT:Total power input (W) DB : Dry-bulb temperature WB : Wet-bulb temperature

MCFZ-A12WV -[E1] : MUZ-A12YV -[E1] MUZ-A12YVH -[E1] Rated frequency 76Hz

CAPACITY:3.9(kW) INPUT:1080(W)

| INDOOR DB(°C) | OUTDOOR WB(°C) | | | | | | | | | | | | | |
|------------------|----------------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|
| | -10 | | -5 | | 0 | | 5 | | 10 | | 15 | | 20 | |
| | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT | Q | INPUT |
| 15 | 2.46 | 702 | 2.96 | 842 | 3.47 | 950 | 3.98 | 1026 | 4.49 | 1091 | 4.95 | 1123 | 5.46 | 1145 |
| 21 | 2.34 | 756 | 2.81 | 896 | 3.32 | 994 | 3.78 | 1069 | 4.29 | 1123 | 4.76 | 1156 | 5.25 | 1199 |
| 26 | 2.11 | 810 | 2.61 | 950 | 3.08 | 1048 | 3.59 | 1123 | 4.10 | 1177 | 4.56 | 1210 | 5.07 | 1242 |

NOTE Q:Total capacity (kW) INPUT:Total power input (W) DB : Dry-bulb temperature WB : Wet-bulb temperature

9

ACTUATOR CONTROL


MUZ-A09YV -[E1] MUZ-A12YV -[E1]
MUZ-A09YVH -[E1] MUZ-A12YVH -[E1]

9-1. Outdoor fan motor control

The AC fan motor turns ON/OFF, interlocking with the compressor.

[ON] The AC fan motor turns ON 5 seconds before the compressor starts up.


[OFF] The AC fan motor turns OFF 15 seconds after the compressor has stopped running.

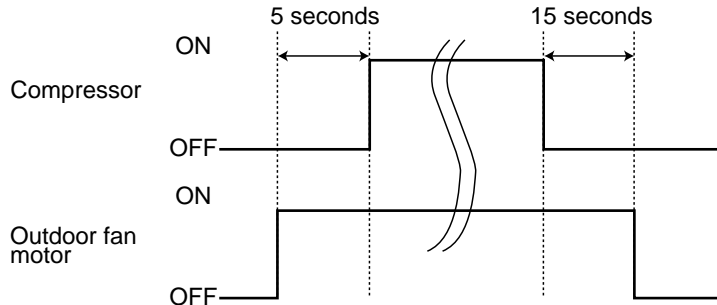

9-2. R.V. coil control

Heating ON
 Cooling OFF
 Dry OFF

NOTE: The 4-way valve reverses for 5 seconds right before start-up of the compressor.

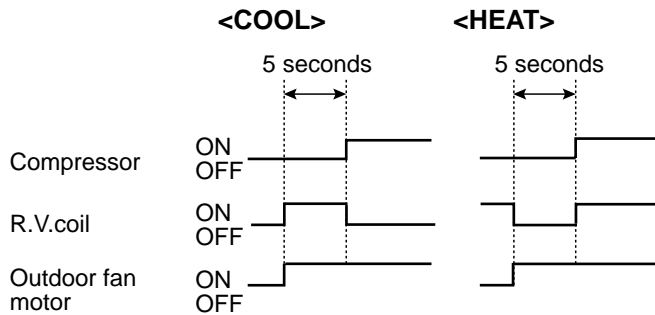

9-3. Relation between main sensor and actuator

| Sensor | Purpose | Actuator | | | | | |
|------------------------------------|---|------------|-----|-------------------|----------|------------------|----------------|
| | | Compressor | LEV | Outdoor fan motor | R.V.coil | Indoor fan motor | Defrost heater |
| Discharge temperature thermistor | Protection | ○ | ○ | | | | |
| Indoor coil temperature thermistor | Cooling : Coil frost prevention | ○ | | | | | |
| | Heating : High pressure protection | ○ | ○ | | | | |
| Defrost thermistor | Cooling : High pressure protection | ○ | ○ | | | | |
| | Heating : Defrosting | ○ | ○ | ○ | ○ | ○ | |
| Fin temperature thermistor | Protection | ○ | | ○ | | | |
| Ambient temperature thermistor | Cooling : Low ambient temperature operation | ○ | ○ | ○ | | | |
| | Heating : Defrosting (Heater) | | | | | | ○ |

10

SERVICE FUNCTIONS

MUZ-A09YV -^[E1] **MUZ-A12YV** -^[E1]
MUZ-A09YVH -^[E1] **MUZ-A12YVH** -^[E1]

CHANGE IN DEFROST SETTING

<JS> When the JS wire of the outdoor Inverter P.C. board is cut/ soldered, the defrost finish temperature is changed.
 (Refer to page 32.)

| Jumper wire | | Defrost finish temperature (Initial setting) | Model |
|-------------|---------------|---|--|
| JS | none (cut) | 8°C | MUZ-A09YVH - ^[E1] (Serial number 4000531~) MUZ-A12YVH - ^[E1] (Serial number 4000211~) |
| | soldered | 5°C | MUZ-A09YV - ^[E1] MUZ-A12YV - ^[E1] MUZ-A09YVH - ^[E1] (Serial number ~4000530) MUZ-A12YVH - ^[E1] (Serial number ~4000210) |

11

TROUBLESHOOTING

MUZ-A09YV -^[E1] **MUZ-A12YV** -^[E1]
MUZ-A09YVH -^[E1] **MUZ-A12YVH** -^[E1]


11-1. Cautions on troubleshooting

1. Before troubleshooting, check the following:

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for mis-wiring.

2. Take care the following during servicing.


- 1) Before servicing the air conditioner, be sure to first turn off the remote controller to stop the main unit, and then after confirming the horizontal vane is closed, turn off the breaker and / or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electrical parts, be careful to the residual voltage of smoothing capacitor.
- 4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.

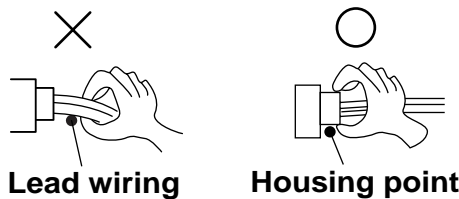

3. Troubleshooting procedure

- 1) First, check if the OPERATION INDICATOR lamp on the indoor unit is flashing on and off to indicate an abnormality. To make sure, check how many times the abnormality indication is flashing on and off before starting service work.
- 2) Before servicing check that the connector and terminal are connected properly.
- 3) If the electronic control P.C. board is supposed to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
- 4) When troubleshooting, refer to the flow chart on page 23 and check table on page 24.


11-2. Instruction of troubleshooting

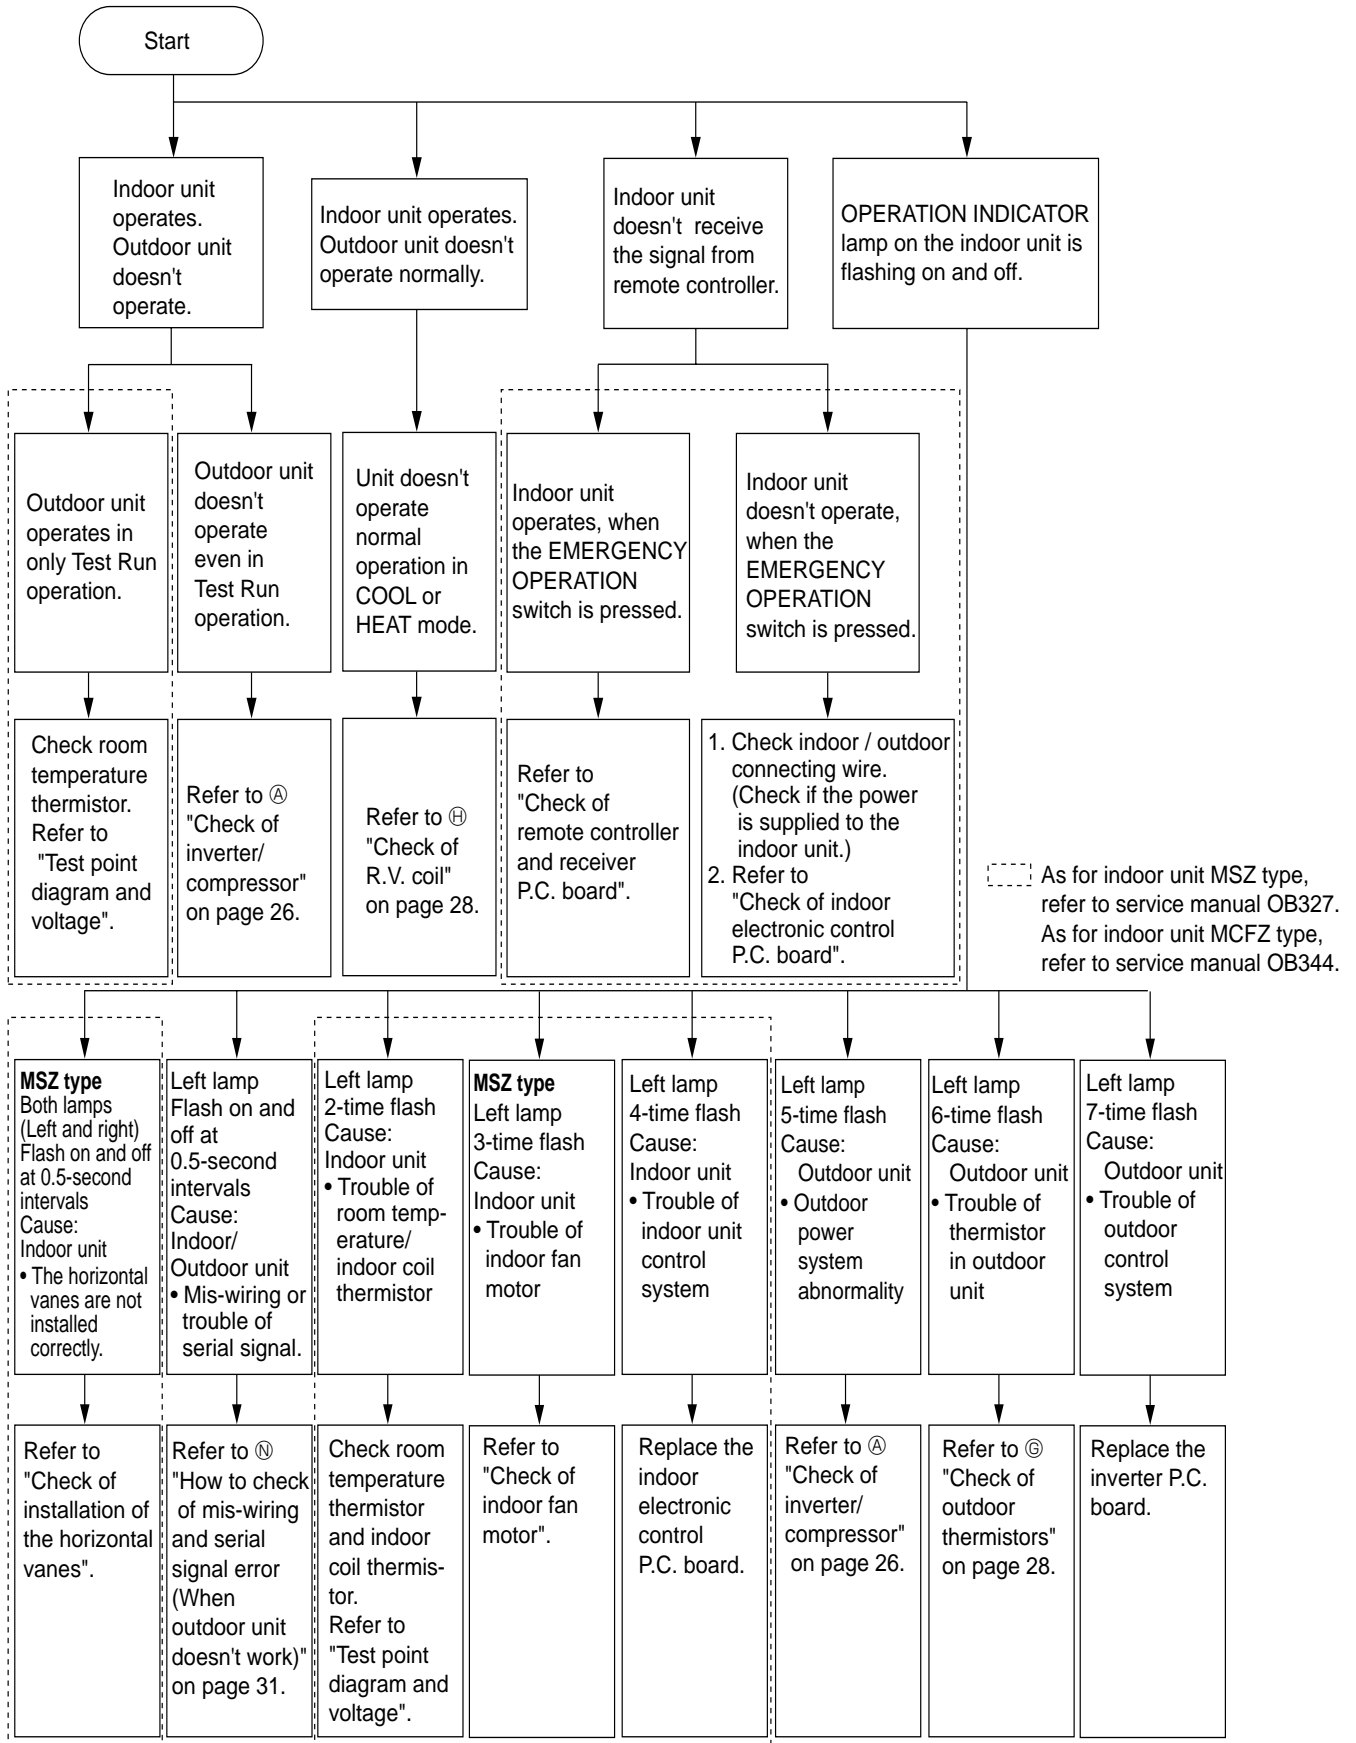

1. Troubleshooting check table


NOTE 1. The location of LED is illustrated at the right figure. Refer to page 32.
2. LED lights up during normal operation.

<Inverter P.C. board>



| No. | Symptom | LED indication | Abnormal point/ Condition | Detection method | Checkpoint |
|-----|---|--|--|---|--|
| 1 | Outdoor unit does not operate | 1-time flash every 2.5 seconds | Outdoor power system | When compressor has stopped by overcurrent protection within 1 minute 3 times in a row after compressor start-up, unit stops. | <ul style="list-style-type: none"> Check stop valve. Reconnect connectors. Refer to ㉔ "How to check inverter/compressor" on page 26. |
| 2 | | NOTE: For abnormality location, refer to 'Indoor troubleshooting check table'. Refer to service manual OB327. | Outdoor thermistors | When discharge temperature thermistor, fin temperature thermistor or defrost thermistor shorts or opens during compressor running, compressor stops and restarts 3 minutes later. | <ul style="list-style-type: none"> Refer to ㉔ "Check of outdoor thermistors" on page 28. |
| 3 | | | Outdoor control system | When nonvolatile memory data cannot be read properly, compressor stops and restarts 3 minutes later. | <ul style="list-style-type: none"> Replace inverter P.C. board after check of ㉔ "How to check inverter/compressor" on page 26 and ㉔ "Check of outdoor thermistors" on page 28. |
| 4 | | | Bus-bar voltage | When the bus-bar voltage of inverter cannot be detected normally. | <ul style="list-style-type: none"> Refer to ㉔ "How to check inverter/compressor" on page 26. |
| 5 | 'Outdoor unit stops and restarts 3 minutes later' is repeated | 2-time flash 2.5 seconds OFF | Overcurrent protection | When 12A(MUZ-A09YV, MUZ-A09YVH)/ 20A(MUZ-A12YV, MUZ-A12YVH) current flows into power transistor module, compressor stops and restarts 3 minutes later. | <ul style="list-style-type: none"> Check stop valve. Reconnect connectors. Refer to ㉔ "How to check inverter/compressor" on page 26. |
| 6 | | 3-time flash 2.5 seconds OFF | Discharge temperature overheat protection | When discharge temperature thermistor exceeds 116°C, compressor stops. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later. | <ul style="list-style-type: none"> Check refrigerant circuit and refrigerant amount. Refer to ㉔ "Check of outdoor thermistors" on page 28. Refer to ㉔ "Check of LEV" on page 30. |
| 7 | | 4-time flash 2.5 seconds OFF | Fin temperature thermistor overheat protection | When temperature at heat sink exceeds 83°C or temperature of inverter P.C. board exceeds 79°C, compressor stops and restarts 3 minutes later. | <ul style="list-style-type: none"> Check around outdoor unit. Check outdoor unit air passage. Refer to ㉔ "Check of outdoor fan motor" on page 29. |
| 8 | | 5-time flash 2.5 seconds OFF | High pressure protection | When indoor coil thermistor exceeds 70°C. When the defrost thermistor exceeds 70°C in COOL mode. | <ul style="list-style-type: none"> Check refrigerant circuit and refrigerant amount. Check stop valve. |
| 9 | | 8-time flash 2.5 seconds OFF | Compressor sinusoidal current | When the waveform of compressor current is distorted. | <ul style="list-style-type: none"> Check stop valve. Reconnect connector. Refer to ㉔ "How to check inverter/compressor" on page 26. |
| 10 | Outdoor unit operates (at low frequency) | 1-time flash 2.5 seconds OFF | Frequency drop by current protection | When current from power outlet exceeds 7A(MUZ-A09YV, MUZ-A09YVH)/ 9A(MUZ-A12YV, MUZ-A12YVH), compressor frequency lowers. | <ul style="list-style-type: none"> The unit is normal, but check the following. Check if indoor filters are clogged. Check if refrigerant is short. Check if indoor/outdoor unit air circulation is short cycled. |
| 11 | | 3-time flash 2.5 seconds OFF | Frequency drop by high pressure protection | When indoor coil thermistor exceeds 55°C in HEAT mode, compressor frequency lowers. | |
| 12 | | | Frequency drop by defrosting in COOL mode | When indoor coil thermistor reads 6°C or less in COOL mode, compressor frequency lowers. | |
| 13 | Outdoor unit operates | 5-time flash 2.5 seconds OFF | Outdoor thermistors | When ambient temperature thermistor shorts or opens during compressor running. | <ul style="list-style-type: none"> Refer to ㉔ "Check of outdoor thermistors" on page 28. |
| 14 | | 7-time flash 2.5 seconds OFF | Low discharge temperature protection | When discharge temperature has been 40°C or less for 20 minutes. | <ul style="list-style-type: none"> Refer to ㉔ "Check of LEV" on page 30. Check refrigerant circuit and refrigerant amount. |
| 15 | | 8-time flash 2.5 seconds OFF | PAM protection PAM: Pulse Amplitude Modulation | When the overcurrent flows into IGBT(Insulated Gate Bipolar transistor : TR821) or when the bus-bar voltage reaches 300V or more, PAM stops and restarts. | <ul style="list-style-type: none"> This is not malfunction. PAM protection will be activated in the following cases; ① Instantaneous power voltage drop (Short time power failure) ② When the power supply voltage is high. |
| 16 | | 9-time flash 2.5 seconds OFF | Inverter check mode | When the connector of compressor is disconnected, inverter check mode starts. | <ul style="list-style-type: none"> Check if the connector is correctly connected. Refer to ㉔ "How to check inverter/compressor" on page 26. |

The flashing frequency shows the number of times the LED blinks after every 2.5-second OFF.
(Example) When the flashing frequency is "2".

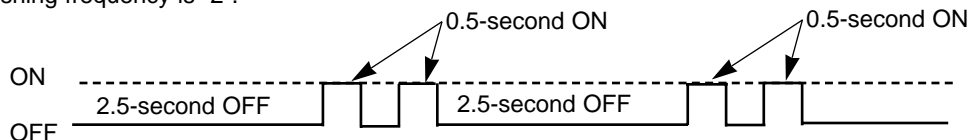


2. Trouble criterion of main parts

MUZ-A09YV -[E1] **MUZ-A12YV** -[E1]
MUZ-A09YVH -[E1] **MUZ-A12YVH** -[E1]

| Part name | Check method and criterion | Figure | | | | | | | | | | | |
|--|---|-------------------------------|-----------------------|-----------------------------------|-----------------------|-----------------------------|-------------------------|-----------------------------|-------------------|-------------------------------|-------------------------------|-----------------------|--|
| Defrost thermistor (RT61) | Measure the resistance with a tester. (Part temperature $-15^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td>Normal</td> <td>Abnormal</td> </tr> <tr> <td>5 kΩ ~ 65 kΩ</td> <td>Open or short-circuit</td> </tr> </table> | Normal | Abnormal | 5 k Ω ~ 65 k Ω | Open or short-circuit | | | | | | | | |
| Normal | | Abnormal | | | | | | | | | | | |
| 5 k Ω ~ 65 k Ω | Open or short-circuit | | | | | | | | | | | | |
| Ambient temperature thermistor (RT65) | | | | | | | | | | | | | |
| Discharge temperature thermistor (RT62) | Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up. (Part temperature $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td>Normal</td> <td>Abnormal</td> </tr> <tr> <td>150 kΩ ~ 600 kΩ</td> <td>Open or short-circuit</td> </tr> </table> | Normal | Abnormal | 150 k Ω ~ 600 k Ω | Open or short-circuit | | | | | | | | |
| Normal | Abnormal | | | | | | | | | | | | |
| 150 k Ω ~ 600 k Ω | Open or short-circuit | | | | | | | | | | | | |
| Fin temperature thermistor (RT64) | Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up. (Part temperature $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td>Normal</td> <td>Abnormal</td> </tr> <tr> <td>30 kΩ ~ 180 kΩ</td> <td>Open or short-circuit</td> </tr> </table> | Normal | Abnormal | 30 k Ω ~ 180 k Ω | Open or short-circuit | | | | | | | | |
| Normal | Abnormal | | | | | | | | | | | | |
| 30 k Ω ~ 180 k Ω | Open or short-circuit | | | | | | | | | | | | |
| Compressor (MC) | Measure the resistance between the terminals with a tester. (Part temperature $-15^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td></td> <td colspan="2">Normal</td> <td rowspan="2">Abnormal</td> </tr> <tr> <td></td> <td>MUZ-A09YV MUZ-A09YVH</td> <td>MUZ-A12YV MUZ-A12YVH</td> </tr> <tr> <td>U-V U-W V-W</td> <td>1.31 Ω ~ 1.66 Ω</td> <td>0.42 Ω ~ 0.53 Ω</td> <td>Open or short-circuit</td> </tr> </table> | | Normal | | Abnormal | | MUZ-A09YV MUZ-A09YVH | MUZ-A12YV MUZ-A12YVH | U-V U-W V-W | 1.31 Ω ~ 1.66 Ω | 0.42 Ω ~ 0.53 Ω | Open or short-circuit | |
| | Normal | | Abnormal | | | | | | | | | | |
| | MUZ-A09YV MUZ-A09YVH | MUZ-A12YV MUZ-A12YVH | | | | | | | | | | | |
| U-V U-W V-W | 1.31 Ω ~ 1.66 Ω | 0.42 Ω ~ 0.53 Ω | Open or short-circuit | | | | | | | | | | |
| Outdoor fan motor (MF) INNER FUSE 152 \pm 0/5 $^{\circ}\text{C}$ CUT OFF | Measure the resistance between the terminals with a tester. (Part temperature $-15^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td>Color of lead wire</td> <td>Normal</td> <td rowspan="3">Abnormal</td> </tr> <tr> <td>WHT - BLK</td> <td>299 Ω ~ 374 Ω</td> </tr> <tr> <td>BLK - RED</td> <td>242 Ω ~ 304 Ω</td> </tr> </table> | Color of lead wire | Normal | Abnormal | WHT - BLK | 299 Ω ~ 374 Ω | BLK - RED | 242 Ω ~ 304 Ω | | | | | |
| Color of lead wire | Normal | Abnormal | | | | | | | | | | | |
| WHT - BLK | 299 Ω ~ 374 Ω | | | | | | | | | | | | |
| BLK - RED | 242 Ω ~ 304 Ω | | | | | | | | | | | | |
| R.V. coil (21S4) | Measure the resistance between the terminals with a tester. (Part temperature $-15^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td>Normal</td> <td>Abnormal</td> </tr> <tr> <td>1.90 kΩ ~ 2.39 kΩ</td> <td>Open or short-circuit</td> </tr> </table> | Normal | Abnormal | 1.90 k Ω ~ 2.39 k Ω | Open or short-circuit | | | | | | | | |
| Normal | Abnormal | | | | | | | | | | | | |
| 1.90 k Ω ~ 2.39 k Ω | Open or short-circuit | | | | | | | | | | | | |
| LEV (Expansion valve) | Measure the resistance with a tester. (Part temperature : $-15^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td>Color of lead wire</td> <td>Normal</td> <td rowspan="4">Abnormal</td> </tr> <tr> <td>WHT - RED</td> <td rowspan="4">39 Ω ~ 50 Ω</td> </tr> <tr> <td>RED - ORN</td> </tr> <tr> <td>YLW - BRN</td> </tr> <tr> <td>BRN - BLU</td> </tr> </table> | Color of lead wire | Normal | Abnormal | WHT - RED | 39 Ω ~ 50 Ω | RED - ORN | YLW - BRN | BRN - BLU | | | | |
| Color of lead wire | Normal | Abnormal | | | | | | | | | | | |
| WHT - RED | 39 Ω ~ 50 Ω | | | | | | | | | | | | |
| RED - ORN | | | | | | | | | | | | | |
| YLW - BRN | | | | | | | | | | | | | |
| BRN - BLU | | | | | | | | | | | | | |
| Defrost heater (H) | Measure the resistance with a tester. (Part temperature $-15^{\circ}\text{C} \sim 40^{\circ}\text{C}$) <table border="1" style="margin-left: 20px;"> <tr> <td>Normal</td> <td>Abnormal</td> </tr> <tr> <td>341 Ω ~ 427 Ω</td> <td>Open or short-circuit</td> </tr> </table> | Normal | Abnormal | 341 Ω ~ 427 Ω | Open or short-circuit | | | | | | | | |
| Normal | Abnormal | | | | | | | | | | | | |
| 341 Ω ~ 427 Ω | Open or short-circuit | | | | | | | | | | | | |

**When OPERATION INDICATOR lamp flashes 5-time.
Outdoor unit does not operate.**

A How to check inverter/ compressor

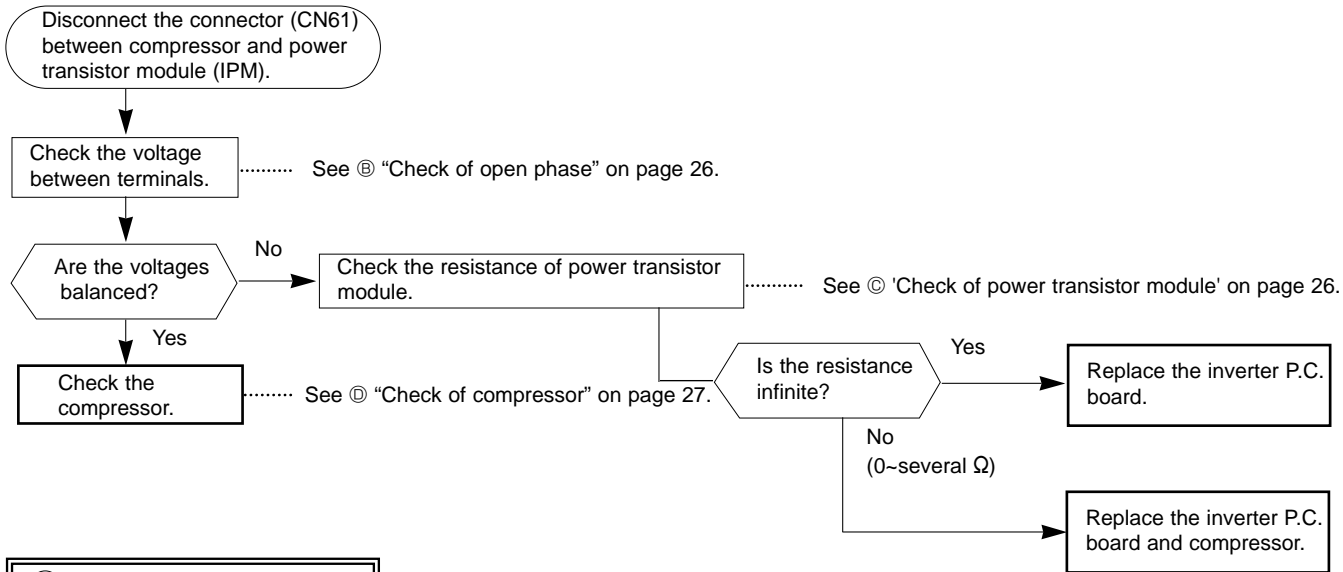

B Check of open phase

●With the connector between compressor and power transistor module disconnected, activate the inverter and check if the inverter is normal by measuring the balance of voltage between terminals.

Output voltage [V]
115V

<< Operation method >>

Start cooling or heating operation by pressing the EMERGENCY OPERATION switch on the indoor unit. (test-run mode : refer to page 14)

<< Measurement point >>

at 3 points


BLK (U)-WHT (V)

BLK (U)-RED (W)

WHT(V)-RED (W)

※ Measure AC voltage between the lead wires at 3 points.

- NOTE 1. Output voltage varies according to power supply voltage.
2. Measure the voltage by analog type tester.
3. During this check, LED of inverter P.C. board flashes 9 times.

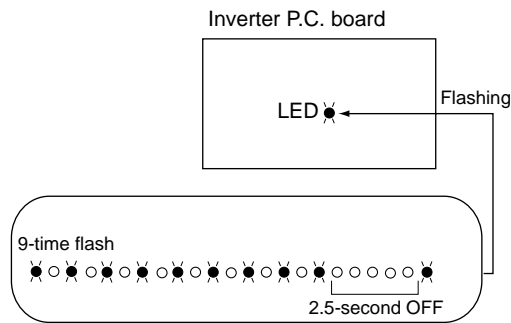

C Check of power transistor module

●Disconnect the connector (CN61) between compressor and power transistor module, and measure the resistance between terminals on the power transistor module.

<< Measurement point >>

at 6 points

BLK-WHT, WHT-BLK

BLK-RED, RED-BLK

WHT-RED, RED-WHT

<< Judgement >>


Infinite [Ω].....Normal

0~dozens ofAbnormal (short)

ohmmeter indication




..... Normal (infinite)



..... Abnormal (0~dozens of Ω)

D Check of compressor

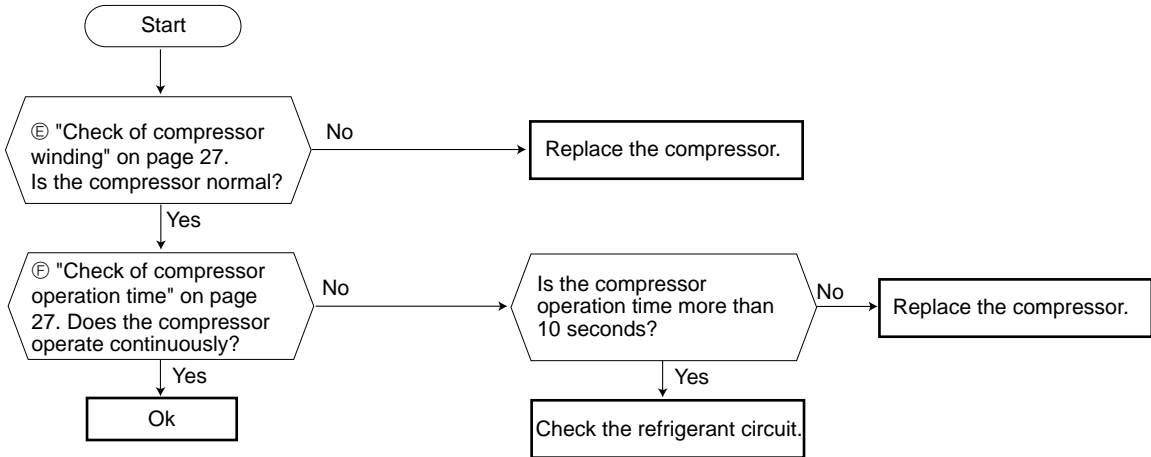

E Check of compressor winding

- Disconnect the connector (CN61) between compressor and power transistor module, and measure the resistance between the compressor terminals.

<<Measurement point>>

at 3 points
BLK-WHT
BLK-RED
WHT-RED

* Measure the resistance between the lead wires at 3 points.

<<Judgement>>

Refer to page 25.

0[Ω]Abnormal [short]


Infinite[Ω]Abnormal [open]

NOTE 1. Be sure to zero the ohmmeter before measurement.


2. Winding resistance for each phase at 20°C.

Refer to page 5.

Ohmmeter indication




..... Normal
(1~several Ω)



..... Abnormal
(0Ω short)



..... Abnormal
(infinite..... open)

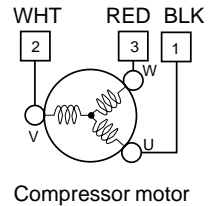

F Check of compressor operation time

- Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to over current.

<<Operation method>>

Start heating or cooling operation by pressing the EMERGENCY OPERATION switch on the indoor unit. (Test-run mode)

<<Measurement>>

Measure the time from the start of outdoor fan running to the stop of compressor due to over current.

<<Judgement>>


For reference

0~10 seconds.....Abnormal (compressor short)

10~60 seconds.....Abnormal (compressor lock-out)

60 seconds~5 minutes.....Abnormal (refrigerant circuit defect)

more than 5 minutes.....Normal

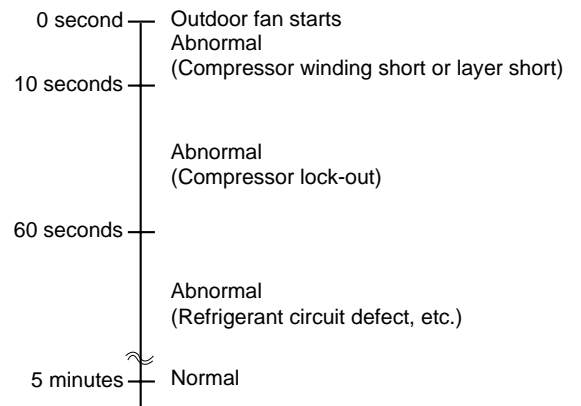

**When OPERATION INDICATOR lamp flashes 6-time.
The thermistors in the outdoor unit are abnormal.**

Ⓒ Check of outdoor thermistors

Disconnect the connectors CN641, CN642 and CN643 from the inverter P.C. board.
(Check the characteristics of each thermistor.)

Defrost thermistor RT61

Measure the resistance between CN641 ① and ②.

Discharge temperature thermistor RT62

Measure the resistance between CN641 ③ and ④.

Fin temperature thermistor RT64

Measure the resistance between CN642 ① and ②.

Ambient temperature thermistor RT65

Measure the resistance between CN643 ① and ②.

Does the resistance of the thermistor have the characteristics on page 32?

Yes

No

Replace the thermistor except RT64. In case of RT64, replace the inverter P.C. board. Since RT64 is combined with inverter P.C. board.

- ① Reconnect the connectors CN641, CN642 and CN643.
- ② Disconnect the connector between the compressor and power transistor module.

Turn ON the power supply and press the EMERGENCY OPERATION switch.

Replace the inverter P.C. board.

Does the unit operate 10 minutes or more?

Is LED of the inverter P.C. board flashes 5 times?

Reconnect the connector or connecting wire.

Ⓓ Check of R.V. coil

- * First of all, measure the resistance of R.V. coil to check if the coil is defective (refer to page 25).
- * In case CN721 is not connected or R.V. coil is open, voltage is generated between the terminal pins of the connector although any signal is not being transmitted to R.V. coil. Check if CN721 is connected.

Unit operates COOL mode even if it is set to HEAT mode.

Disconnect connector (CN61) between compressor and power transistor module. Turn ON the power supply and press the EMERGENCY OPERATION switch twice (HEAT mode).


Is there 230V AC between CN721 ① and ② on the power P.C. board 3 minutes after the power supply is turned ON?

No

Replace the power P.C. board.

Yes

Replace the 4-way valve.

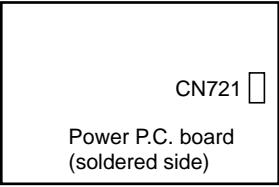

Unit operates HEAT mode even if it is set to COOL mode.

Disconnect connector (CN61) between compressor and power transistor module. Turn ON the power supply and press the EMERGENCY OPERATION switch once (COOL mode).

Is there 230V AC between CN721 ① and ② on the power P.C. board 3 minutes after the power supply is turned ON?

Yes


Replace the power P.C. board.

No

- Defective R.V. coil
- Defective 4-way valve


Outdoor fan motor does not operate.

① Check of outdoor fan motor

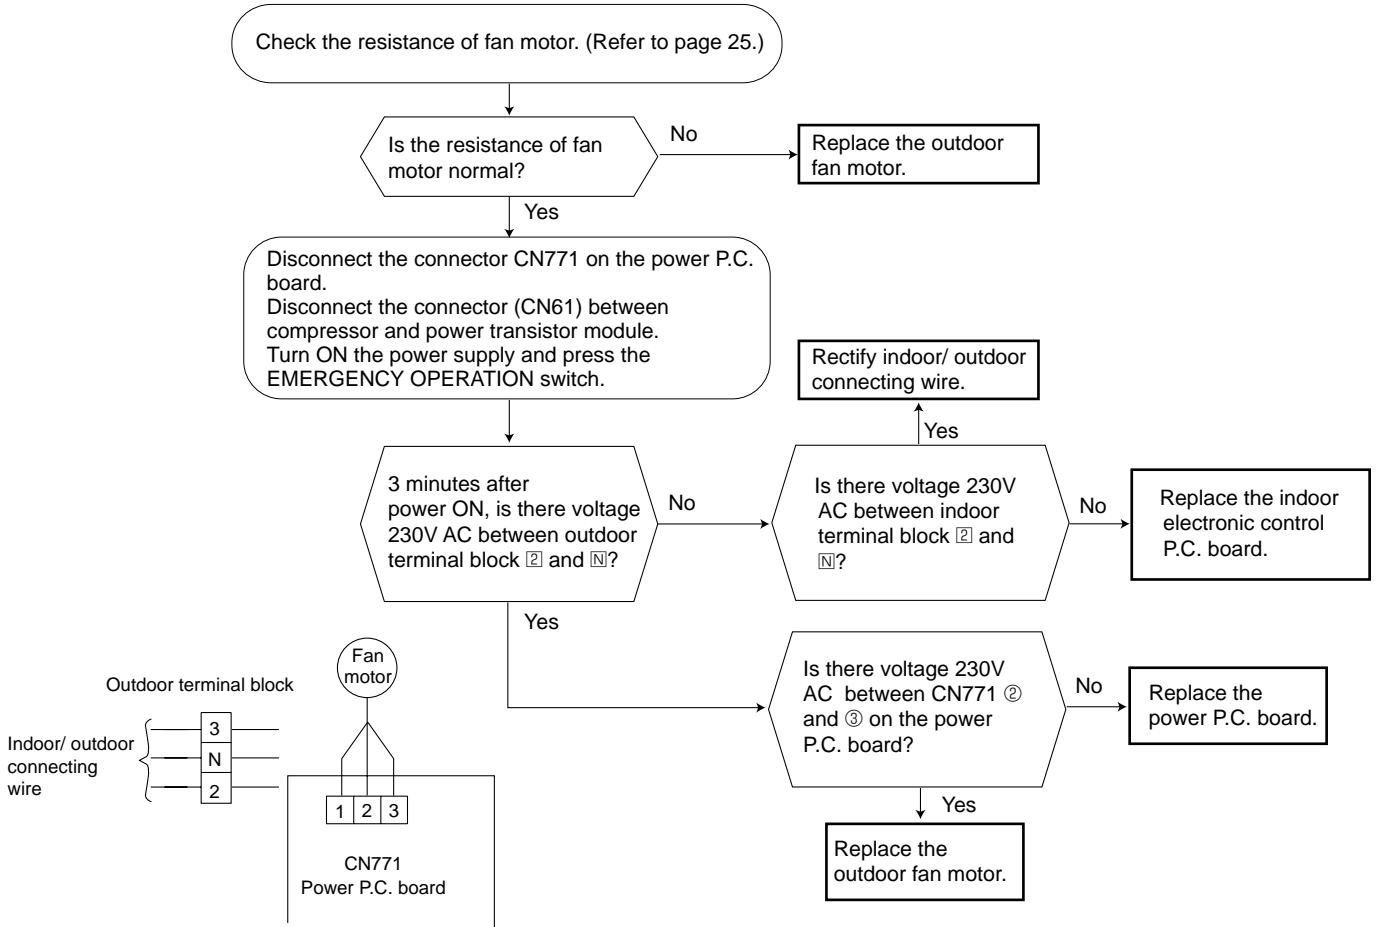

Inverter does not operate.


② Check of power supply

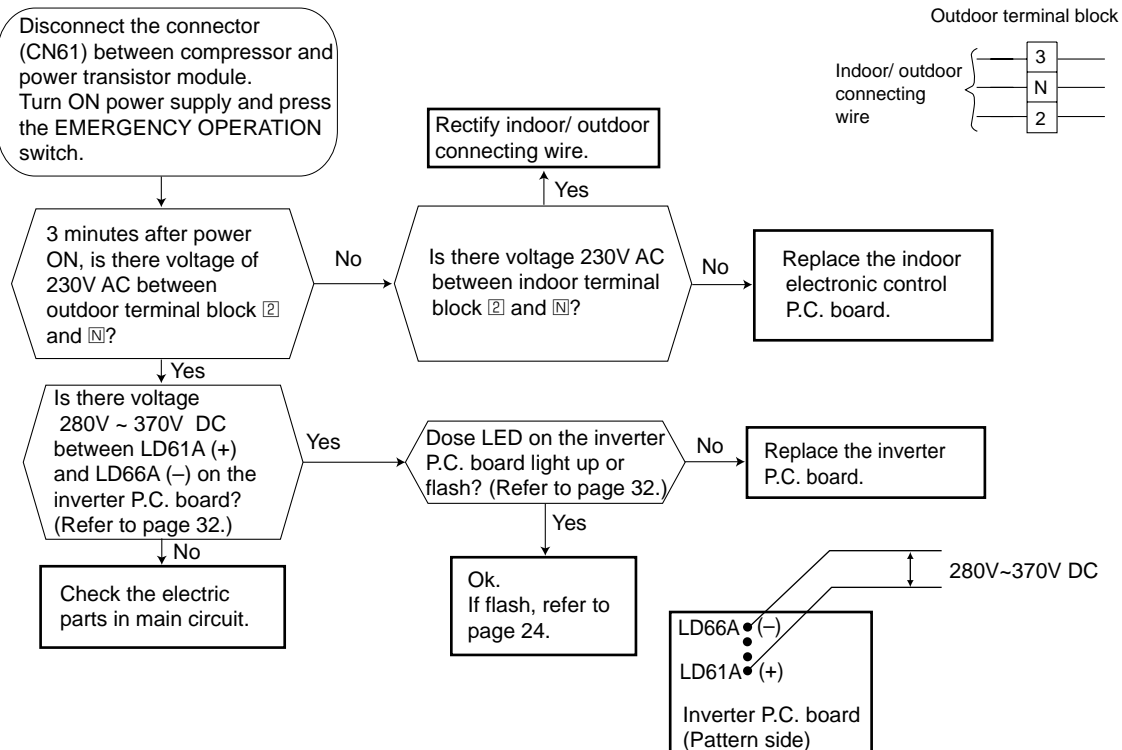

Outdoor unit does not operate at all or stops immediately due to over current.

(K) Check of current-limiting resistor

When the current-limiting resistor is open, the rush current limiting relay (X64) may not work properly.

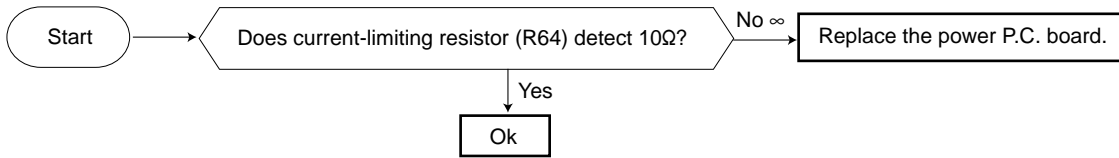


Heating/Cooling does not work sufficiently.

(L) Check of LEV (Expansion valve)

Turn ON the power supply.
 ① During pressing both the OPERATION SELECT button and the TOO COOL button on the remote controller at the same time, press the RESET button.
 ② First, release the RESET button.
 And release the other two buttons since all LCD in operation display section of the remote controller is displayed after 3 seconds.



- ① During pressing both the OPERATION SELECT button and the TOO COOL button on the remote controller at the same time, press the RESET button.
- ② First, release the RESET button.
 And release the other two buttons since all LCD in operation display section of the remote controller is displayed after 3 seconds.



With remote controller set toward the indoor unit, press the OPERATE/ STOP(ON/ OFF) button and confirm one beep tone.

LEV operates in full-opening direction.

Do you hear the expansion valve "click, click....." ?
 Do you feel the expansion valve vibrate on touching it ?

Is LEV properly fixed to the expansion valve?

Properly fix the LEV to the expansion valve.

Does the resistance of LEV have the characteristics on page 25?

Measure each voltage between connector pins of CN724 on the inverter P.C. board.
 1.Pin③(-) - Pin①(+)
 2.Pin④(-) - Pin①(+)
 3.Pin⑤(-) - Pin①(+)
 4.Pin⑥(-) - Pin①(+)
 Is there about 3~5V AC between each?
 NOTE: Measure the voltage by an analog tester.

NOTE : After check of LEV, do the undermentioned operations.
 1. Turn OFF the power supply and turn ON again.
 2. Press the RESET button on the remote controller.

Replace the LEV.

Replace the expansion valve.

Replace the inverter P.C. board.

Outdoor base gets frozen.

(M) Check of defrost heater <MUZ-A09YVH MUZ-A12YVH>

Check the following points before checking electric continuity.

- 1) Does the resistance of ambient temperature thermistor have the characteristics? (Refer to page 32.)
- 2) Is the resistance of defrost heater normal? (Refer to page 25.)
- 3) Does the heater protector remain conducted (not open)?
- 4) Are both ambient temperature thermistor and circuit of defrost heater securely connected to connectors?

In HEAT mode, for more than 5 minutes, let the ambient temperature thermistor continue to read 5°C or less, and let the defrost thermistor continue to read -1°C or less.

NOTE: In case both thermistors are more than the above temperature, cool them with cold water etc...


Is there 230V AC between CN722 ① and ③ on the power P.C. board?

No problem of the power P.C. board.

Is the voltage between CN726 ⑥(+)-③(-) on the power P.C. board 0V DC? (Refer to page 33.)


Replace the power P.C. board.

Replace the inverter P.C. board.

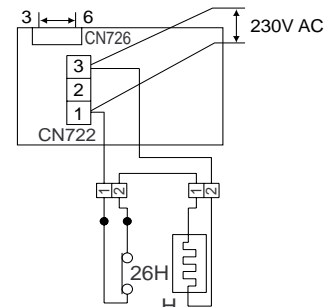

When OPERATION INDICATOR lamp flashes ON and OFF in every 0.5-second.
Outdoor unit doesn't operate.

N How to check mis-wiring and serial signal error (when outdoor unit does not work)

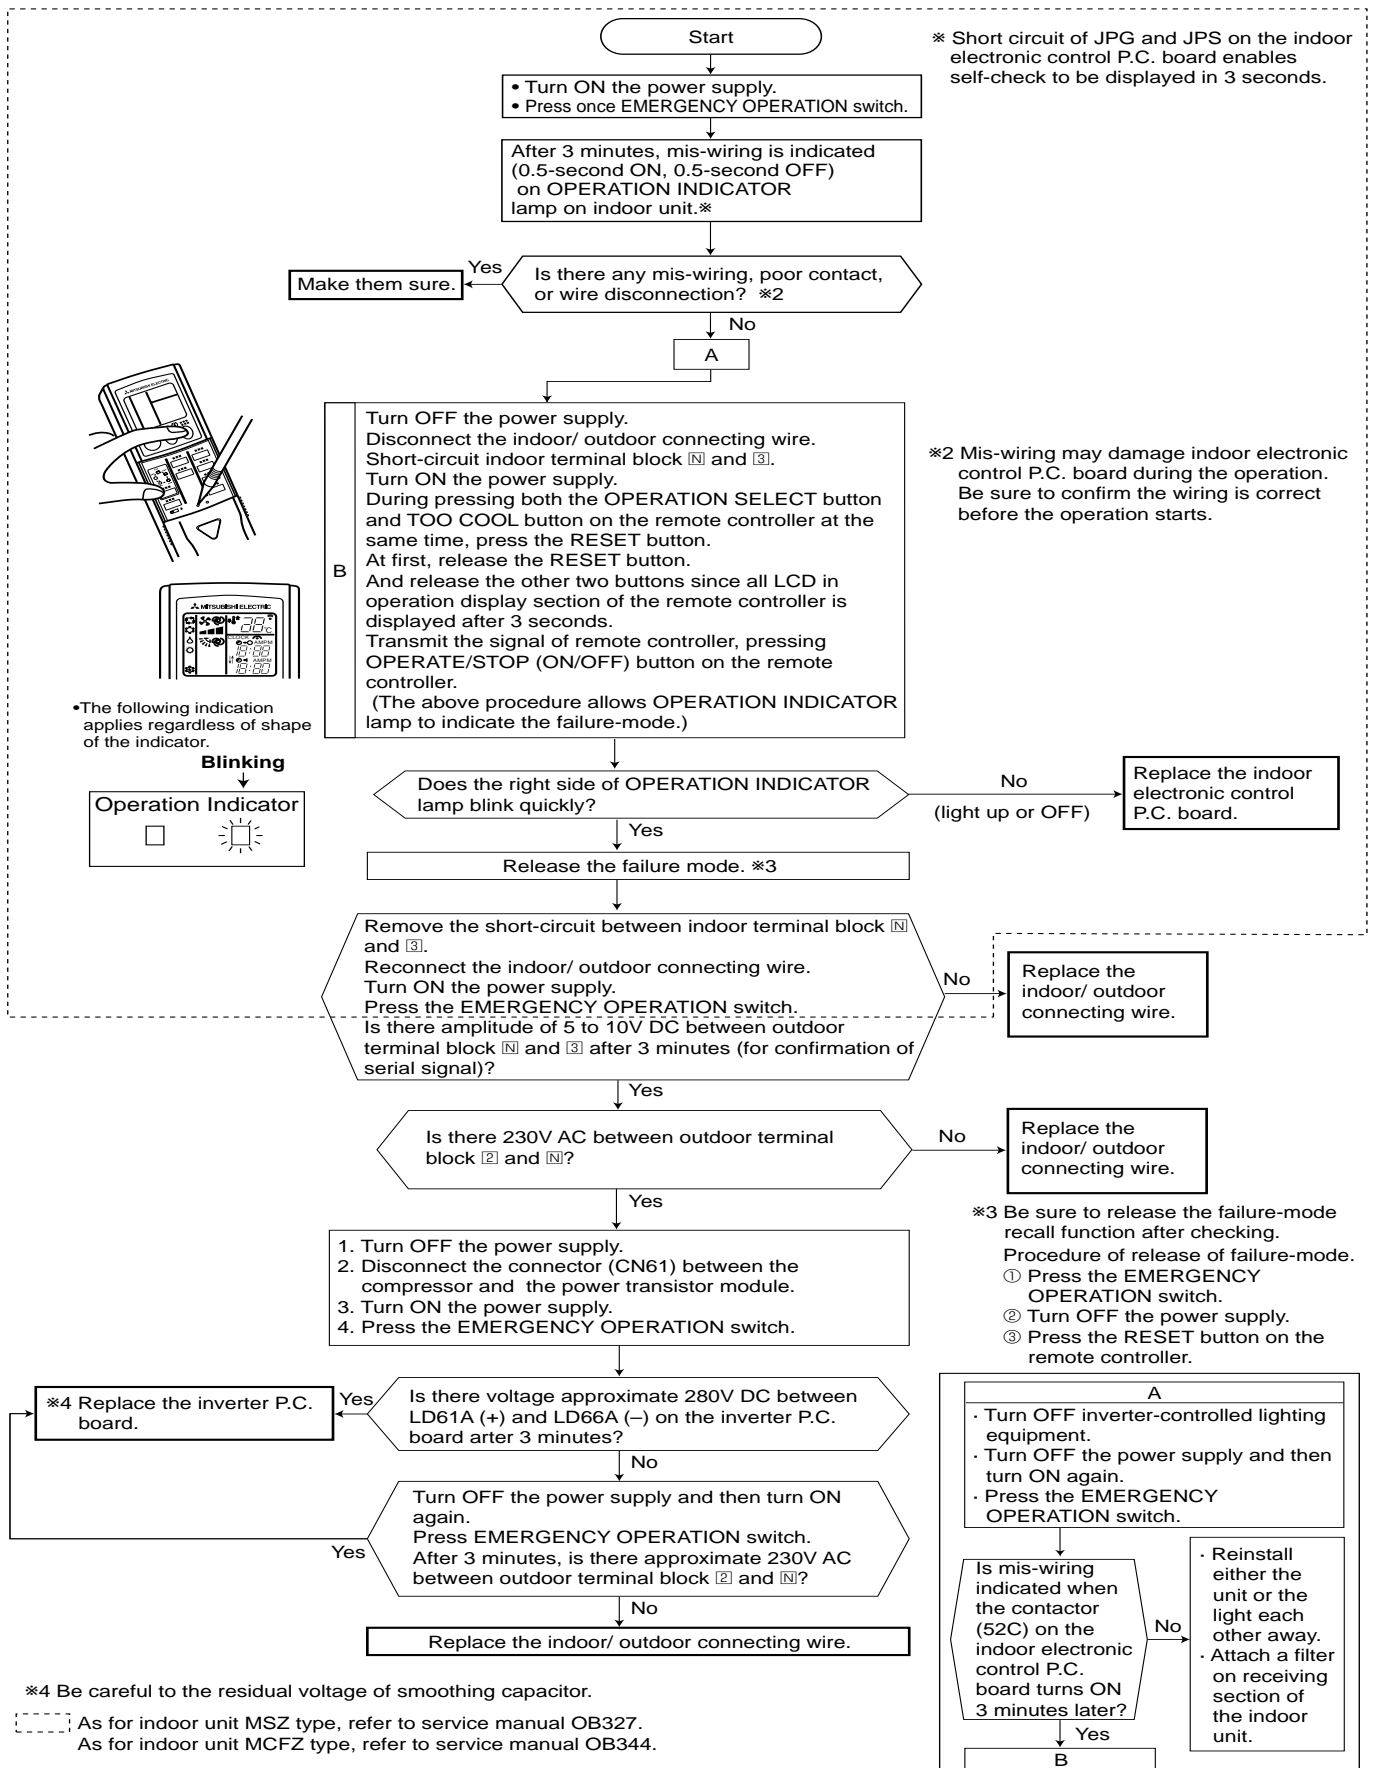


MUZ-A09YV -[E1] MUZ-A12YV -[E1]
MUZ-A09YVH -[E1] MUZ-A12YVH -[E1]

Inverter P.C. board

(Refer to page 29.)
 LD66A LD61A
 280V ~ 370V DC 230V AC Jumper wire for change in defrost setting (JS)
 (Refer to page 22.)

Back side of unit

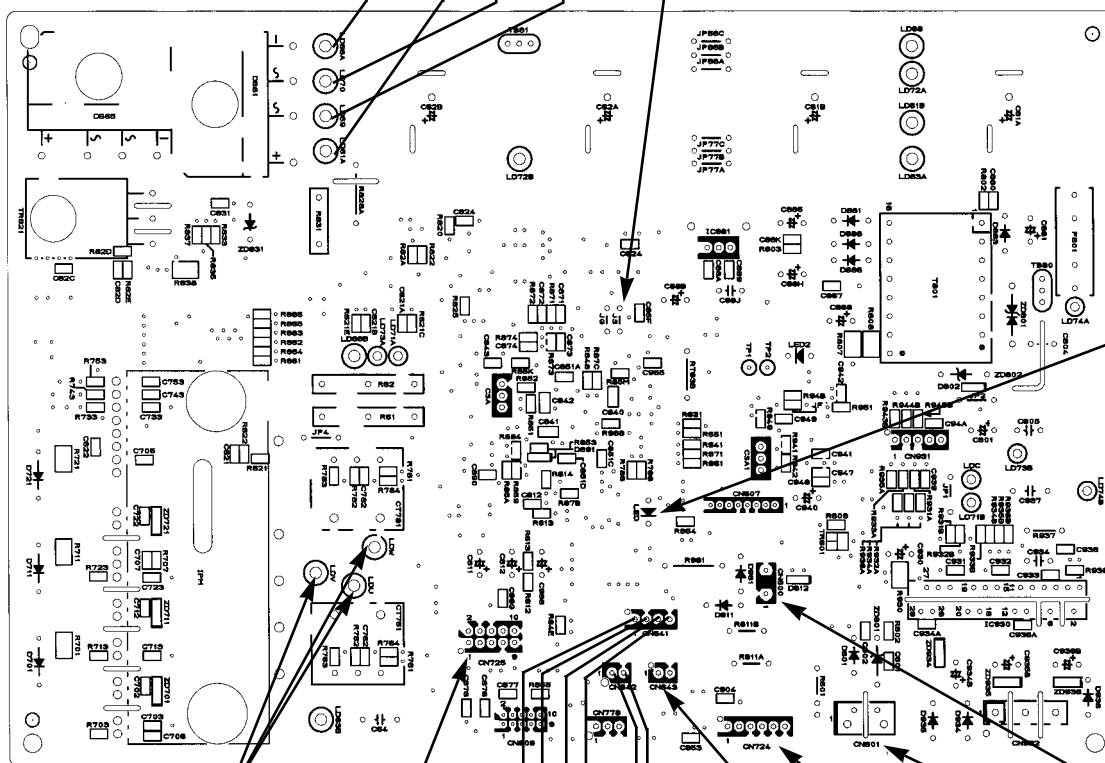

LED monitor lamp

Output to drive compressor (LDU,LDV,LDW)

Connecting wire with power P.C. board (CN725)

Defrost thermistor (RT61)

Discharge temperature thermistor (RT62)

Fin temperature thermistor (RT64)




Ambient temperature thermistor (RT65)

LEV connector (CN724)


Connector for indoor/outdoor communication (CN601)

Zero cross signal connector (CN800)

Front side of unit

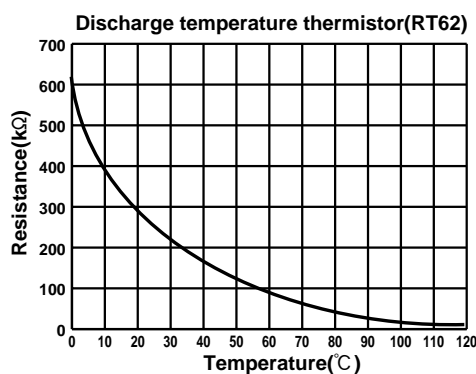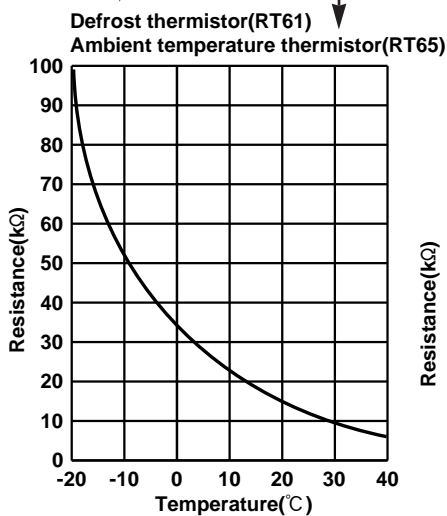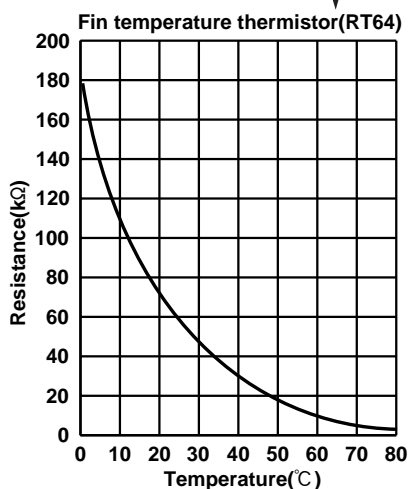


MUZ-A09YV -E1 MUZ-A12YV -E1
MUZ-A09YVH -E1 MUZ-A12YVH -E1
Power P.C. board

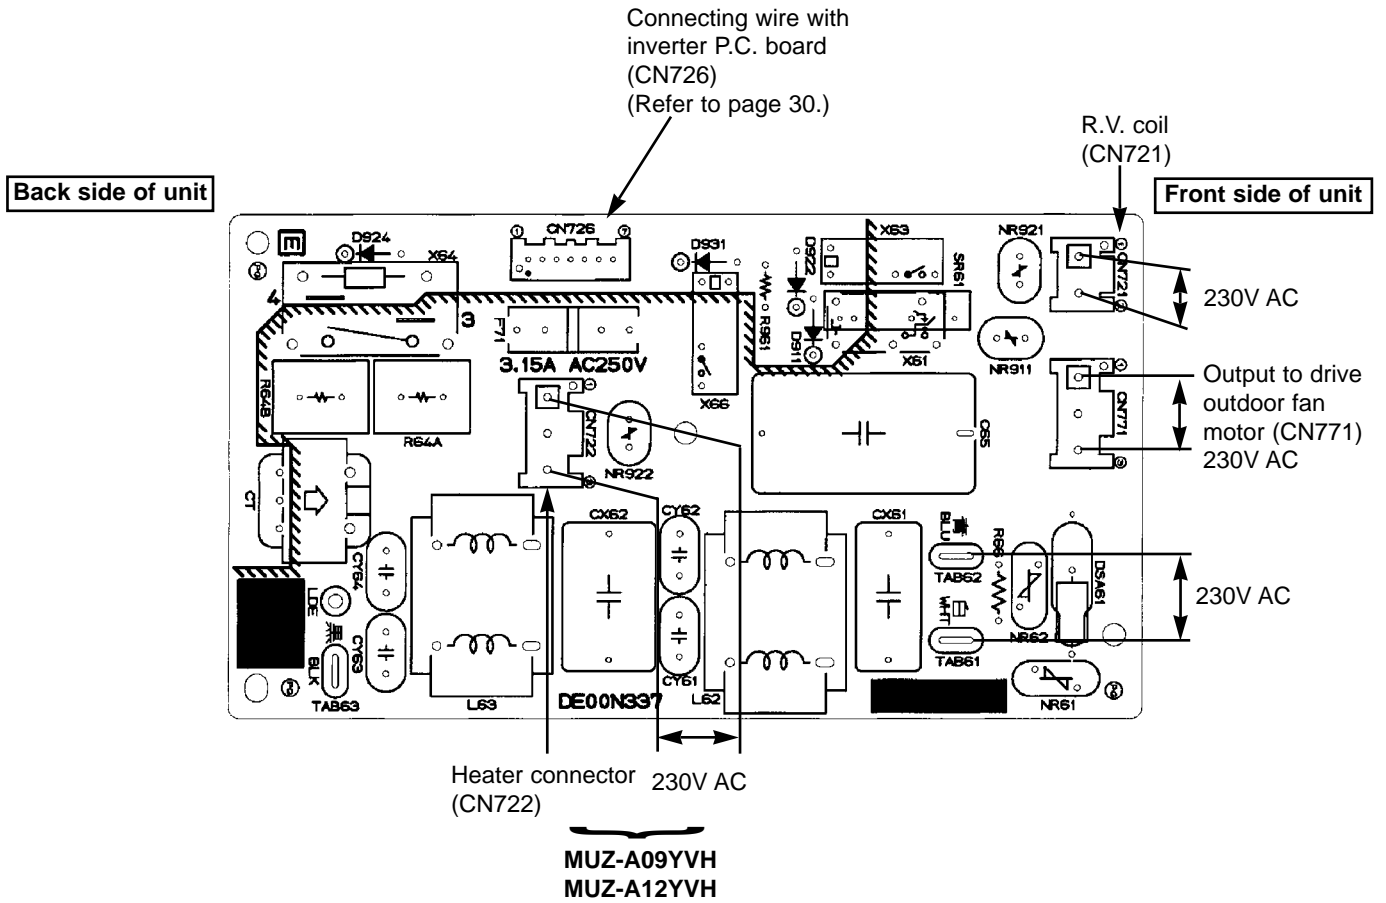


<"Terminal with lock mechanism" Detaching points>

In case of terminal with lock mechanism, detach the terminal as shown below.
 There are two types (Refer to (1) and (2)) of the terminal with lock mechanism.
 The terminal with no lock mechanism can be removed by pulling it out.
 Check the shape of the terminal and work.

(1) Slide the sleeve and check if there is a locking lever or not.

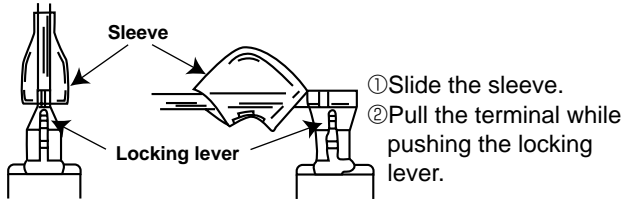

(2) The terminal with this connector is a terminal with lock mechanism

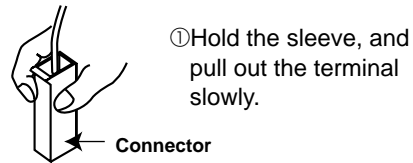

MUZ-A09YV -[E1] MUZ-A12YV -[E1]
MUZ-A09YVH -[E1] MUZ-A12YVH -[E1]
OUTDOOR UNIT

| OPERATING PROCEDURE | PHOTOS |
|---|-----------------------|
| <p>1. Removing the cabinet.</p> <ol style="list-style-type: none"> (1) Remove the screws fixing the top panel. (Photo 1) (2) Remove the top panel. (Photo 1) (3) Remove the screw fixing the service panel. (Photo 2) (4) Pull down the service panel and remove it. (Photo 2) (5) Remove the screws fixing the cabinet. (6) Remove the cabinet. (7) Disconnect the indoor/outdoor connecting wire. (8) Remove the screws fixing the back panel. (9) Remove the back panel. <p>Photo 2</p> | <p>Photo 1</p> |



OPERATING PROCEDURE

2. Removing the inverter assembly, inverter P.C. board and power P.C. board

- (1) Remove the top panel, cabinet and service panel. (Refer to 1.)
- (2) Disconnect the indoor/outdoor connecting wire and remove the back panel. (Refer to 1.)
- (3) Disconnect the ground wire, the lead wire to the reactor and the following connectors;
<Power P.C. board>
CN721 (4-way valve)
CN722 (Defrost heater) MUZ-A09/A12YVH-E1
CN771 (Fan motor)
<Inverter P.C. board>
CN641 (Defrost thermistor and discharge temperature thermistor)
CN643 (Ambient temperature thermistor)
CN724 (LEV)
- (4) Remove the compressor connector (CN61).
- (5) Remove the screws fixing the relay panel. (Photo 3)
- (6) Remove the inverter assembly. (Photo 3)
- (7) Disconnect all connectors and lead wires on the inverter P.C. board. (Photo 4)
- (8) Remove the inverter P.C. board from the inverter assembly.
- (9) Remove the screw fixing the power P.C. board. (Photo 4)
- (10) Disconnect all connectors and lead wires on the power P.C. board.
- (11) Remove the power P.C. board from the inverter assembly.

3. Removing R.V. coil

- (1) Remove the top panel, cabinet and service panel. (Refer to 1.)
- (2) Disconnect the indoor/outdoor connecting wire and remove the back panel. (Refer to 1.)
- (3) Remove the inverter assembly. (Refer to 2.)
- (4) Remove the R.V. coil. (Photo 5)

PHOTOS

Photo 3


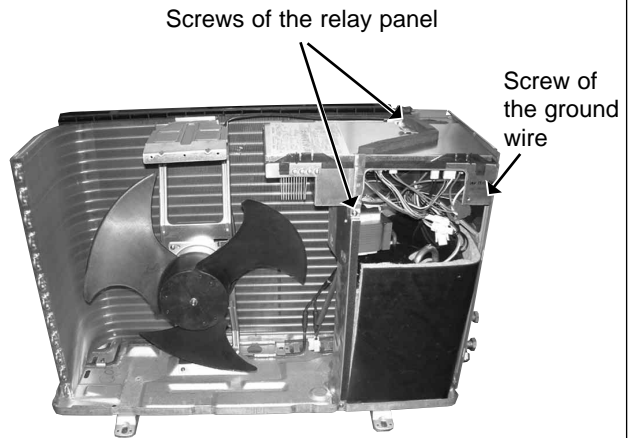


Photo 4

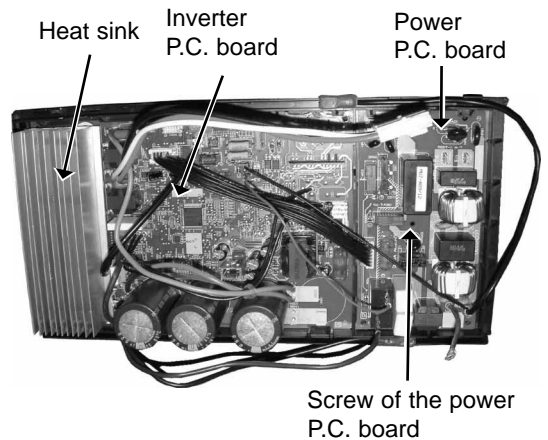


OPERATING PROCEDURE

4. Removing the defrost thermistor and discharge temperature thermistor

- (1) Remove the top panel, cabinet and service panel.
(Refer to 1.)
- (2) Disconnect the indoor/outdoor connecting wire and remove the back panel. (Refer to 1.)
- (3) Remove the inverter assembly. (Refer to 2.)
- (4) Pull out the defrost thermistor from its holder. (Photo 6)
- (5) Pull out the discharge temperature thermistor from its holder. (Photo 5)


PHOTOS

Photo 5

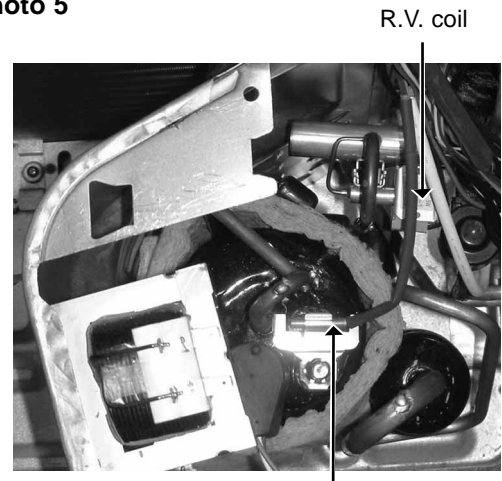

Discharge temperature thermistor

Photo 6

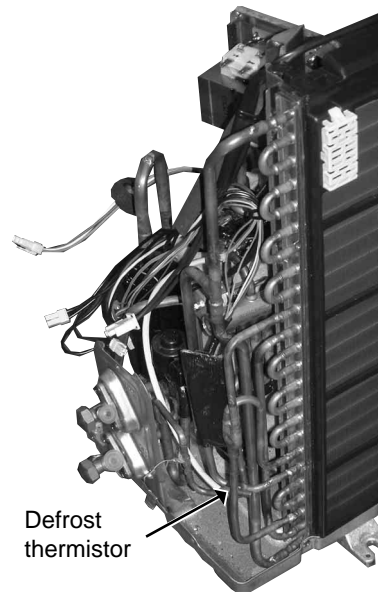


Defrost thermistor



MUZ-A09YV -E1 MUZ-A12YV -E1
 MUZ-A09YVH -E1 MUZ-A12YVH -E1

13-1. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

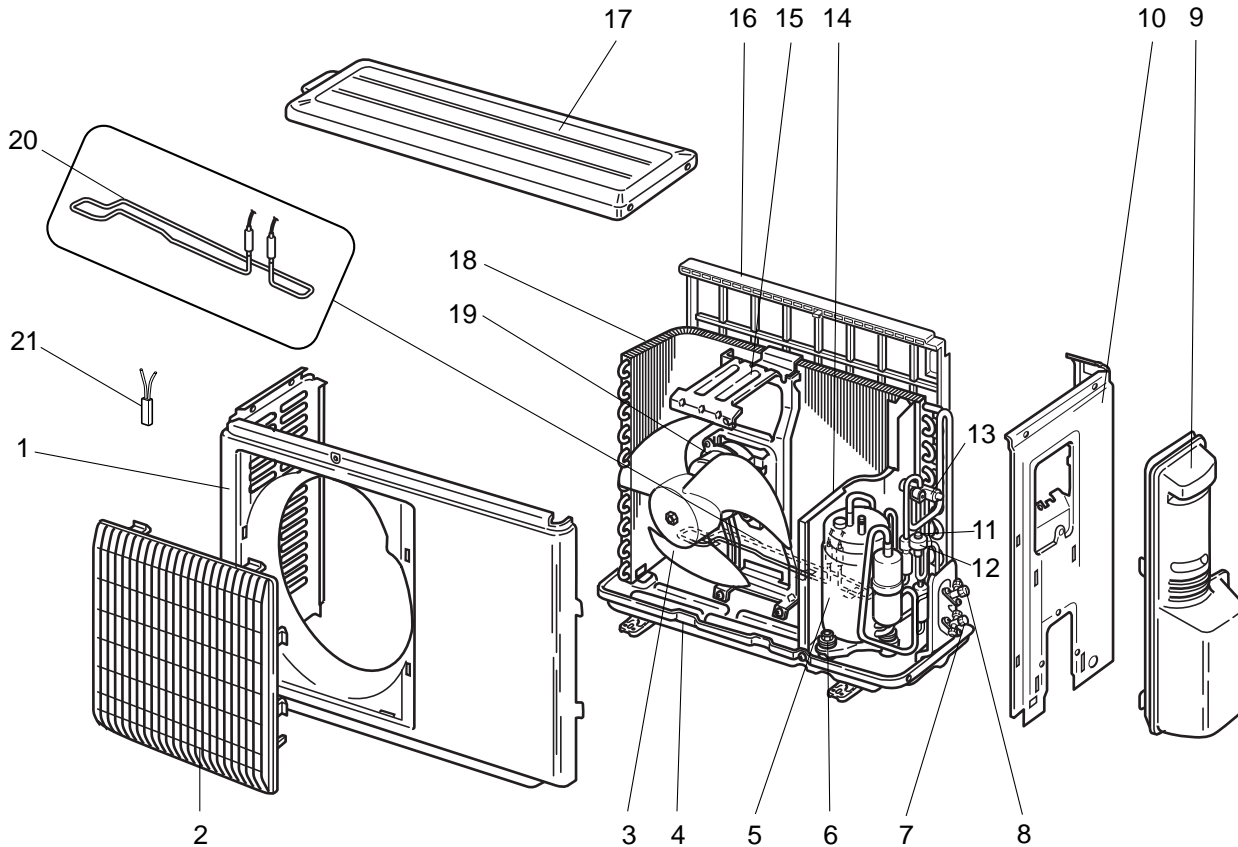


Part number that is circled is not shown in the illustration.

| No. | Part No. | Part Name | Symbol in Wiring Diagram | Q'ty/unit | | | | Remarks |
|-----|-------------|------------------------|--------------------------|--------------|---------------|--------------|---------------|---------------|
| | | | | MUZ-A09YV-E1 | MUZ-A09YVH-E1 | MUZ-A12YV-E1 | MUZ-A12YVH-E1 | |
| 1 | E02 838 232 | CABINET | | 1 | 1 | 1 | 1 | |
| 2 | E02 838 521 | GRILLE | | 1 | 1 | 1 | 1 | |
| 3 | E02 838 501 | PROPELLER | | 1 | 1 | 1 | 1 | |
| 4 | E02 838 290 | BASE | | 1 | | 1 | | |
| | E02 840 290 | BASE | | | 1 | | 1 | |
| 5 | E02 838 900 | COMPRESSOR | MC | 1 | 1 | | | KNB073FBVH |
| | E02 839 900 | COMPRESSOR | MC | | | 1 | 1 | KNB092FAAH |
| 6 | E02 065 506 | COMPRESSOR RUBBER SET | | 3 | 3 | 3 | 3 | 3RUBBERS/SET |
| 7 | E02 838 661 | STOP VALVE (GAS) | | 1 | 1 | 1 | 1 | φ9.52 |
| 8 | E02 838 662 | STOP VALVE (LIQUID) | | 1 | 1 | 1 | 1 | φ6.35 |
| 9 | E02 838 245 | SERVICE PANEL | | 1 | 1 | 1 | 1 | |
| 10 | E02 838 233 | BACK PANEL | | 1 | 1 | 1 | 1 | |
| 11 | E02 838 640 | EXPANSION VALVE | | 1 | 1 | 1 | 1 | |
| 12 | E02 838 493 | EXPANSION VALVE COIL | LEV | 1 | 1 | 1 | 1 | |
| 13 | E02 838 961 | 4-WAY VALVE | | 1 | 1 | 1 | 1 | |
| | E02 838 293 | SEPARATOR | | 1 | | 1 | | |
| 14 | E02 840 293 | SEPARATOR | | | 1 | | 1 | |
| | E02 838 515 | MOTOR SUPPORT | | 1 | 1 | 1 | 1 | |
| 15 | E02 838 523 | CONDENSER NET | | 1 | 1 | 1 | 1 | |
| 16 | E02 838 297 | TOP PANEL | | 1 | 1 | 1 | 1 | |
| 17 | E02 838 630 | OUTDOOR HEAT EXCHANGER | | 1 | 1 | | | |
| | E02 839 630 | OUTDOOR HEAT EXCHANGER | | | | 1 | 1 | |
| 18 | E02 838 301 | OUTDOOR FAN MOTOR | MF | 1 | 1 | 1 | 1 | RA6V21-□□ |
| 19 | E02 840 526 | DEFROST HEATER | H | | 1 | | 1 | |
| 20 | E02 840 381 | HEATER PROTECTOR | 26H | | 1 | | 1 | |
| 21 | E02 282 937 | CAPILLARY TUBE | | 1 | 1 | 1 | 1 | φ3.0×φ2.0×200 |

MUZ-A09YV -^[E1] MUZ-A12YV -^[E1]
 MUZ-A09YVH -^[E1] MUZ-A12YVH -^[E1]

13-2. OUTDOOR UNIT ELECTRICAL PARTS

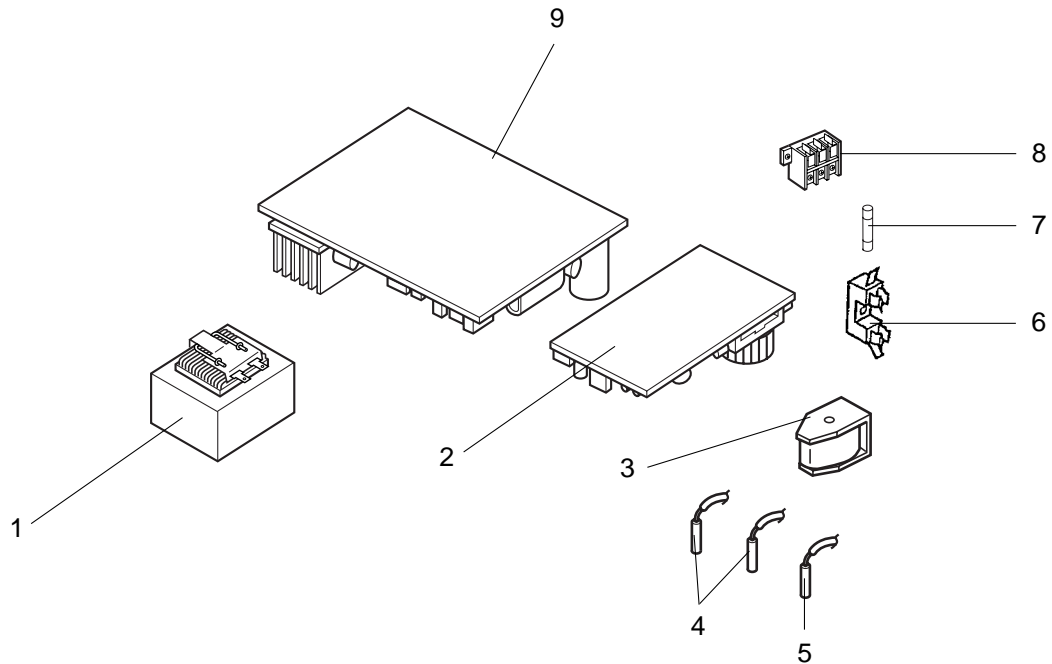


| No. | Part No. | Part Name | Symbol in Wiring Diagram | Q'ty/unit | | | | Remarks |
|-----|-------------|--------------------------------|--------------------------|----------------------------|-----------------------------|----------------------------|-----------------------------|------------------------------|
| | | | | MUZ-A09YV- ^[E1] | MUZ-A09YVH- ^[E1] | MUZ-A12YV- ^[E1] | MUZ-A12YVH- ^[E1] | |
| 1 | E02 838 337 | REACTOR | L61 | 1 | 1 | 1 | 1 | |
| 2 | E02 838 444 | POWER P.C. BOARD | | 1 | | 1 | | |
| | E02 840 444 | POWER P.C. BOARD | | | 1 | | 1 | |
| 3 | E02 838 490 | R.V. COIL | 21S4 | 1 | 1 | 1 | 1 | |
| 4 | E02 838 306 | THERMISTOR SET | RT61,RT62 | 1 | 1 | 1 | 1 | DEFROST, DISCHARGE |
| 5 | E02 838 308 | AMBIENT TEMPERATURE THERMISTOR | RT65 | 1 | 1 | 1 | 1 | |
| 6 | E02 735 241 | FUSE HOLDER | | 1 | 1 | 1 | 1 | |
| 7 | E02 735 382 | FUSE | | 1 | 1 | 1 | 1 | 250V/20A |
| 8 | E02 838 374 | TERMINAL BLOCK | TB | 1 | 1 | 1 | 1 | 3P |
| 9 | E02 838 451 | INVERTER P.C. BOARD | | 1 | 1 | | | Including heat sink and RT64 |
| | E02 839 451 | INVERTER P.C. BOARD | | | | 1 | 1 | Including heat sink and RT64 |

MUZ-A09YV -E1

MUZ-A12YV -E1

13-3. DRAIN SOCKET

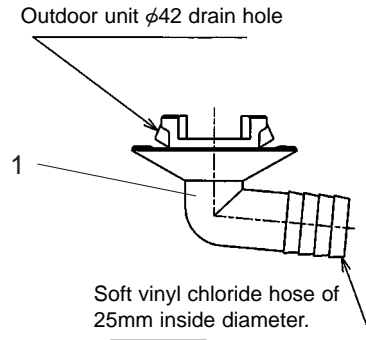

| No. | Parts No. | Parts Name | Symbol in Wiring Diagram | Q'ty/unit | | Remarks |
|-----|-------------|--------------|--------------------------|---------------|---------------|---------|
| | | | | MUZ-A09YV- E1 | MUZ-A12YV- E1 | |
| 1 | E02 838 704 | DRAIN SOCKET | | 1 | 1 | |

 **MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: MITSUBISHI DENKI BLDG., 2-2-3, MARUNOUCHI, CHIYODA-KU, TOKYO100-8310, JAPAN

© Copyright 2004 MITSUBISHI ELECTRIC ENGINEERING CO.,LTD

Distributed in Apr. 2004. No. OB328 REVISED EDITION-A 6

Distributed in Jan. 2004. No. OB328 6

Made in Japan

New publication, effective Apr. 2004

Specifications subject to change without notice.